



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO DWC-054R. You'll find the answers to all your questions on the DAEWOO DWC-054R in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DAEWOO DWC-054R
User guide DAEWOO DWC-054R
Operating instructions DAEWOO DWC-054R
Instructions for use DAEWOO DWC-054R
Instruction manual DAEWOO DWC-054R

PRECAUTIONS FOR PROPER USE OF AIR CONDITIONER

Please observe the following instructions.

1. Operate the Selector Switch to run or stop the unit.
 - Do not use Main Power Switch or Auxiliary Power Switch to operate unit.
2. Do not stick anything into the air outlet or inlet.
 - It is dangerous and it can cause injury or damage.
3. Avoid exposing your body directly to a continuous cool air - flow for long periods.
 - It is not good for your health.
4. Do not pour water on the unit to clean it.
 - It is dangerous and it can cause injury or damage.
 - Never use solvents or harsh chemicals when cleaning the unit.
 - When the air inlet grill and cabinet are dirty, wipe with luke - warm water (below 104°F or 40°C)
5. Avoid placing any obstacles near the inlet or outlet.
 - If the inlet or outlet is blocked with any obstacle, it may cause damage to the unit.
6. Do not run or stop the unit frequently.
 - If you run or stop the unit more than 4-5 times an hour, it can cause damage to the unit.
7. Wait at least 3 minutes before restarting the unit or in the case of power failure.
 - If you turn on the unit within 3 minutes after power off, this can cause damage to the unit.
8. If the air conditioner is operated without an air filter, dust is not removed from the air, and resultant accumulation in the unit may lead to a failure.
 - Do not forget to install the air filter.
9. The air filter should be cleaned at least once every two weeks.
10. When the unit is cleaned, set the Selector Switch at off position.
 - And then unplug the power plug.
11. Never store gasoline or other flammable liquid near the air conditioner.
 - It is very dangerous.
12. Do not force the controls on the front panel too much.
 - It can cause damage the controls and the unit.
13. Set a comfortable temperature.
 - Very low temperature setting considerably increase power consumption.
14. Be careful to keep room temperature comfortable.
 - Avoid continuous direct air flow on you or a sick person while sleeping.
15. Do not remove the plug by pulling the power cord.
 - Damage to the cord and may cause shock hazard.

1



[You're reading an excerpt. Click here to read official DAEWOO DWC-054R user guide](http://yourpdfguides.com/dref/3408307)
<http://yourpdfguides.com/dref/3408307>

Manual abstract:

1. Operate the Selector Switch to run or stop the unit. - Do not use Main Power Switch or Auxiliary Power Switch to operate unit. 2. Do not stick anything into the air outlet or inlet. - It is dangerous and it can cause injury or damage. 3. Avoid exposing your body directly to a continuous cool air - flow for long periods. - It is not good for your health. 4.

Do not pour water on the unit to clean it. - It is dangerous and it can cause injury or damage. Never use solvents or harsh chemicals when cleaning the unit.

When the air inlet grill and cabinet are dirty, wipe with luke - warm water (below 104°F or 40°C) 5. Avoid placing any obstacles near the inlet or outlet.

- If the inlet or outlet is blocked with any obstacle, it may cause damage to the unit. 6. Do not run or stop the unit frequently. - If you run or stop the unit more than 4-5 times an hour, it can cause damage to the unit. 7.

Wait at least 3 minutes before restarting the unit or in the case of power failure. - If you turn on the unit within 3 minutes after power off, this can cause damage to the unit. 8. If the air conditioner is operated without an air filter, dust is not removed from the air, and resultant accumulation in the unit may lead to a failure. - Do not forget to install the air filter. 9. The air filter should be cleaned at least once every two weeks. 10. When the unit is cleaned, set the Selector Switch at off position. - And then unplug the power plug.

11. Never store gasoline or other flammable liquid near the air conditioner. - It is very dangerous. 12. Do not force the controls on the front panel too much. - It can cause damage the controls and the unit. 13. Set a comfortable temperature. @@14. Be careful to keep room temperature comfortable.

@@15. Do not remove the plug by pulling the power cord. @@@@INSTALLATION INSTRUCTIONS ...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

...3~7 · WINDOW REQUIREMENTS · BASIC TOOLS NEEDED · SAFETY INSTRUCTIONS · STEP1-PREPARE COMPONENTS FOR INSTALLATION · STEP2-PREPARE WINDOW FOR INSTALLATION · STEP3-PLACING UNIT IN WINDOW · STEP4- INSTALL SASH BRACKET · STEP5-SECURE WINDOW SHUTTER · STEP6-RECHECK INSTALLATION · STEP7-RECHECK THE ENTIRE INSTALLATION 3. NAMES OF MAJOR COMPONENTS

.....
.....
.....
.....
.....
.....
.....
.....

...8 4. OPERATION INSTRUCTIONS

.....
.....
.....
.....
.....
.....
.....
.....

..9~14 · DISPLAY · REMOTE CONTROL · HOW TO INSERT BATTERIES 5. GENERAL INFORMATION ..

.....
.....
.....
.....
.....
.....
.....
.....

.....15 · CHANGING AIR FLOW DIRECTION · AIR FLOW AROUND UNIT 6.
CARE AND MAINTENANCE

.....
.....

.....
.....
.....

.....
.....
.....

.....16 · AIR FILTER · CLEANING THE AIR CONDITIONER 7. ELECTRICAL REQUIREMENTS .

.....
.....
.....

.....
.....
.....

.....

..17 · ELECTRICAL GROUNDING INSTRUCTIONS. · USE OF EXTENSION CORD 8. BEFORE CALLING FOR SERVICE.

.....
.....

.....
.....
.....

.....
.....
.....

....18 GENERAL SPECIFICATIONS MODEL ITEM POWER SOURCE DIMENSIONS 440(W) x 313(H) x 385(D) mm WEIGHT (NET) 2 45.4 Ibs (20.6 Kg)-Approx. DWC-054R / DWC-063R AC 115V, 60Hz, SINGLE PHASE 17.3(W) x 12.3(H) x 15.

2(D) inch INSTALLATION INSTRUCTIONS · WINDOW REQUIREMENTS These instructions are provided for a standard double hung window or mobile home double hung window installation in windows 21.7in (550mm) to 34.6in (880mm). The upper and lower sash must open sufficiently to allow a clear vertical opening of 12.7in (323mm) from the bottom of the sash to the window stool. 22" TO 34.6" 21.7"TO 36" Select a centrally located window on the side of the room that 12.7" MIN 14 1/2" MIN receives the least direct sunlight. There should be no obstruction to air flow either inside(i.e curtains) or outside (i.e fence, wall or bushes). Read this entire installation manual thoroughly before beginning the installation. Make sure you have the necessary tools and other materials for the job. Study the illustrations in these instructions to become familiar with important details of the installation process.

Read the Use & Care manual to become familiar with the operation of your room air conditioner. IMPORTANT : It is important, both for your personal safety and to avoid possible damage to your home, that you observe the safety instructions that are given following. After installing the unit, re-read these instructions to make sure you have completed each step and all parts are fastened in place for a secure installation. For best results, perform the installation procedure in the order given. Doing so will minimize the time required to install the unit.

· BASIC TOOLS NEEDED · Standard screwdriver · Carpenter's level · Electric drill · Phillips screwdriver · 1/4" hex driver · 1/8" drill bit · Sharp knife · Tape measure 3 · SAFETY INSTRUCTIONS The receptacle should be an individual branch circuit used only for this air conditioner. Be sure the electrical service is adequate for the model air conditioner you have chosen. The complete electrical rating of your air conditioner is stated on the name plate located at the unit's side. Be sure the plug receptacle is close enough for the power cord to reach it. WARNING : An extension cord must not be used with your air conditioner! To minimize shock and fire hazards, proper grounding is important. For your safety and protection, this air conditioner is equipped with a special three-prong grounding plug on the service cord. WARNING : Do not, under any circumstances, cut or remove the grounding prong on the plug. To do so will create a shock hazard. Your air conditioner must be plugged into a properly grounded and polarized three prong receptacle. Do not use an adapter plug.

If the wall receptacle you intend to use will not accept a three-prong plug, or if you are not sure the outlet is adequately grounded or protected by a fuse or circuit breaker, have a qualified electrician install the proper outlet according to the National Electric Code and applicable local code. 4 · Step 1 - Prepare Components For Installation 1. Open the components box for installation 2. Check components for installation as follows. · Sill Bracket (1 piece) · Window Shutter (2 pieces) · Sash Bracket (1 piece) · Window Kit Frame - Left side (1 piece) · Window Kit Frame - Right side (1 piece) · Leveling Screw - M8 x 45 (1 piece) · 1 1/4 inch Screw - M5 x 30 (2 pieces) · 5/8 inch Screw - M4 x 16 (5 pieces) · 5/16 inch Screw - M4 x 8 (6 pieces) · Window Seal A, B (2 pieces) · SCREW TYPE 8 45 1 5 30 2 4 16 5 4 8 6 Window Shutter (2 pieces) Window Seal A (1 piece) Window Seal B (1 piece) Sill Bracket (1 piece) Sash Bracket (1 piece) Window kit Frame Window kit Frame Left side (1 piece) Right side (1 piece) · Step 2 - Prepare Window For Installation WARNING : 1.To reduce the

risk of electric shock, personal injury or death, turn the fan control to the OFF position and unplug the unit from the wall outlet before installing or removing this unit. 2.The window where the air conditioner is to be installed should have enough strength to bear the weight of the air conditioner.



[You're reading an excerpt. Click here to read official DAEWOO
DWC-054R user guide
http://yourpdfguides.com/dref/3408307](http://yourpdfguides.com/dref/3408307)

1. Inspect window track, sash and sill to be sure they are strong enough to hold an air conditioner.

2. Measure width between window frame to be sure instant mount will fit in the window. Instant mount models are designed for windows 21.7in (550mm) to 34.6in (880mm) wide.

3. Mark the center of window sill with a pencil. 4. Insert Screw (Type A) into the sill bracket. 5.

Attach Sill bracket to window sill using Screws (Type B). (The outside edge of window bracket should be center line) 6. Place the carpenter's level on the sill and the outdoor end of Sill Bracket. Adjust Screw (Type A) so that Sill Bracket have a slight tilt by using carpenter's level meter. (about 1.5°) Screw (Type B)

SILL BRACKET OUTER WINDOW SILL about 1.5° CENTER LINE SILL BRACKET Screw (Type A) OUTER WINDOW SILL INNER WINDOW SILL INNER WINDOW SILL 5 0.280.39(710µm) · Step 3 - Placing Unit in Window CAUTION 1. The unit is heavy.

To avoid injury or accident, it is strongly recommended that you have additional help when lifting the unit. 2. Personal injury or property damage may result if unit falls from window. 1. Insert Window Kit Frame into the upper and bottom guides of the unit. 2. Fasten window shutter in the window kit frame with Screws (Type D) in the left side and right side of the unit. 3. Open the window and place the unit in the center of the window sill. WINDOW KIT FRAME PLATE WINDOW TOP (upper guides) WINDOW SHUTTER (bottom guides) Screw (Type D) · Step 4 - Install Sash Bracket CAUTION Do not drill into window frame until window has been inspected to make sure drilling or screw will not damage any locking or lifting mechanism located the frame.

Fasten Sash Bracket with Screw (Type C) to top of indoor window sash or directly into side of window sash or directly into side of window frame. This will prevent the raising of the window from the outside. If you have a hard wood or metal window frame, a 1/8 inch pilot hole may be needed in order to drive the screw. SASH BRACKET WINDOW FRAME WINDOW SASH Screw (Type C) 6 · Step 5 - Secure Window Shutter CAUTION Do not drill into window sash until window has been inspected to make sure drilling or screw will not damage any locking or lifting mechanism located in the frame. WINDOW KIT FRAME To provide a proper seal, pull each expandable side Window Shutter out and up until it is tight against the window frame.

Using the hole in the top and bottom of each Window Kit Frame as a guide, secure Window Kit Frame in window sash and on the window sill. Screw (Type C) WINDOW SASH WINDOW SHUTTER WINDOW FRAME Screw (Type C) INNER WINDOW SILL · Step 6 - Recheck Installation To be sure you have correctly installed your Room Air Conditioner, review the steps and make sure all of the parts are securely fastened in the window as the instructions show. A tight seal is essential. @@The window sash helps keep the unit in the window. Exercise caution when opening the window.

@@@@@@@@@@@@@@@@@MODE SELECT · Everytime you push this button, It is selectes to Low' 3. @@@@Current room temperature is displayed. 2. TURBO' lamp lights. 3. @@TIMER COOLING ENERGY SAVE OFF TIMER TIMER/ CANCEL 1. @@@@Unit is off after timer is over. 3. @@ TIMER' lamp lights. 2.

Set time is displayed. FAN ROOM TEMP · TEMP TURBO DESIRED TEMP · @@(REMOCON ONLY) 3. After a few seconds, display is changed to current room temprature. @@@@3. @@ TIMER' lamp lights. 2. @@TIMER COOLING ENERGY SAVE Push the TIMER/CANCEL' button when unit is off. (REMOCON ONLY) 3.

After a few seconds, display is changed to current room temperature. and ROOM TEMP' lamp lights. 1. L1' or L2' is displayed. SLEEP MODE SLEEP Push the 'SLEEP' button in 'COOLING' mode.

(REMOCON ONLY) 1. SLEEP MODE is changed as follows by pushing "SLEEP" button. (L1;L2;cancel) * L1 Mode The unit is off after 4 hours. The desired Temp is increased 3°C (5.4°F) for 4 hours.

Fan speed is set to LOW'. * L2 MODE The unit works as follow. +1°C ON +1°C 2. ROOM TEMP' and DESIRED TEMP' lamp is off. OFF 2hr 2hr 2hr 2hr 2hr Fan speed is set to LOW'. 2. Set proper desired room temperature, fan speed. 3. This mode can be selected in 'COOLING' mode only. · ROOM TEMPERATURE DISPLAY.

Over 45°C or 100°F 5°C~45°C or 41°F~99°F Below 5°C (41°F) DISPLAY TEMPERATURE 13 · HOW TO INSERT BATTERIES 1 Remove the COVER from the back of the remote controller. · Slide the Cover according to the arrow direction 2 Insert two battaries. · Be sure that the (+) and (-) directions are correct · Be sure that both batteries are new 3 Re-attach the cover. · Slide it back into position ++ · Do not use rechargeable batteries such batteries differ from standard dry cells in shape, dimensions, and performance. · Remove the batteries from the remote controller if the air conditioner is not going to be used for an extended length of time. 14 GENERAL INFORMATION · CHANGING AIR FLOW DIRECTION Air flow deflectors divert air from center flow to left or right. Adjust deflectors for desired air flow pattern. · AIR FLOW AROUND UNIT Check in door grill and outdoor louvers for air flow obstructions. Do not block air flow to and from unit. The outdoor coil should be checked and periodically cleaned for debris that may collect and block unit air flow.

If air flow is obstructed or deflected back into unit, the compressor may cycle on and off rapidly, causing early compressor failure. 15 CARE AND MAINTENANCE CAUTION To avoid death or personal injury due to electrical shock, turn fan control OFF and unplug power cord before cleaning or performing maintenance. After cleaning or performing maintenance, reconnect power. · AIR FILTER Clean the air filter, which removes dust inside the room. It should be washed at least once every week during operation.

1. Remove the Air Filter from the front grill by pulling up. 2. Clean Air Filter with a vacuum cleaner or lukewarm, soapy water. 3.

Shake it when clean to remove moisture completely. Replace it. NOTE A dirty Air Filter reduces air flow and the cooling capacity. Do not operate unit without Air Filter. · CLEANING THE AIR CONDITIONER 1. At least once a year, remove cabinet and thoroughly clean air conditioner. Have the unit inspected by an authorized service man to ensure unit is functioning properly. 2. Wash air conditioner with lukewarm, soapy water as needed. Rinse and dry thoroughly.

3. If using concentrated liquid detergent, dilute in warm water first. 4. Front grill may be wiped off with a cloth dampened in a mild detergent solution. 5. Cabinet may be washed with mild soap or detergent and lukewarm water, then polished with liquid wax for appliances.



[You're reading an excerpt. Click here to read official DAEWOO](http://yourpdfguides.com/dref/3408307)

[DWC-054R user guide](http://yourpdfguides.com/dref/3408307)

<http://yourpdfguides.com/dref/3408307>

6. Condenser and Evaporator coils should be cleaned at the beginning of each cooling season. Use a soft brush or vacuum cleaner to clean them, making sure that the Condenser and Evaporator coils are not damaged. 7.

Do not use abrasive cleaners. These items scratch, crack and discolor surfaces. Room Air-conditioner NOTE To assure continued peak efficiency, condenser coils (weather side of unit) should be checked periodically and cleaned if clogged with soot or dirt from the atmosphere. 16 ELECTRICAL REQUIREMENTS

· ELECTRICAL GROUNDING INSTRUCTIONS This appliance is equipped with a three-prong(grounding) plug for protection against possible shock hazards. If a two-prong wall receptacle is encountered, the customer is required to contact a qualified electrician and have the two-prong wall receptacle replaced with a properly grounded three-prong wall receptacle in accordance with the National Electrical Code.

WARNING : To avoid death, personal injury or property damage due to electrical shock, this unit must be grounded. Do not under any circumstances cut or remove the round grounding prong from the plug. Do not use a two prong adapter. · USE OF EXTENSION CORD Because of potential safety hazards under certain condition, we strongly recommend against the use of an extension cord. However, if you still elect to use an extension cord, it is absolutely necessary that it will be a UL listed 3-wire grounding type appliance extension cord rated has a 3-blade grounding plug and a 3-slot receptacle that will plug into the appliance.

The marked rating of the extension cord should be 125V 13A (Min.). WARNING : To avoid death, personal injury or property damage due to electrical shock, do not use an extension cord or pinch the power cord. Do not remove the warning tag from the power cord. 17 BEFORE CALLING FOR SERVICE When you find something wrong with your room air conditioner, please carefully check the following items. If you are unable to find the cause of trouble, contact your service dealer. Difficulty · Air conditioner does not operate. Possible Cause · No power to unit. Suggested Solution · Confirm power cord is plugged in. · Verify main power switch (main circuit breaker) or fuse of the unit is good.

· Wait 3 to 4 minutes and restart the unit. · Clean air filter. · When blocked by curtains, blinds, or furnitures, etc., the air flow is restricted and cooling performance is affected. · Check with dealer to determine proper unit capacity for application. · Tighten any loose parts. · Provide additional support. · Normal in high humidity. · Stop noise by allowing water to drain from base fan through drain hole. · Place algaecide tablet in base pan · Remove water in base pan through drain hole.

· Water in base pan is picked up by the fan blade and thrown onto the warm outdoor coil where water then evaporates. · Little or no cooling · Compressor lockout on initial plug in. · Dirty air filter · Is there anything blocking the front? · Air conditioner undersized for application. · Noisy unit · Loose parts · Weak building construction. @@@@ Over the counter exchange for units that are initially defective.

Initial defective is described as when the dealer opens the unit and finds that it is inoperative or an individual customer opening a new unit and finding that it is initially defective. This unit may be returned to the factory by the dealer for exchange. Under no circumstances will an individual customer be permitted to return defective unit directly to factory. Exchange must be directly with the dealer. When this unit is returned to dealer, a copy of the purchase evidence stating the date of purchase is to be put in the individual box for dealer's further control with the factory.

MODEL DWC-054R DWC-063R PARTS 1 year LABOR 1 year COMPRESSOR 5 years Note: The warranty service center list is constantly changing with the addition of our current qualified service centers. If there is inadequate or no local service facility, subject individual customer will call DAEWOO on the toll free number 1-800-DAEWOO(1-800-323-9668) to be provided with further informations. ROOM AIR CONDITIONER USE & CARE MANUAL WINDOW TYPE ROOM AIR CONDITIONER MODEL #: DWC-054R DWC-063R UL and CUL listed C R LISTED US Please read carefully and thoroughly this manual before operating the unit. If you still have any difficulties or problems, consult your dealer for help or ELECTRONICS. Please keep this manual well. W1 .



[You're reading an excerpt. Click here to read official DAEWOO](#)

[DWC-054R user guide](#)

<http://yourpdfguides.com/dref/3408307>