



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO DWD-FD1441. You'll find the answers to all your questions on the DAEWOO DWD-FD1441 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DAEWOO DWD-FD1441
User guide DAEWOO DWD-FD1441
Operating instructions DAEWOO DWD-FD1441
Instructions for use DAEWOO DWD-FD1441
Instruction manual DAEWOO DWD-FD1441

DWD-FD1441/1442/1443/1444/1445, 2008.3.31 10:3 AM 페이지 11

DAEWOO
ELECTRONICS

Washing Machine Instruction Manual
DWD-FD1441/1442/1443/1444/1445

INSTRUCTION MANUAL


Economic wash system
Using artificial intelligence, the washer uses minimum energy and water by selecting optimal water level and washing time.

Low noise system
The washer minimizes the washing and spinning noises by sensing the amount of laundry.

Child Lock
The Child Lock system has been used to prevent children from pressing any button to change the program during operation.

Nano-silver sterilization washing Option)
By applying very fine silver particles on essential parts inside, the washer sterilizes up to 99.9% as is done by boiling wash.

Air bubble washing Option)
This is an advanced technology that generates millions of air bubbles inside the drum on washing sequence, and the bubbles dissolve the detergent particles completely and cleanse all the soil in clothes gently and neatly.



CONTENTS	Page
PARTS AND FEATURES	2
WASHER SAFETY	3
INSTALLATION INSTRUCTIONS	4
INLET HOSE CONNECTION	5
ELECTRICAL REQUIREMENTS	6
OPERATING YOUR WASHER	7
THE FUNCTIONS OF THE CONTROL PANEL	9
WASHING PROCEDURE AND PROGRAM SELECTION	10
MAINTENANCE	19
HOW TO CLEAN THE FILTER	20
REMOVING STAINS	21
TROUBLE SHOOTING	22
SPECIFICATION	23

A NOTE TO YOU
Thank you for buying a DAEWOO appliance.
DAEWOO washers are easy to use, save time, and help you manage your home better.
This manual contains valuable information about how to operate and maintain your washer properly and safely.
Please read it carefully.



[You're reading an excerpt. Click here to read official DAEWOO DWD-FD1441 user guide](http://yourpdfguides.com/dref/3408114)
<http://yourpdfguides.com/dref/3408114>

Manual abstract:

CONTENTS Page PARTS AND FEATURES.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

...2 WASHER SAFETY.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....3 INSTALLATION INSTRUCTIONS

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....4 INLET HOSE CONNECTION

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....
...5 ELECTRICAL REQUIREMENTS

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

....6 OPERATING YOUR WASHER

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

...7 THE FUNCTIONS OF THE CONTROL PANEL..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....9 WASHING PROCEDURE AND PROGRAM SELECTION..

.....
.....
.....
.....

.....
.....
.....
.....

.....10 MAINTENANCE ..

.....

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
...19 HOW TO CLEAN THE FILTER ..

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....20 REMOVING STAINS

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

...21 TROUBLE SHOOTING

.....
.....
.....

.....
.....
.....

water tap adapter by pulling down the collar of the hose end. 6 Connect the inlet hose adapter of the hose to the water inlet of the washer by turning it clockwise to be fixed tightly. Raccorclement A Raccorclement B · Please check the rubber packing present inside the inlet hose adapter of the hose. For Screw-Shaped Tap 1 Connect the inlet hose to the water tap by screwing the connector tightly.

2 Connect the connector inlet supplied if necessary. Connector inlet Connector 3 Connect the inlet hose adapter to the water inlet of a washer and turn it to be fixed. Connector Rubber Packing Rubber Packing Hose Connector Hose Connector *Check the packing in the inlet 5 ELECTRICAL REQUIREMENTS
WARNING Electrical shock hazard : Failure to follow these instructions could result in death or serious injury. · Don't earth to a gas pipe. · Don't change the power supply cord plug. · Check with a qualified electrician if you are not sure the washer is properly earthed. · Electrical earth is required on this washer · If it does not fit the outlet, have a proper outlet installed by a qualified electrician. Recommended earthing method C B A For your personal safety, this washer must be earthed. This washer is equipped with a power supply cord 'A' having a earthing plug 'B'.



[You're reading an excerpt. Click here to read official DAEWOO DWD-FD1441 user guide](#)
<http://yourpdfguides.com/dref/3408114>

To minimize possible shock hazard, the cord must be plugged into a mating earthing-type wall receptacle 'C'.

If a mating wall receptacle is not available, it is the personal responsibility and obligation of the customer to have the proper earthed wall receptacle installed by a qualified electrician. Drain system · Never forget to install drain hose before operating your washer. · Open the packing box, and there is a drain hose inside the drum. · Connect the drain hose to the drain outlet at the back side of the washer. · Top of laundry tub must be at least 60cm high and no higher than 100cm from bottom of washer.

· When installing the drain hose to tub(sink), secure it tightly with a string. · Proper securing of the drain hose will protect the floor from damage due to water leakage. · When the drain hose is too long, do not force it back into the washer. This will cause abnormal noise. Level adjustment 1 If the washer is installed on an unsuitable floor, it could make considerable noise, vibrate and cause a malfunction.

6 2 Adjust the level of washer using adjustable legs. · Please check if there is any gap between the four adjustable legs and the floor. · Adjust the level of washer by turning adjustable legs. And make it sure that there is no swaying of washer. · After the adjustment is finished, turn the fixing nuts up tightly so that the washer maintains the adjustment. 3 Make it sure that the washer does not sway when you press down the four corners of the washer's top plate. NOTE There should be no swaying of washer and all the adjustable legs should stick to the floor closely. Fixing Nut adjustable leg OPERATING YOUR WASHER To obtain the best washing results, you must operate your washer properly. This section gives you this important information. Preparing clothes for washing · Close zippers, snaps, and hooks to avoid snagging other items.

Remove pin, buckles, and other hard objects to avoid scratching the washer interior. · Empty pockets and pull them inside out. · Turn down cuffs and turn synthetic knits inside out to avoid pilling. · Tie strings and sashes to avoid tangling. · Treat spots and stains. (See "Removing stains" on page 21) 7 Sorting · Separate heavily soiled items from lightly soiled ones, even if they would normally be washed together. · Separate dark colors from light colors, colorfast items from non-colorfast item. Soil (Heavy, Normal, Light) Color (White, Lights, Darks) Lint (Lint producers, Collectors) Separate clothes according to amount of soil. Separate white clothes from colored clothes. Wash lint producers and lint collectors separately.

Loading · Drop items into washer loosely. Items should move easily through wash water for best cleaning and wrinkle-free results. · Load washer properly and select correct load size setting. Overloading and selecting a setting too small for the wash load can : - Cause poor cleaning - Increase wrinkling - Create excessive lint - Wear out items faster (because of pilling) · Mix large and small items in each load. Load evenly to maintain washer balance.

An unbalanced load can make the washer vibrate during spin. · Reduce wash time when using a small load size setting. Load with only a few small items needs less wash time. · Use a large load size setting to reduce wrinkling with permanent press clothes and some synthetic knits. These items should have more room to move in the water than heavy items.

(towels, j Select the conditions which you want to use by turning the program dial and pressing each button. · Press the Start/Pause button. 3. RESERVED WASHING · Reservation can be made from 2 hours to 12 hours. example) To make reservation to complete washing in 8 hours. - Procedure to press the button. select the program or manual adjust to "8" * Each pressing of the button advances time delay by one hour. · Now the reservation is made. · If you want to check the selected program, press the "Start/Pause" button again. · Preparing washing before starting "Time Delay"; - Turn on the water tap - Load laundry and close the door - Place the detergent and fabric softener in the detergent case.

· To cancel the time delay, press the Power button. 10 4. FUNCTION · Recommended programs according to the laundry type Program Fabric Type First check if laundry is machine washable.(white cotton, linen towel and sheets..) Cotton Colorfast garments (shirts, night dresses, pajamas..) and lightly soiled white cottons (underwear..) Laundry type is the same as Cotton.

Proper Temp. 60°C (95°C) 40°C (Cold, 30°C, 60°C) Option Pre Wash Rinse+ Crease Care Pre Wash Rinse+ Crease Care Pre Wash Rinse+ Crease Care Pre Wash Rinse+ Crease Care Rinse+ Crease Care Rinse+ Crease Care Rinse+ Crease Care Maximum Load Rating Rating Eco 60°C 40°C (Cold, 30°C, 60°C) Cold (30°C, 40°C) Cold (30°C, 40°C) Cold (30°C) 30°C (Cold, 40°C) Rating Synthetic Polyamide, Acrylic, Polyester Delicate laundry easily damaged (silk, curtains..) Machine washable woolens with pure new wool only. "Hand wash" marked delicate and wool laundry Colored laundry which is lightly soiled fast.

Less than 1.5kg Less than 1.0kg Less than 1.0kg Less than 1.0kg Less than 1.

0kg Delicate Wool Hand Wash Quick 30 · Pre Wash : If the laundry is heavily soiled, "Pre Wash" program is recommended. Pre Wash is available in Cotton and Synthetic programs. · Rinse+ : Used to introduce an additional rinse, which may assist in removing traces of detergent residue. · Eco : By selecting Eco function, the water temperature is lowered and washing time is increased. So you can economize your consumption of heating energy. 11 * COTTON PROGRAM Put the laundry in to the drum. Put detergent and softener into the detergent case. Then close the door. @@Softener should be below the 'MAX' level. @@@@Press the Power button.

@@Select the 'Cotton' program using program selection dial. · If you press Start/Hold button after power button without selecting program, the 'Cotton' program is selected as default program. @@ · If you want to change washing temperature, the spin velocity or add wash options (Rinse+, Crease Care), press each button. Press Start/Pause button. · The Door is locked. @@ · 'Cold', 30' °C, 40' °C, 60' °C and 95' °C washing temperatures are selectable with Cotton program. · 'Prewash', 'Rinse+', and 'Crease Care' wash options are selectable with Cotton program. Caution! · If you select washing temperature 95' °C, some cold water is supplied before the drain of main wash. @@Therefore this is not a malfunction.



[You're reading an excerpt. Click here to read official DAEWOO](#)

[DWD-FD1441 user guide](#)

<http://yourpdfguides.com/dref/3408114>

@@Put detergent and softener into the detergent case.

Then close the door. @@Softener should be below the MAX' level. @@@@Press the Power button. @@Select the Eco' program using program selection dial. @@@@Press Start/Pause button.

· The Door is locked. @@@@Put detergent and softener into the detergent case. Then close the door. @@Softener should be below the MAX' level. @@@@Press the Power button.

@@Select the Synthetic' program using program selection dial. @@@@Press Start/Pause button. · The Door is locked. @@@@Put detergent and softener into the detergent case. Then close the door. · Put detergent into the main wash compartment in the detergent case. Softener should be below the MAX' level. @@@@Press the Power button. @@Select the Delicate' program using program selection dial. · Washing temperature Cold', spin 400' rpm and rinse 2' times are selected automatically.

@@Press Start/Pause button. · The Door is locked. @@· Only Cold', 30°C and 40°C washing temperature is selectable with Delicate program. · 1000rpm and 1400rpm of spin velocity is NOT selectable with Delicate program. · Only Rinse+' and Crease Care' wash options are selectable with Delicate program. · The appropriate amount of laundry for Delicate program is below 1.0kg. 15 * WOOL PROGRAM Put the laundry in the drum. Put detergent and softener into the detergent case. Then close the door.

· Put detergent into the main wash compartment in the detergent case. Softener should be below the MAX' level. @@@@Press the Power button. @@Select the Wool' program using program selection dial. · Washing temperature Cold', spin 400' rpm and rinse 2' times are selected automatically.

@@Press Start/Pause button. · The Door is locked. @@· Only Cold', 30°C and 40°C washing temperature is selectable with Wool program. · 1000rpm and 1400rpm of spin velocity is NOT selectable with Hand program in order to protect damage on laundry. · Only Rinse+' and Crease Care' wash options are selectable with Wool program.

· The appropriate amount of laundry for Wool program is below 1.0kg. · Use only special detergent for wool. (Since special neutral detergent for wool creates a lot of bubbles, use appropriate amount). 16 * HAND WASH Put the laundry in the drum. Put detergent and softener into the detergent case. Then close the door. · Put detergent into the main wash compartment in the detergent case. Softener should be below the MAX' level. @@@@Press the Power button.

@@Select the Hand Wash' program using program selection dial. · Washing temperature Cold', spin 400' rpm and rinse 3' times are selected automatically. · If you want to change the washing temperature, spin velocity or add wash options (Rinse+, Crease Care), press each button. Press Start/Pause button. · The Door is locked. @@· Only Cold' and 30' °C washing temperatures are selectable with Hand Wash program. · 1000rpm and 1400rpm of spin velocity is NOT selectable with Hand program. · Only Rinse+' and Crease Care' wash options are selectable with Hand Wash program. · Use Hand Wash program for the laundry that is marked Hand wash' in the care label. 17 * QUICK 30 Put the laundry in the drum.

Put detergent and softener into the detergent case. Then close the door. · Put detergent into the main wash compartment in the detergent case. Softener should be below the MAX' level. @@@@Press the Power button.

@@Select the Quick' program using program selection dial. · Washing temperature 30' °C, spin 800' rpm and rinse 2' times are selected automatically. · If you want to change the washing temperature, spin velocity or add wash options (Rinse+, Crease Care), press each button. Press Start/Pause button. · The Door is locked.

@@· Only Cold', 30' °C and 40' °C washing temperatures are selectable with Quick 30 program. · Only Rinse+' and Crease Care' wash options are selectable with Quick 30 program. * SPIN ONLY 1 Put the laundry in the drum. Then close the door. Press the Power button. · The LED shows only "--" and all Program Lights turn on. Select the spin speed by pressing Spin button. Press the Start/Pause button. · The washing machine will start operating by locking the door. 2 3 4 18 MAINTENANCE Proper care of your washer can extend its life.

This section explains how to care for your washer properly and safely. Cleaning your washer Exterior Wipe up detergent, bleach, and other spills with a soft, damp cloth or sponge as they occur. Occasionally wipe the outside of the washer to keep its looking like new one. Interior Clean interior with 250ml of chlorine bleach mixed with 500ml of detergent. Run washer through a complete cycle. Repeat this process if necessary. Do not put sharp or metal object in your washer, or they can damage the finish. Check all pockets for pins, clips, money, bolts, nuts, etc. Do not lay these objects in your washer after emptying pockets. Winter storage or moving care Install and store your washer where it will not freeze.

Because some water may stay in the hoses, freezing can damage your washer. If you store or move your washer during freezing weather, winterize it. To winterize washer · Turn off water faucet. · Disconnect and drain water inlet hoses. · Run washer on a drain and spin setting (see page 10) for 1 minute. · Unplug the power supply cord. To use washer again · Flush water pipes and hoses. · Reconnect water inlet hoses. · Turn on water faucet. · Reconnect power supply cord.

Non-use or vacation care Operate your washer only when you are at home. If you are on vacation or don't use your washer for an extended period of time, you should: · Unplug the power supply cord or turn off electrical power to the washer. · Turn off the water supplier to the washer. This helps avoid accidental flooding (due to a water pressure surge) while you are away. 19 HOW TO CLEAN THE FILTER Cleaning the water inlet filter · Clean the filter when water leaks from the water inlet. 1 Pull the power plug out before cleaning it. 2 Turn off the water supply to the washer and separate the inlet hose. 3 Pull the inlet filter out. 4 Remove the dirt from the inlet filter with a brush. Cleaning the drain filter · This drain filter is used to screen the foreign stuffs such as threads, coins, pins, buttons etc.

· If the drain filter is not cleaned at proper time(every 10 times of use), drain problem could be caused. CAUTION : Be careful when draining if the water is hot. 1. Open the lower cover(1) by using a coin.



[You're reading an excerpt. Click here to read official DAEWOO DWD-FD1441 user guide](http://yourpdfguides.com/dref/3408114)
<http://yourpdfguides.com/dref/3408114>

Turn the cap hose(2) to pull out the hose. Pull out the hose maximally. (About 13~14cm.) 100 2. Unplug the cap hose(2), allowing 3. Remove any foreign material the water to flow out. At this time from the pump filter(3). After use a vessel to prevent water cleaning, turn the pump filter flowing on to the floor. When water clockwise and insert the cap does not flow any more, turn the hose(2) to the original place. pump filter(3) open to the left. @@@@ @20 REMOVING STAINS Stained, heavily-soiled, or greasy items may need to be prewashed or soaked for best results. Soaking helps remove protein-type stains like blood, milk or grass. Prewashing helps loosen soil before washing. Stain removal rules · Use warm water for soaking or prewashing stained laundry. Hot water can set stains.

· Most stains are easier to remove when they are fresh. · Before treating any stain, find out what kind of stain it is, how old the stain is, what kind of fabric it is, and whether the fabric is colorfast. (Check the care label) · Washing and drying can set some stains. · Start with cold or warm water. Hot water can set some stains. · When bleach is recommended, use a bleach that is safe for the fabric. · Put the stained area face down on a paper towel or white cloth. Apply the stain remover to the back of the stain. This forces the stain off fabric instead of through it. Stain removal guide STAIN Blood Chewing gum Cocoa, Chocolate Coffee Cream/Milk Ice cream Deodorant Egg Fabric/Softener Fruit stains Grass Grease and oil Iron or rust Lipstick Mildew Mud Paint-oil based Paint-water based Scorch marks TO REMOVE Rinse immediately in COLD water.

If stain remains, soak in cold water with an enzyme prewash. Use ice in plastic bag to harden the gum. Scrape off what you can and the sponge with white spirits. Sponge with COLD water and soak in an enzyme prewash. If stains persist, rub in a little detergent and rinse in cold water. Blot up quickly and rinse out in COLD water. Rub in a little detergent and wash in the maximum temperature allowed for the fabric type. Rinse in COLD water and wash normally. If stain is still apparent, sponge with white spirits. Rub affected area with white vinegar and then rinse out in COLD water.

Sponge with white spirits. Treat stiffened areas with enzyme prewash. Soak in a COLD enzyme prewash, rinse and wash normally. Rub affected area with bar soap and wash normally. Treat as soon as possible by sponging with COLD water.

Rub a little detergent on the stain and wash normally. Sponge with white spirits. Rub in an enzyme prewash and wash as normally. Lay the affected area face down on an absorbent cloth and work from the back. Sponge with white spirits or dry cleaning fluid.

Wash normally. Apply lemon juice and salt and place in the sun. Wash normally. Sponge with white methylated spirits and wash normally. Wash in WARM water and detergent. Moisten area with lemon juice, dry in the sun and wash normally. If stain persists and the fabric allows, use a bleach. Brush off any dry mud. Rinse in cold water. If stain persists rub in a little detergent and wash normally.

Scrape off any fresh paint and sponge with a non flammable dry cleaning fluid and wash normally. Treat while still wet, rinse in WARM water and wash normally. Dampen a cloth with hydrogen peroxide, lay it over the affected area and press with a fairly hot iron. 21 TROUBLE SHOOTING Most problems are easily solved if you understand the cause. Check the following list for problem before calling for service. If the error mode such as IE, OE, UE were displayed on the control part, in order to solve these problem, first turn off the power of the washing machine and then turn on the power pressing Power button. If PFE error mode was displayed on the control part, in order to solve this problem, first turn off the power of the washing machine, second turn on the power pressing Power button, third press SPIN button and last press Start/Pause button. PROBLEM · The washer will not operate at all. CHECK POINT · Is there a power failure? · Is the power cord correctly connected to an electric outlet? · Did you turn on the power? · Did you press Start/Pause button? · Is there correct amount of laundry in the washer? · Did you connect the inlet hose and open the water tap? · Is the inlet hose or the water tap frozen? · Is the water supply shut off? · Is there any foreign matter blocking up the inlet hose filter? · Is the drain hose frozen or blocked up by dirt? · Is the drain hose kinked or deformed? · Is the end of the drain hose immersed in water? · Is there excessive dirt inside the drain filter? · Is the clothes in the drum collected on one side? · Is the washer installed on an uneven floor or is the vibration serious? · Is the door open? (The lamp " " will light up in this case.) · Is the filter of the drain pump clogged? · Is the drain pump operated? · Did you use the proper amount of detergent? · Is the drain hose placed higher than 1m above floor? · Water is not supplied Error display · The washer will not drain Error display · The washer will not spin Error display · The washer will stop during spinning · Spinning is insufficient. Error display · Vibrating and too noisy · Is the washer installed on an uneven floor? · Have all the transit bolts removed? These cases are not malfunctions; · The sound "wing" heard during water supply is the operating sound made by the water inlet valve. 22 SPECIFICATION

MODEL Dimension (mm) Maximum mass of textile (kg) Unit Weight (kg) Standard Water Consumption Spin Speed (RPM) Operating Water Pressure DWD-FD1441/1442/1443/1444/1445 595 x 540 x 850 (W x D x H) 7.0 58(Net) / 62(Gross) 56.1 l 400/800/1000/1400 0.

0.3MPa ~ 0.8MPa (0.3kgf/cm² ~ 8kgf/cm²) WIRING DIAGRAM (VOLTAGE OPTION) (VOLTAGE OPTION) (VOLTAGE OPTION) 23 ABOUT THIS MANUAL VISION CREATIVE, INC. .



[You're reading an excerpt. Click here to read official DAEWOO](#)

[DWD-FD1441 user guide](#)

<http://yourpdfguides.com/dref/3408114>