



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO DWD-M8021. You'll find the answers to all your questions on the DAEWOO DWD-M8021 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DAEWOO DWD-M8021  
User guide DAEWOO DWD-M8021  
Operating instructions DAEWOO DWD-M8021  
Instructions for use DAEWOO DWD-M8021  
Instruction manual DAEWOO DWD-M8021

DW-D-M8021/M8022/M8023 2007.5.14 21 PM 499 A1

DAEWOO ELECTRONICS DE

## Washing Machine Instruction Manual

DWD-M8021/ DWD-M8022/ DWD-M8023


INSTRUCTION MANUAL

**Economic washing system**  
The washing machine determines the water level and washing time automatically by sensing the amount of laundry and water temperature in order to minimize energy and water consumption.

**Low noise system**  
The washing machine minimizes the spinning noise level by sensing the amount of unbalance of laundry.

**Nano-silver sterilization washing (Option)**  
By applying very fine silver particles on essential parts inside, the washer sterilizes up to 99.9% as is done by boiling wash.

**Air bubble washing (Option)**  
This is an advanced technology that generates millions of air bubbles inside the drum on washing sequence, and the bubbles dissolve the detergent particles completely and cleanse all the soil in clothes gently and neatly.



CONTENTS	Page
PARTS AND FEATURES .....	2
WASHER SAFETY .....	3
INSTALLATION INSTRUCTIONS .....	4
ELECTRICAL REQUIREMENTS .....	6
OPERATING YOUR WASHER .....	6
THE FUNCTIONS OF THE CONTROL PANEL .....	8
PROGRAMS AND FUNCTIONS .....	9
WASHING PROCEDURE AND PROGRAM SELECTION .....	10
MAINTENANCE .....	12
HOW TO CLEAN THE FILTER .....	13
REMOVING STAINS .....	14
TROUBLE SHOOTING .....	15
SPECIFICATION .....	16

**A NOTE TO YOU**  
Thank you for buying a DAEWOO appliance.  
DAEWOO washers are easy to use, save time, and help you manage your home better.  
This manual contains valuable information about how to operate and maintain your washer properly and safely.  
Please read it carefully.



[You're reading an excerpt. Click here to read official DAEWOO DWD-M8021 user guide](http://yourpdfguides.com/dref/3408162)  
<http://yourpdfguides.com/dref/3408162>



.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*.6 OPERATING YOUR WASHER .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.....6 THE FUNCTIONS OF THE CONTROL PANEL.....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*....8 PROGRAMS AND FUNCTIONS .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.....9 WASHING PROCEDURE AND PROGRAM SELECTION....*

.....  
.....  
.....

.....  
.....  
.....





and no higher than 100cm from bottom of washer. · When installing the drain hose to tub(sink), secure it tightly with a string. · Proper securing of the drain hose will protect the floor from damage due to water leakage. · When the drain hose is too long, do not force it back into the washer. This will cause abnormal noise. Level adjustment 1 If the washer is installed on an unsuitable floor, it could make considerable noise, vibrate and cause a malfunction. 2 Adjust the level of washer using adjustable legs.

· Please check if there is any gap between the four adjustable legs and the floor. · Adjust the level of washer by turning adjustable legs. And make it sure that there is no swaying of washer. · After the adjustment is finished, turn the fixing nuts up tightly so that the washer maintains the adjustment. @@@@ · Don't earth to a gas pipe. · Don't change the power supply cord plug. @@@@ @@@@ This section gives you this important information. @@@@ · Empty pockets and pull them inside out. @@ · Tie strings and sashes to avoid tangling. · Treat spots and stains.

@@@@@ Separate white clothes from colored clothes. Wash lint producers and lint collectors separately. Loading · Drop items into washer loosely.



[You're reading an excerpt. Click here to read official DAEWOO](#)

[DWD-M8021 user guide](#)

<http://yourpdfguides.com/dref/3408162>

@@ · Load washer properly and select correct load size setting. @@ Load evenly to maintain washer balance.

An unbalanced load can make the washer vibrate during spin. · Reduce wash time when using a small load size setting. Load with only a few small items needs less wash time. @@@@ · Do not exceed the maximum fill line. @@ · Do not open the detergent case when water is supplied.

@@@@@ In addition to, this will deteriorate the washing and rinse performance. · If too much detergent used, it can occur that the detergent directly falls down to the inside cavity. In this c the indicator light of Start/Hold button is not twinkle but on. · Turn the program selector to OFF and reselect the desired program by using the program selector. · If required, select the option(s). And press the Start/Hold button. The newly selected program starts Using Time delay Firstly, you select the desired program and option(s). · Pressing the "Time delay" button, select the delayed time. · Press the "Start/Hold" button. The indicator light of "Start/Hold" is off and the indicator light corresponding to the selected time is on.

Canceling Time delay · Press the "Start/Hold" button. (Then the indicator light of "Start/Hold" is on.) · Turn the program selector to OFF. After washing When the washing is complete, the indicator light of Start/Hold button is not twinkle but on. · Turn the program selector to OFF . 11 MAINTENANCE Proper care of your washer can extend its life. This section explains how to care for your washer properly and safely. Cleaning your washer Exterior Wipe up detergent, bleach, and other spills with a soft, damp cloth or sponge as they occur. Occasionally wipe the outside of the washer to keep its looking like new one. Interior Clean interior with 250ml of chlorine bleach mixed with 500ml of detergent.

Run washer through a complete cycle. Repeat this process if necessary. Do not put sharp or metal object in your washer, or they can damage the finish. Check all pockets for pins, clips, money, bolts, nuts, etc. Do not lay these objects in your washer after emptying pockets.

Winter storage or moving care Install and store your washer where it will not freeze. Because some water may stay in the hoses, freezing can damage your washer. If you store or move your washer during freezing weather, winterize it. To winterize washer · Turn off the water tap. · Disconnect inlet hoses and drain the water of inlet hoses.

· Run the washer on the drain and spin cycle setting. · Unplug the power supply cord. To use washer again · Flush water pipes and hoses. · Reconnect water inlet hoses. · Turn on water faucet. · Reconnect power supply cord. Non-use or vacation care Operate your washer only when you are at home. If you are on vacation or don't use your washer for an extended period of time, you should: · Unplug the power supply cord or turn off electrical power to the washer. · Turn off the water supplier to the washer. This helps avoid accidental flooding (due to a water pressure surge) while you are away.

12 HOW TO CLEAN THE FILTER Cleaning the water inlet filter · Clean the filter when water leaks from the water inlet. 1 Turn off the water tap. 2 Separate the inlet hose. 3 Pull out the inlet filter. Clean the inlet filter with the brush 4 Connect the inlet hose Cleaning the drain filter · This drain filter is used to screen the foreign stuffs such as threads, coins, pins, buttons etc.. · If the drain filter is not cleaned at proper time(every 10 times of use), drain problem could be caused. CAUTION : Be careful when draining if the water is hot. 1. Open the cover-pump(1) by using coin.

Separate the cover-pump(1) from the washing machine. 2. Install the cover-pump(1) to the lower frame(2). Open the pump-filter(3) slowly and allow the remaining water to flow into a suitable container. 3 1 2 1 3.

Remove foreign objects from the pump-filter(3) and clean the interior. Close the pump-filter(3) and replace the cover-pump(1). 1 3 Cleaning the detergent case · In case of residual detergents or fabric softeners have accumulated ; - it should be cleaned with a jet of running water. - If necessary, it can be removed completely from the washing machine. Push point 1 Pull-out 2 Push and pull again · Detergents can be also accumulate the inside cavity.

In this case, the inside cavity should be cleaned with a brush. · After cleaning, replace the detergent case and run Rinse cycle without laundry. 13 REMOVING STAINS Stained, heavily-soiled, or greasy items may need to be prewashed or soaked for best results. Soaking helps remove protein-type stains like blood, milk or grass. Prewashing helps loosen soil before washing. Stain removal rules · Use warm water for soaking or prewashing stained laundry. Hot water can set stains. · Most stains are easier to remove when they are fresh. · Before treating any stain, find out what kind of stain it is, how old the stain is, what kind of fabric it is, and whether the fabric is colorfast. (Check the care label) · Washing and drying can set some stains.

· Start with cold or warm water. Hot water can set some stains. · When bleach is recommended, use a bleach that is safe for the fabric. · Put the stained area face down on a paper towel or white cloth. Apply the stain remover to the back of the stain. This forces the stain off fabric instead of through it. Stain removal guide STAIN Blood Chewing gum Cocoa, Chocolate Coffee Cream/Milk Ice cream Deodorant Egg Fabric/Softener Fruit stains Grass Grease and oil Iron or rust Lipstick Mildew Mud Paint-oil based Paint-water based Scorch marks TO REMOVE Rinse immediately in COLD water. If stain remains, soak in cold water with an enzyme prewash. Use ice in plastic bag to harden the gum. Scrape off what you can and the sponge with white spirits.

Sponge with COLD water and soak in an enzyme prewash. If stains persist, rub in a little detergent and rinse in cold water. Blot up quickly and rinse out in COLD water. @@ Rinse in COLD water and wash normally. If stain is still apparent, sponge with white spirits.

@@Sponge with white spirits. Treat stiffened areas with enzyme prewash. Soak in a COLD enzyme prewash, rinse and wash normally. Rub affected area with bar soap and wash normally. Treat as soon as possible by sponging with COLD water.

Rub a little detergent on the stain and wash normally. Sponge with white spirits. Rub in an enzyme prewash and wash as normally. @@Sponge with white spirits or dry cleaning fluid. Wash normally. Apply lemon juice and salt and place in the sun. Wash normally. Sponge with white methylated spirits and wash normally. Wash in WARM water and detergent. Moisten area with lemon juice, dry in the sun and wash normally.

If stain persists and the fabric allows, use a bleach.



[You're reading an excerpt. Click here to read official DAEWOO](http://yourpdfguides.com/dref/3408162)

[DWD-M8021 user guide](http://yourpdfguides.com/dref/3408162)

<http://yourpdfguides.com/dref/3408162>

Brush off any dry mud. Rinse in cold water. If stain persists rub in a little detergent and wash normally. @@Treat while still wet, rinse in WARM water and wash normally. Dampen a cloth with hydrogen peroxide, lay it over the affected area and press with a fairly hot iron. 14 TROUBLE SHOOTING Most problems are easily solved if you understand the cause. Check the following list for problem before calling for service. Problem Cause Insert plug tightly. An interrupted program will be resumed when the power return.

Check whether laundry is trapped in door. Close the loading door. (a click should be heard) Select the desired program. Press the Start/hold button. Turn the water tap on.

Straighten the inlet hose. Clean the water inlet filter. Straighten and clean the drain hose. Clean the pump filter Add the laundry to balance. And repeat the Spin cycle.

Rearrange the laundry. And repeat the Spin cycle. If articles of heavy clothing (e.g. bath robe) are loaded, washing machine may skip or stop the spin cycle. Place the drain hose under 1m above the floor. Repeat the Rinse cycle. Remove the transit bolts Reinstall washing machine on even floor. Adjust the level of washing machine using adjustable legs. Solution Program dose not start.

Plug is loose or not plugged in. Power failure. Loading door is not closed. Program is not selected. Start/hold button is not pressed. Water dose not enter the washing machine. Water tap is not turned on. Inlet hose is kinked or folded. Filters is blocked in water inlet filter. Washing machine is not drain.

Washing machine is not spin. Drain hose is kinked or clogged. Pump filter is clogged. The amount of laundry is too small. The laundry is unbalanced.

Spin result is unsatisfactory. Foam come out of the detergent case. Serious noise and vibration Drain hose is placed over 1m above the floor. Too much detergent or unsuitable detergent used. Transit bolts are not removed.

Washing machine is installed on uneven floor. Washing machine is not leveled. 15 SPECIFICATION MODEL Dimension (mm) Maximum mass of textile (kg) Unit Weight (kg) Standard Water Consumption Spin Speed (RPM) Operating Water Pressure DWD-M8021/DWD-M8022/DWD-M8023 595x440x850 (WxDxH) 5.5 43(Net)/46(Gross) 42 l 800 0.03MPa ~ 0.8MPa (0.3kgf/cm<sup>2</sup> ~ 8kgf/cm<sup>2</sup>) 16 ABOUT THIS MANUAL VISION CREATIVE, INC. .



[You're reading an excerpt. Click here to read official DAEWOO](#)

[DWD-M8021 user guide](#)

<http://yourpdfguides.com/dref/3408162>