



# Your PDF Guides


You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO DWF-1098PS. You'll find the answers to all your questions on the DAEWOO DWF-1098PS in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual DAEWOO DWF-1098PS**  
**User guide DAEWOO DWF-1098PS**  
**Operating instructions DAEWOO DWF-1098PS**  
**Instructions for use DAEWOO DWF-1098PS**  
**Instruction manual DAEWOO DWF-1098PS**

## PART AND FEATURES

The parts and features of your washer are illustrated on this page. Become familiar with all parts and features before using your washer.

**NOTE**  
• The drawing in this book may vary from your washer model. They are designed to show the different features of all models covered by this book. Your model may not include all features.

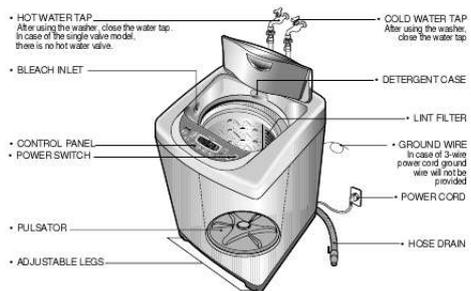

## ACCESSORIES

DRYTRN (OPTION)	COVER UNDER (OPTION)	WATER TAP ADAPTER	INLET HOSE
HOSE DRAIN (OPTION)	HOSE DRAIN CLAMP	GUIDE DRAIN HOSE (OPTION)	CONNECTOR INLET (OPTION)



[You're reading an excerpt. Click here to read official DAEWOO DWF-1098PS user guide](http://yourpdfguides.com/dref/3408167)  
<http://yourpdfguides.com/dref/3408167>

**Manual abstract:**

Become familiar with all parts and features before using your washer. NOTE · The drawing in this book may vary from, your washer model. They are designed to show the different features of all models covered by this book, Your model may not include all features. · HOT WATER TAP After using the washer, close the water tap. In case of the single valve model, there is no hot water valve. · BLEACH INLET · COLD WATER TAP After using the washer, close the water tap · DETERGENT CASE · LINT FILTER Air power dkd kfd kldld = ldkffm fndlssd · CONTROL PANEL · POWER SWITCH ds ° · GROUND WIRE In case of 3-wire power cord ground wire will not be provided · POWER CORD · PULSATOR · HOSE DRAIN · ADJUSTABLE LEGS ACCESSORIES DRYTEN (OPTION) COVER UNDER (OPTION) WATER TAP ADAPTER INLET HOSE U P HOSE DRAIN (OPTION) HOSE DRAIN CLAMP GUIDE DRAIN HOSE(OPTION) CONNECTOR INLET(OPTION) 2 WASHER SAFETY Save these instructions Your safety is important to us. To reduce the risk of fire, electrical shock, or injury when using your washer follow basic precautions including the following. Read all instructions before using your washer · Flammable fluids (dry-cleaning solvents, kerosene, gasoline, etc.) should not be used or stored in or near your washer. Do not add flammable fluids to you wash water.

· These substances give off vapors that can create a fire hazard or explosion. · Do not allow children to operate, play with, or crawl on or inside your washer. Supervise children closely when your washer is used near them. · After starting a cycle, do not reach into the spin basket unless all motion stops. · Do not tamper with the controls.

Please ... · Have only a qualified person install, repair, or replace parts on washer. · Maintain washer properly.

@@@ These items may contain some oil after laundering. @@ · Do not use chlorine bleach and ammonia or acid (Such as vinegar or rust remover) in the same wash. Hazardous fumes can form. · Unplug power supply cord before attempting to service your washer. · Do not machine wash fiberglass materials. Small particles can stick to fabrics washed in following loads and cause skin irritation. · Do not use hot water of coach temperature is over 50;£ (120;£ C F). It can cause a deformation of plastic parts. · Do not spray water on the control panel and back cover of the washer. It can cause a fire or an electric shock.

3 INSTALLATION INSTRUCTIONS Location of washer Check location where washer will be installed. Make sure you have everything necessary for correct installation. Proper installation is your responsibility. · Do not place or store your washer below 0°C (32°F) to avoid any damage from freezing. · Install the washer on the horizontal solid floor. C Air power dkd kfd kldld = ldkffm fndlssd ds ° B A UP DOWN If the washer is installed on an unsuitable floor, it could make considerable noise and vibrate and could cause a malfunction. If washer is not level, adjust the front legs(A) up or down for horizontal setting. · Earthed electrical outlet(B) is required with 20cm of bottom back of washer cabinet. · Hot and cold water faucets (C) must be within 1M of the upper back of the washer cabinet and provide water pressure 0.3kgf/cm<sup>2</sup>-8kgf/cm<sup>2</sup> Drain system Never forget to install drain hose before operating your washer. The packing box is opened, there are a drain hose, and a hose guide in the washer.

Non-Pump Model · Connect the drain hose to the drain outlet at the back side of the washer, and fasten it tightly with the clamp attached. Pump Model · Connect the drain hose to the drain outlet at the back side of the washing machine, and fasten it tightly with the clamp supplied. Hose clamp Drain hose Drain hose Drain Outlet Hose Clamp NOTES · The openings must not be obstructed by carpeting when the washing machine is installed on a carpeted floor. 4 Non-Pump Model ! In case that it goes over a door sill. Don't let the height of the drain hose exceed 20cm from the bottom of washer.

@ In case of extending the drain hose. Don't let the total length exceed 3m # Be careful that the end of the drain hose is not immersed in water 3m 20Cm Pump Model Laundry tub drain system · Top of tub must be at least 86cm (34inches) high and no higher than 130cm from bottom of washer (A) Standpipe drain system · Needs a 3cm minimum diameter standpipe with minimum carry away capacity of 30liters per minute. · Top of tub must be at least 86cm (34inches) high and no higher than 130cm from bottom of washer (B) B A ELECTRICAL REQUIREMENTS WARNING electrical shock hazard: failure to follow these instructions could result in death or serious injury. · Don't earth to a gas pipe · Don't change the power supply cord plug. · Check with a qualified electrician if you are not sure the washer is properly earthed.

· Electrical earth is required on this washer · If it does not fit the outlet, have a proper outlet installed by a qualified electrician. Recommended earthing method C B A For your personal safety, this washer must be earthed. This washer is equipped with a power supply cord (A) having a earthing plug (B). To minimize possible shock hazard, the cord must be plugged into a mating earthing-type wall receptacle (C). If a mating wall receptacle is not available, it is the personal responsibility and obligation of the customer to have the proper earthed wall receptacle installed by a qualified electrician. 5 INLET HOSE CONNECTION Be careful not to confuse hot water inlet and cold water inlet. In using only one water tap or in case of attached one water inlet valve, connect the inlet hose to the cold water inlet valve. For Ordinary Tap ! Pull down the collar of the inlet hose to separate it from the water tap adapter. @ Loosen the four screws properly in fitting into water tap. # Fit the water tap adapter into the water tap tap and tighten the four screws evenly while pushing up the adapter so that the rubber packing can stick to the water tap tightly.

TAPE \$ Remove the tape, and screw connector B into connect A tightly. % Connect the inlet hose to the water tap adapter by pulling down the collar of the hose end. ^ Connect the inlet hose adapter of the hose to the water inlet of the washer by turning it clockwise to be fixed tightly. Connector A Connector B · Please check the rubber packing inside the inlet hose adapter of the hose. For Screw-Shaped Tap ! Connect the inlet hose to the water tap by screwing the connector tightly. @ Connect the connector inlet supplied if necessary. # Insert the inlet hose adapter into the water inlet of a washer and turn it to be fixed.



[You're reading an excerpt. Click here to read official DAEWOO](#)

[DWF-1098PS user guide](#)

<http://yourpdfguides.com/dref/3408167>

Connector Rubber Packing Connector inlet Connector Rubber Packing Hose Connector Hose Connector N Assert the packing in the inlet 6 OPERATING YOUR WASHER To obtain the best washing results, you must operate your washer properly. This section give you this important information. Preparing clothes for washing · Close zippers, snaps, and hooks to avoid snagging other items.

Remove pins, buckles, and other hard objects to avoid scratching the washer interior. · Empty pockets and turn them inside out. · Turn down cuffs and turn synthetic knits out to avoid pilling. · Tie strings and sashes so they will not tangle. · Treat spots and stains.

(see "Removing stains" on page) Sorting · Separate heavily soiled items from, lightly soiled ones, even if they would normally be washed together. · Separate dark colors from light colors, colorfast items from non-colorfast item. Loading · Drop items into washer loosely. Items should move easily through wash water for best cleaning and wrinkle-free results. · Load washer properly and select correct load size setting.

Overloading and selecting a setting too small for the wash load can: - cause poor cleaning - increase wrinkling - create excessive lint - wear out items faster (because of pilling) · Mix large and small items in each load. Load evenly to maintain washer balance. An off balance load can make the washer vibrate during spin. · Reduce wash time when using a small load size setting. Loads with only a few small items need less wash time. · Use a large load size setting to reduce wrinkling with permanent press clothes and some synthetic knits. @HOUR LE UE Control panel has micom sensor. @@@@ · It can be used to choose water temperature to be supplied. · As the button is pressed, it will be repeated. @@@@ · As the button is pressed, you will see the repeated.

@ · As the button is pressed, it will repeat. @ · It can be used to change spin time. · As the button is pressed, it will repeat.

@@@@@ Procedure to press the button; POWER START/HOLD 2. @ · Do not wash general-electric blanket absolutely.

@@@@ Procedure of press the button; POWER COURSE adjust to "ECONOMY&qare for your washer properly and safely. Cleaning your washer Exterior Wipe up detergent, bleach, and other spills with a soft, damp cloth or sponge as they occur. @@@@ Run washer through a complete cycle. @ Check all pockets for pins, clips, money, bolts, nuts, etc. Do not lay these objects on your washer after emptying pockets.

Winter storage or moving care Install and store your washer where it will not freeze. Because some water may stay in the hoses, freezing can damage your washer. If storing or moving your washer during freezing weather, winterize it. To winterize washer · Turn off water faucet. · Disconnect and drain water inlet hoses · Run washer on a drain and spin setting (see page 10) for 1 minute.

· Unplug the power supply cord. To use washer again · Flush water pipes and hoses. · Recombination water inlet hoses. · Turn on water faucet. · Recombination power supply cord.

Non-use or vacation care Operate your washer only when you are at home. If will be on vacation or not using your washer for an extended period of time, you should: · Unplug the power supply cord or turn off electrical power to the washer. · Turn off the water supply to the washer. This helps avoid accidental flooding (due to a water pressure surge) while you are away. 12 HOW TO CLEAN THE FILTER Cleaning the Lint Filter ! Pull the Fiter frame upward. @ Turn the lint filter inside out, wash to the lint off with water # Return the filter as it was, and insert the filter frame into the slot Lint Filter Filter Frame Cleaning the water inlet filter · Clean the filter when water leaks from, the water inlet. ! Pull the power plug out before cleaning it. @ Turn off the water supply to the washer and sperate the inlet hose. # Pull the inlet filter out. \$ Remove the dirt from the inlet filter with a brush.

Cleaning the drain filter · In case "Pump-Model" drain hose, this filter's equipped at the back side of washer. · This drain filter is to screen the foreign stuffs such as threads, coins, pins, buttons etc ... · If the drain filter is not cleaned at proper time (every 10 times of use), Drain problem could be caused. see page !

Put down the remained water in the hose. And put a container under the filter to collect water. @ Turn the cap counter clockwise. # Pull out the filter assembly off the case of the main body. FILTER CASE CAP FILTER CONTAINER CAP \$ Clean the drain filter removing the foreign stuffs.

CAP % Put in the filter along the guiding prominence of the case. Please note the left position of the filter adjusting the groove to CASE the guide rib. FILTER CAP GUIDE RIB SUIT ^ Turn the cap clockwise tightly. CAP 13 REMOVING STAINS Stained, heavily-soiled, or greasy items may need to be prewashed or soaked for best results. Soaking helps remove protein-type stains like blood, milk, or grass.

Prewashing helps loosen soil before washing. Stain removal rules · Use warm water for soaking or prewashing stained laundry. Hot water can set stains. · Most stains are easier to remove when they are fresh. Old or set stains may not coconut · Before treating any stain, find out what kind of stain it is, how old the stain is, what kind of fabric it is, and if the fabric is colorfast.

(Check the care label) · Washing and drying can set some stains. · Start with cold or warm water, hot water can set some stain. · When bleach is recommended, use a bleach that is safe for the fabric. · Put the stained area face down on a paper towel or white cloth. Apply the stain remover to the back of the stain. This forces the stain off fabric instead of through it. Stain removal guide STAIN Blood Chewing gum Cocoa, Chocolate Coffee Cream/Milk Ice cream Deodorant Egg Fabric/Softener Fruit stains Grass Grease and oil Iron or rust Lipstick Mildew Mud Paint-oil based Paint-water based Scorch marks TO REMOVE Rinse immediately in COLD water. If stain remains, soak in cold water with an enzyme prewash. Use ice in plastic bag to harden the gum. Scrape off what you can and then sponge with white spirits.

Sponge with COLD water and soak in an enzyme prewash. If stains persist, rub in a little detergent and rinse in cold water. Blot up quickly and rinse out in COLD water. Rub in a little detergent and wash in the maximum temperature allowed for the fabric type. Rinse in COLD water and wash normally. If stain is still apparent, sponge with white spirits. Rub affected area with white vinegar and then rinse under running COLD water. Sponge with white spirits. Treat stiffened areas with enzyme prewash Soak in a COLD enzyme prewash, rinse and wash normal.



[You're reading an excerpt. Click here to read official DAEWOO](#)

[DWF-1098PS user guide](#)

<http://yourpdfguides.com/dref/3408167>

*Rub affected area with bar soap and wash normally.*

*Treat as soon as possible by sponging with COLD water. Rub a little detergent on the stain and wash normally. Sponge with white sprites. Rub in an enzyme prewash and wash as normal. Lay the affected area face down on an absorbent cloth and work from the back. Sponge with white spirits or dry cleaning fluid.*

*Wash normally.*

*Apply lemon juice and salt and place in the sun. Wash normally. Sponge with white methylated spirits and wash normally. Wash in WARM water and detergent. Moisten area with lemon juice, dry in the sun and wash normally.*

*If stain persists and the fabric allows, use a bleach. Brush off any dry mud. Rinse in cold water. If stain persists rub in a little detergent and wash normally.*

*Scrape off any fresh paint and sponge with a non flammable dry cleaning fluid and wash normally. Treat while still wet, rinse in WARM water and wash normally. Dampen a cloth with hydrogen peroxide, lay it over the affected area and press with a fairly hot iron. 14 TROUBLE SHOOTING Most problems are easily solved if you understand the cause. Check the following list for problem before calling for service. Before calling for service, check these PROBLEM ·*

*The washer will not operate at all.*

*CHECK POINT · Is there a power failure? · Is the power cord correctly connected to an electric outlet? · Is the electric fuse broken? · Did you turn on the power? · Did you press Start/Hold button? · Is there correct amount of water in the tub? · Did you connect the inlet hose and open the water tap? · Is the inlet hose or the water tap frozen? · Is the water supply shut off? · Does foreign matter block up the inlet hose filter? · Water is not supplied; If water supply is not finished within 20 minutes, the lamp will light up, and the buzzer will sound to indicate a problem. · The washer will not drain; · Is the drain hose frozen or blocked up by dirt? · Is the drain hose kinked or deformed? If the drain is not finished within selected · Is the end of the drain hose immersed in water? time, lamp will light up, and the · Is there excessive dirt inside the pump housing? buzzer will sound to indicate a problem. · The washer will not spin; If the clothes is collected on one side during spin and the tub becomes unbalanced, the spin operation will be interrupted, and then this unbalanced condition will be corrected by following operation: WATER SUPPLY RINSE DRAIN However if the unbalanced condition is unchanged despite repeating the above operation, the lamp will light up, and the buzzer will sound to indicate a problem. · Is the clothe in the tub collected on one side? · Is the washing machine installed on an uneven floor or is the vibration serious? · Is the lid open? (The lamp will light up in this case.) · These cases are not malfunctions · The sound "wing" heard during water supply is the operating sound made by the water inlet valve. · The sound "sha" heard in stopping the tub is the sound that comes from the autobalancer of the tub. · The sound "wung" heard during wash or spin is the operating sound made by the air bubble generator. 15 SPECIFICATION*

*MODEL NO. @@@ Applying One-Touch Operation System. @@@@@"The air bubbles knock the dirt out of the clothes during wash and they push up the heavy dirt to remove it during rinse.*

*Because the double washing method using both air bubble & water current is applied to this washer the wash effects comparison with the original washer system. PART AND FEATURES ....*

.....

.....

.....

.....

.....

.....

*.....2 WASHER SAFETY..*

.....

.....

.....

.....

.....

.....

.....

.....

*...3 INSTALLATION INSTRUCTIONS ..*

.....

.....

.....

.....

.....

*....4 ELECTRICAL REQUIREMENTS.....*

.....

.....

.....

.....

*.....5 INLET HOSE CONNECTION....*

.....

.....

.....

.....

.....

.....  
.....  
.....  
.....6 OPERATING YOUR WASHER .....

.....  
.....  
.....  
.....

.....7 THE FUNCTIONS OF THE CONTROL PANEL.

.....  
.....

.....8 WASHING PROCEDURE AND COURSE SELECTION...

....9 STARTING YOUR WASHER.....

.....  
.....  
.....

.....  
.....  
.....

.11 CARING FOR YOUR WASHER .....

.....  
.....  
.....  
.....

..12 HOW TO CLEAN THE FILTER .....

.....  
.....  
.....

.....  
.....

13 REMOVING STAINS.....

.....

.....  
.....  
.....  
.....

.....  
.....

14 TROUBLE SHOOTING.....

.....

.....  
.....  
.....  
.....

.....  
.....

.15 SPECIFICATION ....

.....  
.....

.....  
.....  
.....  
.....

.....  
.....

..16 A NOTE TO YOU Thank you for buying a DAEWOO appliance. DAEWOO washers are easy to use, save time, and help you manage your home better. To

*ensure that enjoy yours of trouble-free operation, we developed this instruction manual.  
It contains valuable information about how to operate and maintain your washer properly and safely. Please read it carefully. .*



[You're reading an excerpt. Click here to read official DAEWOO  
DWF-1098PS user guide  
http://yourpdfguides.com/dref/3408167](http://yourpdfguides.com/dref/3408167)