



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO DWF-5510P. You'll find the answers to all your questions on the DAEWOO DWF-5510P in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DAEWOO DWF-5510P
User guide DAEWOO DWF-5510P
Operating instructions DAEWOO DWF-5510P
Instructions for use DAEWOO DWF-5510P
Instruction manual DAEWOO DWF-5510P

DAEWOO
INSTRUCTION MANUAL

Model: DWF-5510P
DWF-6021P

TABLE OF CONTENTS

- SAFETY INSTRUCTION & SPECIFICATIONS2
- PARTS DESCRIPTIONS3
- DIRECTIONS FOR SAFE USE4
 - How To Install4
 - Water Connection6
 - Drain Hose Setting7
- HOW TO OPERATE8
 - Preparation for Washing8
 - Descriptions of Control Panel9
 - General Procedures for Operation10
 - Guides for Basic Washing Programs11
 - Guides for Other Useful Programs13
- PERIODIC MAINTENANCE14
- SPECIAL GUIDES FOR REMOVING STAINS16
- TROUBLE SHOOTING GUIDES17

* PLEASE READ CAREFULLY THIS INSTRUCTION MANUAL BEFORE USING YOUR WASHER AND SAVE THIS FOR FUTURE REFERENCE.



[You're reading an excerpt. Click here to read official DAEWOO DWF-5510P user guide](http://yourpdfguides.com/dref/3408214)
<http://yourpdfguides.com/dref/3408214>

Manual abstract:

.....
.....
.....
.....

.....2 s PARTS DESCRIPTIONS ...

.....
.....
.....

.....3 s DIRECTIONS FOR SAFE USE.....

.....
.....

...4 ·How To Install

.....
.....
.....
.....

.....4 ·Water Connection...

.....
.....
.....

.....
.....

6 ·Drain Hose Setting

.....

.....
.....
.....

.7 s HOW TO OPERATE

.....
.....
.....

.....8 ·Preparation for Washing....

.....
.....
.....

....8 ·Descriptions of Control Panel.....

.....

....9 ·General Procedures for Operation.

.....

....10 ·Guides for Basic Washing Programs

11 ·Guides for Other Useful Programs13 s PERIODIC MAINTENANCE.

.....
.....
.....

14 s SPECIAL GUIDES FOR REMOVING STAINS...16 s TROUBLE SHOOTING GUIDES

.....

.17 * PLEASE READ CAREFULLY THIS INSTRUCTION MANUAL BEFORE USING YOUR WASHER AND SAVE THIS FOR FUTURE REFERENCE. SAFETY INSTRUCTIONS & SPECIFICATIONS SAFETY INSTRUCTIONS Your safety is important to us. Read all instructions before using your washer. Do not wash items cleaned, washed, soaked in, or spotted with wax, paint, gasoline, oil, or other flammable fluids.

The fumes can create a fire hazard or explosion. Flammable fluids (dry-cleaning solvents, kerosene, gasoline, etc.) should not be used or stored in or near your washer. Do not add flammable fluids to your wash water. These substances give off vapors that can create a fire hazard or explosion. Do not allow children to operate, play with, or crawl on or inside your washer. Supervise children closely when your washer is used near them. Do not reach into the wash tub unless START/HOLD button is pressed and all motion stops, while spinning. Do not use chlorine bleach and ammonia or acids (such as vinegar or rust remover) in the same wash. Hazardous fumes can form.

Unplug power supply cord before attempting to service your washer. Do not pour water on the control panel. Remove foreign objects (such as coin, pin, knife, other metallic materials, etc.) inside your wash load. They may damage any fabric. Do not overload your washer to avoid poor cleaning, wrinkling and/or any abnormal operation. SPECIFICATIONS MODEL NO Power Source Power Consumption Width X Depth (mm) Height (mm) Net Weight (Kg) Maximum Mass of Textile Material of Internal Tub Water Consumption Washing Capacity Washing Program Water Level Direction of Inlet Valve Operating Water Pressure Pulsator Coin Filter Backward 855 32 5.5kg Recyclable Poly Propylene Approx. 135 Liters/Cycle 4 Programs High (55 Liters), Medium (45 Liters), Low (31 Liters) Upward 0.3Kgf/cm2~8Kgf/cm2 (2.

94N/cm2~78.4N/cm2) Provided with 6 Spouting Holes for Powerful Upward Water Stream Only in Pump Model identified with 'P' added to Model No. @@@@ Do not place your washer where it may be splashed during bathing. The opening must not be obstructed by carpeting when the washing machine is installed on a carpeted floor. Installation of the Under Base Cover(Optional) -DWF-5510P After installing the washing machine, assemble the under-base cover.

1 Before installing your washer, remove the pad from the bottom of the cabinet. Then, separate under cover from rear side of cabinet by unscrewing and insert it into the base. 2 Push the under-base cover into the end, which decrease the noise made by this washer. SCREW -DWF-6021P 1 After the packing box is opened, there is a under-base cover at the top of the washer. 2 Push the under-base cover into the end, which decrease the noise made by this washer. 4 Power Supply · Before plugging the plug into wall receptacle, check the voltage rating is in the range of rating, marked on the label at the back side of your washer. SCREW LABEL Grounding · If your water tap or water pipe is not made of metal, connect the ground wire to a copper plate or a metal rod and bury it in the earth. · If both your water tap and water pipe are made of metal, connect the ground wire to the base of the water tap. · In case of using 3-core cord, there is no need for grounding. 20Cm · It is of no use connecting the ground wire to the water pipe made of plastic. Never Connect the Ground Wire to Such a Thing · Never connect it to a gas pipe because of danger of a explosion. · Never connect it to a telephone wire or a lightning rod because of os very dangerous at a thunderbolt. Gas Pipe Telephone Wire 5 WATER CONNECTION Be careful not to confuse hot water inlet (pink color) and cold water inlet (blue color), if your washer is provided with dual water inlets. Also if you have only one water tap, connect the inlet hose with cold water inlet (blue color). For normal tap 1 Pull down the collar of the inlet hose to separate it from the hose adapter.

2 Loosen the four screws properly in fitting into water tap. 3 Fit the hose adapter into the water tap and tighten the four screws evenly while pushing up the adapter so that the rubber packing can stick to the water tap tightly. TAPE TAPE 4 Remove the tape, and screw connector B into connector A tightly. 5 Connect the inlet hose to the hose adapter, pulling down the collar of hose end. 6 Connect the opposite end of the hose to water inlet of your washer tightly. · Please check the rubber packing is inside the hose end. Connector A connector A Connector B connector B In case that your washer is not provided with collar compartment, procedure 3 and 5 is not necessary. For Thread-Fitting Type 1 Connect the inlet hose to the thread of water tap or water pipe by tightening. 2 For the opposite end, connect it to water inlet as the above procedure 6. Connector Connector D Rubber Packing Inlet Hose Hose Connector C Connector Leak Test Turn on the water completely to check for any leakage.

If any leakage, turn off the water, try again as the above procedures. For the special tap, call a qualified plumber for the installation. 6 DRAIN HOSE SETTING Before operating your washer, install drain hose properly. First, connect the drain hose to the drain outlet at the rear side of your washer, and then fasten it tightly with the hose clamp. Next, the other end of drain hose set as the below.

Pump Model 1 Connect the drain hose to the drain outlet at the rear side of the washing machine, and fasten it tightly with the clamp supplied. 3 Hook the drain hose to the edge of the tub, paying attention that there are no bends or constructions along the drain hose. Or, connect the drain hose to a standpipe of a diameter greater than that of the drain hose and at a height of min. 70cm. NOTES: 1.

Let the highest point of the drain hose be more than 1m above the floor. If not so, the water in the washer could be drained during operation. 2. Be sure that the height of the drain hose must be less than 1.4m above the floor, If not so, the water in the washer could not drain. 3. The hose guide MUST be fitted to the drain hose. The drain hose should not extend more than 55mm from the end of the hose guide. This is to prevent 'SYPHONING'. If necessary the drain hose can be trimmed to length.

2 Attach the hose guide included in the accessory kit, to guide the drain hose over the tub or standpipe. PULL HOSE THROUGH 55mm FLEX HOSE GUIDE APART 4 Attach the hose guide included in the accessory kit, to guide the drain hose over the tub or standpipe.



[You're reading an excerpt. Click here to read official DAEWOO DWF-5510P user guide](http://yourpdfguides.com/dref/3408214)
<http://yourpdfguides.com/dref/3408214>

MUST be ventilated Non-Pump Model 1 In case that it goes over a door sill. Don't let the height of the drain hose exceed 20cm from the ground. . 2 In case of extending the drain hose. Don't let the total length exceed 3m. 3 Be careful that the end of the drain hose is not immersed in water. 3m 20cm 7 HOSE TO OPERATE PREPARATION FOR WASHING To obtain the best washing results, you must operate your washer properly. This section give you this important information.

Preparing clothes for washing · Close zippers, snaps, and hooks to avoid snagging other items. Remove pins, buckles, and other hard objects to avoid scratching the washer interior. · Empty pockets and turn them inside out. · Turn down cuffs and turn synthetic knits out to avoid pilling. · Tie strings and sashes so they will not tangle.

· Treat spoats and stains. (see "Special Guides for Removing stains" on page) Sorting · Separate heavily soiled items from, lightly soiled ones, even if they would normally be washed together. @@@@ · Load washer properly and select correct load size setting. @@Load evenly to maintain washer balance. An off balance load can make the washer vibrate during spin.

· Reduce wash time when using a small load size setting. Loads with only a few small items need less wash time.

@@@@@@@@@@@@@@@@@@@@@Without operation, cold water would be selected automatically. @@@@use only liquid chlorine in the bleach inlet · Follo & Wash Add & Rinse & Spin Add & Spin Add & Wash & Rinse & Spin Only Wash Rinse & Spin POWER WATER LEVEL START / HOLD End of Washing It is Informed by buzzer For the reservation of finishing time 1 Set your program as the above procedure, remaining last step.

· Press the course selection button. · Press the procedure selection button. @@@@Interior Clean interior with 250ml of chlorine bleach mixed with 500ml of detergent. Run washer through a complete cycle. Repeat process if necessary. Do not put sharp or metal object in your washer, they can damage the finish.

Check all pockets for pins, clips, money, bolts, nuts, etc. Do not lay these objects on your washer after emptying pockets. Winter storage or moving care Install and store your washer where it will not freeze. Because some water may stay in the hoses, freezing can damage your washer. If storing or moving your washer during freezing weather, winterize it. To winterize washer · Shut off water faucet. · Disconnect and drain water inlet hoses · Run washer on a drain and spin setting(see page 13) for 1 minute. · Unplug the power supply cord. To use washer again · Flush water pipes and hoses. · Recombination water inlet hoses.

· Turn on water faucet. · Recombination power supply cord. Non-use or vacation care Operate your washer only when you are at home. If will be on vacation or not using your washer for an extended period of time, you should: · Unplug the power supply cord or turn off electrical power to the washer. · Turn off the water supply to the washer.

This helps avoid accidental flooding (due to a water pressure surge) while you are away. 14 Cleaning the Lint Filter 1 Pull the Filter frame up ward. 2 Turn the lint filter inside out, wash to the lint off with water. 3 Return the filter as it was, and insert the filter frame into the slot Lint Filter Filter Frame Cleaning the water inlet filter · Clean the filter when water leaks form, the water inlet. 1 Pull the power plug out before cleaning it.

2 Turn off the water supply to the washer and sperate the inlet hose. 3 Pull the inlet filter out. 4 Remove the dirt from the inlet filter with a brush. Cleaning the drain filter · In case "U" shape drain hose, this filter's equipped at the cack side of washer. · This drain filter is to screen the foreign stuffs such as threads, coins, pins, buttons etc... · If the drain filter is not cleaned at proper time(every 10 times of use), Drain problem could be caused, see page 1 Put down the remained water in the hose. And put a container under the filter to collect water. 2 Turn the cap counter clockwise.

CAP 3 Pull out the filter assembly off the case of the main body. FILTER SLIT CASE FILTER CONTAINER CAP 4 Clean the drain filter removing the foreign stuffs. FILTER CAP 5 Put in the filter along the guiding prominence of the case. Please note the left position of the filter adjusting the groove to the guide rib.

CASE FILTER GUIDE RIB CAP SLIT 6 Turn the cap clockwise tightly. CAP 15 SPECIAL GUIDES FOR REMOVING STAINS Stained, heavily-soiled, or greasy items, may need to be prewashed or soaked for best results. Soaking helps remove protein-type stains like blood, milk, or grass. Prewashing helps loosen soil before washing. Stain removal rules · Use warm water for soaking or prewashing stained laundry. Hot water can set stains.

· Most stains are easier to remove when they are fresh. Old or set stains may not coconut. · Before treating any stain, find out what kind of stain it is, how old the stain is, what kind of fabric it is, and if the fabric is colorfast.(Check the care label) · Washing and drying can set some stains. · Start with cold or warm water, hot water can set some stain.

· When bleach is recommended, use a bleach that is safe for the fabric. · Put the stained area face down on a paper towel or white cloth. Apply the stain remover to the back of the stain. This forces the stain off fabric instead of through it. Stain removal guide STAIN Blood Chewing gum Cocoa, Chocolate Coffee Cream/Milk Ice cream Deodorant Egg Fabric/Softener Fruit stains Grass Grease and oil Iron or rust Lipstick Mildew Mud Paint-oil based Pain-water based Scorch marks TO REMOVE Rinse immediately in COLD water.

If stain remains, soak in cold water with an enzyme prewash. Use ice in plastic bag to harden the gum. Scrape off what you can and then sponge with white spirits. Sponge with COLD water and soak in an enzyme prewash. If stains persist, rub in a little detergent and rinse in cold water. Blot up quickly and rinse out in COLD water. Rub in a little detergent and wash in the maximum temperature allowed for the fabric type. Rinse in COLD water and wash normally. If stain is still apparent, sponge with white spirits. Rub affected area with white vinegar and then rinse under running COLD water.

Sponge with white spirits. Treat stiffened areas with enzyme prewash Soak in a COLD enzyme prewash, rinse and wash normal. Rub affected area with bar soap and wash normally. Treat as soon as pressible by sponging with COLD water. Rub a little detergent on the stain and wash normally. Sponge with white sprites. Rub a little detergent on the stain and wash normally. @@Sponge with white spirits or dry cleaning fluid. Wash normally. Apply lemon juice and salt and place in the sun.



[You're reading an excerpt. Click here to read official DAEWOO DWF-5510P user guide](http://yourpdfguides.com/dref/3408214)
<http://yourpdfguides.com/dref/3408214>

Wash normally. Sponge with white methylated spirits and wash normally. Wash in WARM water and detergent. Moisten area with lemon juice, dry in the sun and wash normally. If stain persists and the fabric allows, use a bleach.

Brush off any dry mud. Rinse in cold water. If stain persists rub in a little detergent and wash normally. @@Treat while still wet, rinse in WARM water and wash normally. @@@@ · Is the power cord correctly connected to an electric outlet? · Is the electric fuse broken? · Did you turn on the power? · Did you press Start/Hold button? · Is there correct amount of water in the tub? · Did you connect the inlet hose and open the water tap? · Is the inlet hose or the water tap frozen? · Is the water supply shut off? · Does foreign matter block up the inlet hose filter? · Is the drain hose frozen or blocked up by dirt? · Is the drain hose kinked or deformed? · Is the end of the drain hose immersed in water? · Is there excessive dirt inside the pump housing? · Is the clothe in the tub collected on one side? · Is the washing machine installed on an uneven floor or is the vibration serious? · Is the lid open? (the lamp will light up in this case.) · Water is not supplied; If water supply is not finished within 30 minutes, the lamp will light up, and the buzzer will sound to indicate a problem. · The washer will not drain; If the drain is not finished within selected time, lamp will light up, and the buzzer will sound to indicate a problem. · The washer will not spin; If the clothes is collected on one side during spin and the tub becomes unbalanced, the spin operation will be interrupted, and then this unbalanced condition will be corrected by following operation; WATER SUPPLY Rinse Drain However if the unbalanced condition is unchanged despite repeating the above operation, the lamp will light up, and the buzzer will sound to indicate a problem. · These cases are not malfunctions · The sound "Wing" heard during water supply is the operating sound made by the water inlet valve. · The sound "sha" heard in stopping the tub is the sound that comes from the autobalancer of the tub. · The sound "Wung" heard during washer or spin is the operating sound made by the air bubble generator. NOTES: Please check the point before calling for a service. If the supply cord is damaged, it must only be replaced by a repair shop appointed by manufacturer, because special purpose tools are required. 17 .



[You're reading an excerpt. Click here to read official DAEWOO DWF-5510P user guide](http://yourpdfguides.com/dref/3408214)
<http://yourpdfguides.com/dref/3408214>