



# Your PDF Guides


You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO DWF-7589. You'll find the answers to all your questions on the DAEWOO DWF-7589 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual DAEWOO DWF-7589**  
**User guide DAEWOO DWF-7589**  
**Operating instructions DAEWOO DWF-7589**  
**Instructions for use DAEWOO DWF-7589**  
**Instruction manual DAEWOO DWF-7589**

Full-Auto Electric Washing Machine  
Model: DWF-7589/8089

**INSTRUCTION MANUAL**

- First applying the Air Bubble Washing System in the world.
- Applying One-Touch Operation System.
- Realizing calm washing through the innovational low-noise design.
- Before operating this washer, please read this instruction completely. Thank you.



The First Air Bubble Washing System in the World	CONTENTS	Page
<ul style="list-style-type: none"> <li>&gt; Your washer is equipped with the bubble generator that generates a great deal of air bubble.</li> <li>&gt; The air bubbles knock the dirt out of the clothes during wash and they push up the heavy dirt to remove it during rinse.</li> <li>&gt; Because the double washing method using both air bubble &amp; water current is applied to this washer, wash efficiency is excellent in comparison with the original washer system.</li> </ul>	PARTS AND FEATURES.....	2
	WASHER SAFETY.....	3
	INSTALLATION INSTRUCTIONS.....	4
	ELECTRICAL REQUIREMENTS.....	5
	INLET HOSE CONNECTION.....	6
	OPERATING YOUR WASHER.....	7
	THE FUNCTIONS OF THE CONTROL PANEL.....	8
	WASHING PROCEDURE AND COURSE SELECTION.....	9
	GENERAL PROCEDURE FOR OPERATION.....	11
	CARING FOR YOUR WASHER.....	12
	HOW TO CLEAN THE FILTER.....	13
	REMOVING STAINS.....	14
	TROUBLE SHOOTING.....	15
SPECIFICATION.....	16	

**A NOTE TO YOU**  
Thank you for buying a DAEWOO appliance.  
DAEWOO washers are easy to use, save time, and help you manage your home better.  
This manual contains valuable information about how to operate and maintain your washer properly and safely.  
Please read it carefully.



[You're reading an excerpt. Click here to read official DAEWOO DWF-7589 user guide](http://yourpdfguides.com/dref/3408273)  
<http://yourpdfguides.com/dref/3408273>

**Manual abstract:**

*s Applying One-Touch Operation System. s Realizing calm washing through the innovational low-noise design. s Before operating this washer, please read this instruction completely. Thank you The First Air Bubble Washing System in the World ¢ Your washer is equipped with the bubble generator that generates a great deal of air bubble. ¢ The air bubbles knock the dirt out of the clothes during wash and they push up the heavy dirt to remove it during rinse. ¢ Because the double washing method using both air bubble & water current is applied to this washer, wash efficiency is excellent in comparison with the original washer system. A NOTE TO YOU CONTENTS Page PARTS AND FEATURES....*

.....  
.....  
.....

.....  
.....  
.....  
.....

**...2 WASHER SAFETY.....**

.....  
.....  
.....

.....  
.....  
.....  
.....

**3 INSTALLATION INSTRUCTIONS.....**

.....  
.....

.....  
.....  
.....

**...4 ELECTRICAL REQUIREMENTS.....**

.....  
.....  
.....  
.....

**.....5 INLET HOSE CONNECTION..**

.....  
.....  
.....

.....  
.....  
.....

**.....6 OPERATING YOUR WASHER...**

.....  
.....  
.....  
.....

**....7 THE FUNCTIONS OF THE CONTROL PANEL.**

.....  
.....

**...8 WASHING PROCEDURE AND COURSE SELECTION.....**

**.9 GENERAL PROCEDURE FOR OPERATION...**

.....  
.....

**.11 CARING FOR YOUR WASHER.....**

.....  
.....  
.....  
.....  
.....12 HOW TO CLEAN THE FILTER.  
.....  
.....  
.....  
.....

.....13 REMOVING STAINS..  
.....  
.....  
.....  
.....

.....14 TROUBLE SHOOTING.  
.....  
.....  
.....  
.....

.....15 SPECIFICATION....  
.....  
.....  
.....  
.....

*...16 Thank you for buying a DAEWOO appliance. DAEWOO washers are easy to use, save time, and help you manage your home better. This manual contains valuable information about how to operate and maintain your washer properly and safely. Please read it carefully. PARTS AND FEATURES The parts and features of your washer are illustrated on this page. Become familiar with all parts and features before using your washer. NOTE · The drawings in this book may vary from your washer model.*

*@@In case of the single valve model, there is no hot water valve. @@@@ Do not allow children to operate, play with, or crawl on or inside your washer. Supervise children closely when your washer is used near them. · After starting a cycle, do not reach into the spin basket unless all motion stops. · Do not tamper with the controls.*

*Please ... · Have only a qualified person install, repair, or replace parts on washer. · Maintain washer properly.*

*· Protect washer from the weather and keep it where the temperature will not fall below freezing. · Do not install the washer at a place of extremely high humidity. It could cause an Electrical shock or a short circuit. · Connect washer to the correct outlet, electrical supply, water supply, and drain. · Ground washer properly. Understanding your responsibilities · Do not wash items that are soiled with vegetable or cooking oil. These items may contain some oil after laundering. Due to the remaining oil, the fabric may smoke or catch fire by itself. · Do not use chlorine bleach and ammonia or acid (Such as vinegar or rust remover) in the same wash. Hazardous fumes can form.*

*· Unplug power supply cord before attempting to service your washer. · Do not wash fiberglass materials. Small particles can stick to fabrics and cause skin irritation. · Do not use hot water that temperature is over 50°C (120°F). It can cause a deformation of plastic parts. · Do not spray water on the control panel and back cover of the washer. It can cause a fire or an electric shock. 3 4 INSTALLATION INSTRUCTIONS Location of washer Check location where washer will be installed. Make sure you have everything necessary for correct installation. Proper installation is your responsibility.*

*· Do not place or store your washer below 0 °C (32°F) to avoid any damage from freezing. · Install the washer on the horizontal solid floor. C If the washer is installed on an unsuitable floor, it could make considerable noise, vibrate and cause a malfunction. If washer is not level, adjust the front leg(A) up or down for horizontal setting. B · Earthed electrical outlet(B) is required with 20cm of bottom back of washer cabinet.*

*· Hot and cold water faucets (C) must be within 1M of the upper back of the washer cabinet and provide water pressure 0.3kgf/cm<sup>2</sup>-8kgf/cm<sup>2</sup> (2.94N/cm<sup>2</sup>-78.4cm<sup>2</sup>). A UP DOWN Drain system Never forget to install drain hose before operating your washer.*

The packing box is opened, there are a drain hose, and a hose clamp in the washer. Non-Pump Model · Connect the drain hose to the drain outlet at the back side of the washer, and fasten it tightly with the clamp attached. Pump Model · Connect the drain hose to the drain outlet at the back side of the washing machine, and fasten it tightly with the clamp supplied. Hose clamp Drain hose Drain hose Drain Outlet Hose Clamp NOTES · The opening must not be obstructed by carpeting when the washing machine is installed on a carpeted floor. 4 5 Non-Pump Model 1 In case that it goes over a door sill. Don't let the height of the drain hose exceed 20cm from the bottom of washer. 2 In case of extending the drain hose. Don't let the total length exceed 3m. 3 Be careful that the end of the drain hose is not immersed in water. 3m 20Cm Pump Model Laundry tub drain system · Top of tub must be at least 86cm (34inches) high and no higher than 130cm from bottom of washer (A) Standpipe drain system · Needs a 3cm minimum diameter standpipe with minimum carry away capacity of 30liters per minute.

· Top of tub must be at least 86cm (34inches) high and no higher than 130cm from bottom of washer (B) B A ELECTRICAL REQUIREMENTS WARNING electrical shock hazard:failure to follow these instructions could result in death or serious injury. · Don't earth to a gas pipe · Don't change the power supply cord plug. · Check with a qualified electrician if you are not sure the washer is properly earthed. · Electrical earth is required on this washer · If it does not fit the outlet, have a proper outlet installed by a qualified electrician. Recommended earthing method C B A For your personal safety, this washer must be earthed. This washer is equipped with a power supply cord (A) having a earthing plug (B). To minimize possible shock hazard, the cord must be plugged into a mating earthing-type wall receptacle (C). If a mating wall receptacle is not available, it is the personal responsibility and obligation of the customer to have the proper earthed wall receptacle installed by a qualified electrician. 5 6 INLET HOSE CONNECTION Be careful not to confuse hot water inlet and cold water inlet. In using only one water tap or in case of attached one water inlet valve, connect the inlet hose to the cold water inlet valve.

For Ordinary Tap 1 Pull down the collar of the inlet hose to separate it from the water tap adapter. 2 Loosen the four screws properly in fitting into water tap. 3 Fit the water tap adapter into the water tap tap and tighten the four screws evenly while pushing up the adapter so that the rubber packing can stick to the water tap tightly. TAPE 4 Remove the tape, and screw connector B into connect A tightly. 5 Connect the inlet hose to the water tap adapter by pulling down the collar of the hose end.



[You're reading an excerpt. Click here to read official DAEWOO](#)

[DWF-7589 user guide](#)

<http://yourpdfguides.com/dref/3408273>

6 Connect the inlet hose adapter of the hose to the water inlet of the washer by turning it clockwise to be fixed tightly. Connector A Connector B · Please check the rubber packing inside the inlet hose adapter of the hose. For Screw-Shaped Tap 1 Connect the inlet hose to the water tap by screwing the connector tightly. 2 Connect the connector inlet supplied if necessary. 3 Insert the inlet hose adapter into the water inlet of a washer and turn it to be fixed.

Connector Rubber Packing Connector inlet Connector Rubber Packing Hose Connector Hose Connector \*Check the packing in the inlet 6 7 OPERATING YOUR WASHER To obtain the best washing results, you must operate your washer properly. This section gives you this important information. Preparing clothes for washing · Close zippers, snaps, and hooks to avoid snagging other items. Remove pins, buckles, and other hard objects to avoid scratching the washer interior. · Empty pockets and turn them inside out. @@ · Tie strings and sashes so they will not tangle. @@@@ · Load washer properly and select correct load size setting. @@ Load evenly to maintain washer balance. An off balance load can make the washer vibrate during spin.

· Reduce wash time when using a small load size setting. Loads with only a few small items need less wash time. @@@@MIN. @@ · It can be used to choose water temperature to be supplied. @@@@ · Also, this button can be used to spin only. @@@@ & middle manufacturer's directions for safe use)

2. @@@@ Undiluted bleach will damage any fabric it touches. @@@@ · Avoid dripping or spilling any fabric softener on the load. Softener inlet (Symbol) · The dispenser is for liquid fabric softener use only. 4.

Close the washer lid (door) 5. Press the power button. 6. Select the cycle. The full automatic cycle has five settings; FUZZY, BLANKET, ECONOMY, SUIT(WOOL), SOAK.

(See page 9) 7. Press the START/HOLD button. 11 `12 CARING FOR YOUR WASHER Proper care of your washer can extend its life. This section explains how to care for your washer properly and safely. Cleaning your washer Exterior Wipe up detergent, bleach, and other spills with a soft, damp cloth or sponge as they occur.

Occasionally wipe the outside of the washer to keep it looking like new one. Interior Clean interior with 250ml of chlorine bleach mixed with 500ml of detergent. Run washer through a complete cycle. Repeat process if necessary. Do not put sharp or metal object in your washer, they can damage the finish.

Check all pockets for pins, clips, money, bolts, nuts, etc. Do not lay these objects on your washer after emptying pockets. Winter storage or moving care Install and store your washer where it will not freeze. Because some water may stay in the hoses, freezing can damage your washer. If storing or moving your washer during freezing weather, winterize it.

To winterize washer · Turn off water faucet. · Disconnect and drain water inlet hoses · Run washer on a drain and spin setting (see page 10) for 1 minute. · Unplug the power supply cord. To use washer again · Flush water pipes and hoses. · Reconnect water inlet hoses. · Turn on water faucet. · Reconnect power supply cord. Non-use or vacation care Operate your washer only when you are at home. If will be on vacation or not using your washer for an extended period of time, you should: · Unplug the power supply cord or turn off electrical power to the washer. · Turn off the water supply to the washer .

This helps avoid accidental flooding (due to a water pressure surge) while you are away. 12 13 HOW TO CLEAN THE FILTER Cleaning the Lint Filter 1 Pull the Filter frame upward. 2 Turn the lint filter inside out, wash the lint of with water 3 Return the filter as it was, and insert the filter frame into the slot Lint Filter Filter Frame Cleaning the water inlet filter · Clean the filter when water leaks from, the water inlet. 1 Pull the power plug out before cleaning it. 2 Turn off the water supply to the washer and separate the inlet hose.

3 Pull the inlet filter out. 4 Remove the dirt from the inlet filter with a brush. Cleaning the drain filter · In case "Pump-Model" drain hose, this filter's equipped at the back side of washer. · This drain filter is to screen the foreign stuffs such as threads, coins, pins, buttons etc ..

· If the drain filter is not cleaned at proper time (every 10 times of use), Drain problem could be caused. 1 Put down the remained water in the hose. And put a container under the filter to collect water. 2 Turn the cap counter clockwise. 3 Pull out the filter assembly. FILTER CASE CAP CAP FILTER CONTAINER

4 Clean the drain filter. CAP 5 Put in the filter along the guiding prominence of the case. Please note the left position of the filter adjusting the groove to CASE the guide rib. FILTER CAP GUIDE RIB SUIT 6 Turn the cap clockwise tightly.

CAP 13 14 REMOVING STAINS Stained, heavily-soiled, or greasy items may need to be prewashed or soaked for best results. Soaking helps remove protein-type stains like blood, milk, or grass. Prewashing helps loosen soil before washing. Stain removal rules · Use warm water for soaking or prewashing stained laundry. Hot water can set stains. · Most stains are easier to remove when they are fresh. Old or set stains may not coonut · Before treating any stain, find out what kind of stain it is, how old the stain is, what kind of fabric it is, and if the fabric is color fast. (Check the care label) · Washing and drying can set some stains. · Start with cold or warm water, hot water can set some stain. · When bleach is recommended, use a bleach that is safe for the fabric.

· Put the stained area face down on a paper towel or white cloth. Apply the stain remover to the back of the stain. This forces the stain off fabric instead of through it. Stain removal guide STAIN Blood Chewing gum Cocoa, Chocolate Coffee Cream/Milk Ice cream Deodorant Egg Fabric/Softener Fruit stains Grass Grease and oil Iron or rust Lipstick Mildew Mud Paint-oil based Paint-water based Scorch marks TO REMOVE Rinse immediately in COLD water. If stain remains, soak in cold water with an enzyme prewash.

Use ice in plastic bag to harden the gum. Scrape off what you can and then sponge with white spirits. Sponge with COLD water and soak in an enzyme prewash. If stains persist, rub in a little detergent and rinse in cold water. Blot up quickly and rinse out in COLD water.

Rub in a little detergent and wash in the maximum temperature allowed for the fabric type. Rinse in COLD water and wash normally. If stain is still apparent, sponge with white spirits. Rub affected area with white vinegar and then rinse under running COLD water. Sponge with white spirits. Treat stiffened areas with enzyme prewash Soak in a COLD enzyme prewash, rinse and wash normal.



[You're reading an excerpt. Click here to read official DAEWOO](#)

[DWF-7589 user guide](#)

<http://yourpdfguides.com/dref/3408273>

