



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO ERF-370A. You'll find the answers to all your questions on the DAEWOO ERF-370A in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DAEWOO ERF-370A
User guide DAEWOO ERF-370A
Operating instructions DAEWOO ERF-370A
Instructions for use DAEWOO ERF-370A
Instruction manual DAEWOO ERF-370A

English

CE
This product has been designed, constructed and marketed in accordance with EEC directives 73/23, 89/336 and 93/68. Please read this manual carefully to ensure maximum satisfaction from your appliance. Keep the manual in a safe place for future reference. For drawings referenced in the text below, see flap at the back of the manual.

ABOUT THIS PRODUCT

- This product is designed for domestic household use only.
- Use the 4-star freezer compartment
 - to freeze fresh and cooked foods,
 - to store deep-frozen and frozen products,
 - to make ice-cubes.
- Use the refrigerator compartment
 - to store fresh foods,
 - to cool drinks.
- The freezer and refrigerator compartments defrost automatically.
- Owing to cool air circulation (multi-air-flow system) an even temperature is maintained on every shelf of the refrigerator compartment. The temperature in the specially designed low temperature compartment is kept at approximately 0 °C, ensuring nutritional value and original freshness of the food.
- The electronic control panel enables you to control the refrigerator compartment without opening the door.
- "Super Freezing" function: instant cooling with powerful supply of cold air.
- "Vac (vacation) Freezing" function: energy saving, e.g. when you are away from home for a longer period.
- Shelves can be easily moved from top to bottom without fully opening the door.

BEFORE CONNECTING TO THE MAINS

1. Wait 2 hours after delivery before you connect the appliance to the power supply, in order to ensure trouble-free operation.
2. In the UK only: Electrical connections:
 - Check that the voltage on the rating plate (7) corresponds to the voltage in your home.
 - The wires of the mains lead fitted to this appliance are coloured in accordance with the following code:



GREEN and YELLOW = EARTH (GREEN or GREEN and YELLOW)
BLUE = NEUTRAL (BLACK)
BROWN = LIVE (RED)

BROWN = LIVE (RED)

As the colours of the wires in the mains lead fitted to this appliance may not correspond with the coloured markings identifying the terminals in the plug, proceed as follows:
- The wire which is coloured GREEN and YELLOW must be connected to the terminal in the plug which is

DESCRIPTION OF YOUR REFRIGERATOR

See flap at the back of the manual.

1. Removable shelf (ERF-310 series: 2 shelves and ERF-340,370 series: 3 shelves), glass or crystal clear plastic (depending on model).
2. Light.
3. Multi-airflow duct.
4. Refrigerator temperature control.
5. Low temperature compartments (not in ERF-310).
6. Vegetable bin.
Two bins or one bin; with one bin, item (16) will not be applied (depending on model).
7. Rating plate. Positioned in the refrigerator compartment on the left-hand side next to the vegetable bins.
8. Ice-cube tray.
9. Compartment for storing and freezing.
10. Freezer temperature control.
11. Butter pocket.
12. Removable pocket (for egg tray).
13. Egg tray.
14. Removable pocket (not in ERF-310).
15. Bottle pocket.
Pocket assembled with plastic bottle fixture ("A" type) or with metal bar ("B" type) (depending on model).
16. R door pocket (depending on model).
17. Adjustable feet.

- marked with the letter "E" or by the earth symbol (⊕) or coloured GREEN or GREEN and YELLOW.
 - The wire which is coloured BLUE must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
 - The wire which is coloured BROWN must be connected to the terminal which is marked with the letter "L" or coloured RED.
- If the terminals in the plug are unmarked or you are in any doubt as to the correct connections, consult a qualified electrician.
3. In the UK only: Moulded plug:
 - Applicable only if moulded plug is fitted.



[You're reading an excerpt. Click here to read official DAEWOO ERF-370A user guide](http://yourpdfguides.com/dref/3407440)
<http://yourpdfguides.com/dref/3407440>

Manual abstract:

Please read this manual carefully to ensure maximum satisfaction from your appliance. Keep the manual in a safe place for future reference. For drawings referenced in the text below, see flap at the back of the manual. ABOUT THIS PRODUCT s This product is designed for domestic household use only. s Use the 4-star freezer compartment - to freeze fresh and cooked foods, - to store deep-frozen and frozen products, - to make ice-cubes. s Use the refrigerator compartment - to store fresh foods, - to cool drinks. s The freezer and refrigerator compartments defrost automatically. s Owing to cool air circulation (multi-airflow system) an even temperature is maintained on every shelf of the refrigerator compartment. The temperature in the specially designed low temperature compartment is kept at approximately 0°C, extending nutritional value and original freshness of the food. s The electronic control panel enables you to control the refrigerator compartment without opening the door.

s "Super Freezing" function: instant cooling with powerful supply of cold air. s "Vac (vacation) Freezing" function: energy saving, e.g. when you are away from home for a longer period. @@BEFORE CONNECTING TO THE MAINS 1.

@@@2. In the UK only. @@@@Removable shelf (ERF-310 series: 2 shelves and ERF-340,370 series: 3 shelves), glass or crystal clear plastic (depending on model). Light. Multi-airflow duct.

Refrigerator temperature control. Low temperature compartments (not in ERF-310). Vegetable bin. Two bins or one bin; with one bin, item (16) will not be applied (depending on model). Rating plate. Positioned in the refrigerator compartment on the left-hand side next to the vegetable bins. Ice-cube tray. Compartment for storing and freezing. Freezer temperature control. Butter pocket.

Removable pocket (for egg tray). Egg tray. Removable pocket (not in ERF-31*). Bottle pocket. Pocket assembled with plastic bottle fixture ("A" type) or with metal bar ("B" type) (depending on model). R door pocket (depending on model). Adjustable feet. 2. 3. 4.

5. 6. 7. 8. 9.

10. 11. 12. 13. 14.

15. 16. 17. marked with the letter "E" or by the earth symbol (z) or coloured GREEN or GREEN and YELLOW. - The wire which is coloured BLUE must be connected to the terminal which is marked with the letter "N" or coloured BLACK. - The wire which is coloured BROWN must be connected to the terminal which is marked with the letter "L" or coloured RED. If the terminals in the plug are unmarked or you are in any doubt as to the correct connections, consult a qualified electrician. 3. In the UK only. Moulded plugs: - Applicable only if moulded plug is fitted.

5 English - Should it be necessary to remove a moulded on plug from the mains cable, it should be cut off and replaced with a suitable replacement. - The moulded plug cannot be used for any other appliance, therefore remove the fuse and dispose immediately and safely to prevent anyone, especially children, from plugging it into a wall socket, which will create a safety hazard. - Should the mains lead ever require a replacement, it is essential that this operation be carried out by a qualified electrician and should only be replaced with a flexible cord obtained from the manufacturer. - After replacement of a fuse in the plug, the fuse cover must be refitted. If the fuse cover is lost a replacement cover must be obtained. The colour of the correct replacement fuse cover is that of the coloured insert in the base of the plug or the colour that is embossed in words in the base of the plug recess or elsewhere on the plug. Always state this colour when ordering a replacement fuse cover. - Only 13 amp. replacement fuses which are ASTA approved to BS 1362 should be fitted. 4. Check the rating plate (7) for voltage information. 5. The socket should be easily accessible and not directly behind the appliance. 6. Electrical connections must be made in accordance with local regulations.

The appliance must be earthed as described by law (connected through a properly earthed plug and socket). @@7. @@8. @@9. @@10.

Do not use extension leads or multiple adapters, etc. 11. In some countries a plug has to be fitted. @@@@DISCONNECTION Note: does not apply in the UK. @@@@@@@2. Installation instructions (7 drawings below). 3. @@4. @@@@@@@2. @@@@Lamp means: warmer than position "MID"(lamp).

Lamp means: "MID", normal storage temperature. Lamp means: colder than position "MID" (lamp). 3. @@@@@@@@"LOW": warmer than position "MID". "MID": normal storage temperature. "HIGH": colder than position "MID". @@@@HOW TO USE THE FREEZER COMPARTMENT 1. Connect the lead to the mains (wait 2 hours after delivery; refer to section "Before connecting to the mains"). Food can be stored after 3 to 4 hours of freezing. - lamps and will illuminate with a "beep" sound and will go red, due to the high temperature of the compartments; after some time they turn green - the interior light switches on when the door of the refrigerator compartment is opened - the compressor operates and starts cooling.

Note: lamp represents the condition of the freezer compartment; lamp represents the condition of the refrigerator compartment. 2. Refer to the section "freezer temperature control panel"(10) for temperature adjustments. 3. "Super Freezing" function: instant cooling with powerful supply of cold air, in order to rapidly cool down fresh or blanched food.

Please refer to the rating plate (7) for the quantity of food which can be frozen at once. Never freeze more than indicated on the rating plate. 4. "Vac (vacation) Freezing" function: energy saving, e.g.

when you are away from home for a longer period. The temperature is automatically kept on a lower level than "LOW". Avoid opening the door in order to keep the cold air inside. Keep air vents open. No glass bottles in the freezer compartments. The bottles might burst. Ice cubes and ice lollies straight out of the freezer are too cold for consuming. They may cause 'cold' burns. Do not allow children to play or hide in the refrigerator to prevent the risk of trapping and suffocation. Always unplug before cleaning and servicing.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified - - by the recycling symbol; follow local disposal regulations. The appliance is manufactured from reusable materials. When you decide to scrap this product, please check the cable to be disconnected from the mains. Then cut off the cable and dispose of the product according to local waste disposal laws. This product is free of CFC's (cooling circuit contains R134a). HOW TO USE THE REFRIGERATOR COMPARTMENT 1. Connect the lead to the mains (wait 2 hours after delivery; refer to section "Before connecting to the mains"). Food can be stored after 3 to 4 hours of cooling. - lamps and will illuminate with a "beep" sound 7 English NOTES ON FREEZING AND STORAGE 1.



[You're reading an excerpt. Click here to read official DAEWOO](http://yourpdfguides.com/dref/3407440)

[ERF-370A user guide](http://yourpdfguides.com/dref/3407440)

<http://yourpdfguides.com/dref/3407440>

Follow storage times indicated by the frozen food manufacturer.

Make sure that the packaging is undamaged. 2. Save energy: minimize opening of the door by storing identical food items together. 3. @@4. @@5. When you freeze food yourself, pack it in appropriate quantities. @@6. Blanch vegetables after washing and cutting them. @@When you use a steamer or microwave oven, follow the operating instructions).

7. Keep packs dry in order to avoid them freezing together. 8. Freeze fresh food separately from already frozen foods. 9. Do not salt or season fresh food or blanched vegetables before freezing. Other foods may be lightly salted or seasoned. The intensity of flavour of some spices can change. 10. Use materials or containers specially suitable for freezing in order to avoid loss of quality.

11. Write contents and date of freezing on the packs. Do not exceed the storage time indicated in order to preserve quality. 12. Do not freeze bottles or cans with carbonated drinks as they might burst. 13. Take out as much food as is immediately required for thawing. Prepare it as soon as possible after thawing.

WHEN PURCHASING FROZEN FOOD 1. Make sure tha.



[You're reading an excerpt. Click here to read official DAEWOO ERF-370A user guide](http://yourpdfguides.com/dref/3407440)
<http://yourpdfguides.com/dref/3407440>