




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO FR-430. You'll find the answers to all your questions on the DAEWOO FR-430 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DAEWOO FR-430
User guide DAEWOO FR-430
Operating instructions DAEWOO FR-430
Instructions for use DAEWOO FR-430
Instruction manual DAEWOO FR-430

FEATURE CHART

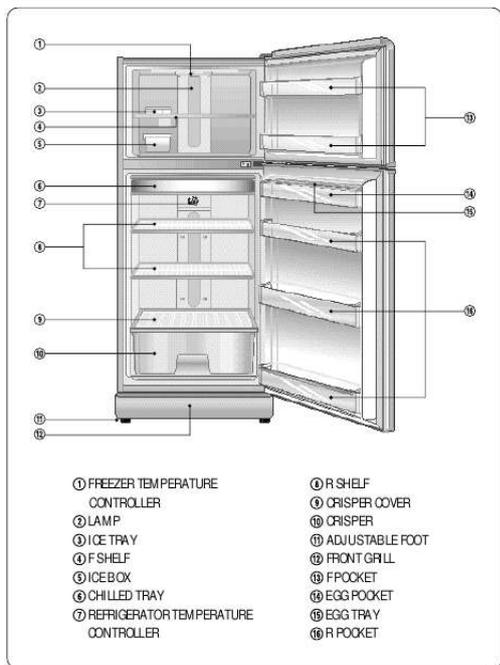

1

Here are the features of your new refrigerator.

Take a moment to know all the features and convenience it was designed to provide. Numbers match those in the illustration on page 1.

- Ice tray
Fill tray 3/4 full to allow expansion of water during freezing. Place tray in freezer chest. To release cubes, twist lid slightly.
- Removable shelf
Shelves can be removed by pulling forward. The shelf can be placed at your desirable position.
- Crisper
May be used for fruit and vegetable storage. Both the crisper and its cover shelf are removable for easy cleaning. Simply slide forward to remove.
- Egg Pocket
Egg supporter in this pocket can be turned upside down.
May be used for small size goods.
- Front Grill
Insert the front grill into the fastening holes and press it in until a locking sound is heard.
- Convertible Function
This refrigerator is designed to convert the function.
Refrigerator: can be converted to refrigerator of 'function off'

CAUTION:

1. Be sure to check with your voltage, before inserting the power supply cord into the socket.
2. Contact the earthing conductor to this unit with an attachment earthing screw.
3. Don't make it spill to this unit.
4. Don't work with flammable spray, such as painting, near this unit.
5. Don't put ignitable materials, such as benzene, L.P. Gas, alcohol, etc., into this unit.
6. Be careful of the leakage of any gas equipment near this unit.
7. Be sure not to hold to the door of this unit by children.
8. Be sure not to reinsert the power supply cord within 5 minutes after release it from socket. If not, a trouble may be occurred to compressor.

2



[You're reading an excerpt. Click here to read official DAEWOO FR-430 user guide](http://yourpdfguides.com/dref/3407753)
<http://yourpdfguides.com/dref/3407753>

Manual abstract:

@@Place tray in freezer chest. To release cubes, twist lid slightly. Removable shelf Shelves can be removed by pulling forward. The shelf can be placed at your desirable position. Crisper May be used for fruit and vegetable storage. Both the crisper and its cover shelf are removable for easy cleaning. Simply slide forward to remove. Egg Pocket Egg supporter in this pocket can be turned upside down. May be used for small size goods. Front Grill Insert the front grill into the fastening holes and press it in until a locking sound is heard.

Convertible Function This refrigerator is designed to convert the function. Refrigerator: can be converted to refrigerator of function off FREEZER TEMPERATURE CONTROLLER LAMP ICE TRAY F SHELF ICE BOX CHILLED TRAY REFRIGERATOR TEMPERATURE CONTROLLER R SHELF CRISPER COVER CRISPER ADJUSTABLE FOOT FRONT GRILL F POCKET EGG POCKET EGG TRAY R POCKET CAUTION: 1. Be sure to check with your voltage, before inserting the power supply cord into the socket. 2. Contact the earthing conductor to this unit with an attachment earthing screw.

3. Don't make it spill to this unit. 4. Don't work with flammable spray, such as painting, near this unit. 5.

Don't put ignitable materials, such as benzine, L.P. Gas, alcohol, etc., into this unit. 6. Be careful of the leakage of any gas equipment near this unit. 7. Be sure not to hold to the door of this unit by children. 8. Be sure not to reinsert the power supply cord within 5 minutes after release it from socket.

If not, a trouble may be occurred to compressor. 1 2 HOW TO INSTALL Location Install refrigerator in a convenient location away from extreme heat and cold. @@@@ There are two Adjustable foot, one at each front corner. Turn to the left to raise a corner, to the right to lower it. Use shims under rear corners, if necessary. @@@@2. Set TEMPERATURE CONTROL at MED. 3. @@@: Wash with warm, soapy water, rinse and dry.

@@: Clean at least twice a year with mild soap and water.

Rinse and dry. @@: Wash the liner with warm, soapy water, rinse and dry. 3 To change temperature You may want to adjust the control according to the season and your needs. When adjusting the temperature: Turn TEMPERATURE CONTROL toward MAX for colder temperature in refrigerator and freezer sections, and toward MIN for warmer temperature in refrigerator and freezer sections. Allow approximately 2 hours for temperature to stabilize.

Then check to see if further adjustments are needed. 4 Exterior Door gasket Interior WHAT TO DO... When out of operating for a long time.

Remove the power supply cord. Dry your refrigerator, opening the door for 2-3 days. When you get ready to move Securely fasten removable interior parts (or move and package them separately). Do not lay your refrigerator horizontally, or compressor may be damaged. INSTRUCTION MANUAL When you need service; Before calling for service check a few things noted below for yourself first. If refrigerator is not operating: Is the power supply cord unplugged? Is home fuse blown or circuit breaker off? If refrigerator is warmer than usual: Has the door been open frequently or for a long period? Is refrigerator overcrowded preventing good air circulation? Is the hot thing stored without cooling? @@If these are unusual sounds: Is refrigerator placed on the level? Are foreign objects behind the refrigerator? Are dishes on refrigerator shelves vibrating? .



[You're reading an excerpt. Click here to read official DAEWOO](#)

[FR-430 user guide](#)

<http://yourpdfguides.com/dref/3407753>