



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO FR-520NT. You'll find the answers to all your questions on the DAEWOO FR-520NT in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DAEWOO FR-520NT
User guide DAEWOO FR-520NT
Operating instructions DAEWOO FR-520NT
Instructions for use DAEWOO FR-520NT
Instruction manual DAEWOO FR-520NT

CONTENTS

- 1. Installation Instructions 1
- Suitable Installation Place 1
- Grounding 1
- Correct usage of Refrigerator 1
- Installation Process 1
- 2. Safety Instructions 2
- 3. Looks Out of Order, But, Not. 6
- 4. Name of Each Part & Function 8
- Temperature regulation
- FR-520, S50NT/NB 8
- FR-521, S51KT/KB 10
- FR-630, 662, 700KT/KB 12
- FR-521, S51NT/NB 14
- FR-630, 662, 700NT/NB 16
- FR-780, 820NT/NB 18
- 5. Care & Cleaning 20
- 6. Helpful Hints 21
- 7. Efficient Storage of Foods 21

1. Installation Instructions

Suitable Installation Place

Where the floor is solid and level	Where ventilation is good	Where there is little or no heat, moisture
<ul style="list-style-type: none"> - Unstable installation causes vibration and noise of refrigerator. - Wooden floor or carpet can be discolored under the refrigerator. - Doors lock hanged down due to the twist of refrigerator unless it is leveled. 	<ul style="list-style-type: none"> - More than 10 cm from 3 sides (left, right and back) is good enough for ventilation. - Insufficient space causes the noise of vibration, weakening of refrigerating power and the waste of electricity. 	<ul style="list-style-type: none"> - Direct sun rays, side heat of stove and gas range can weaken the refrigerating power. - Avoid location by a sink or where moisture and water can cause rust and corrosion. - Avoid location where moisture can cause electrical problems. - Use hard board or plank on the concrete/cement floor.

Grounding

■ Grounding terminal is the green one connected to the power cord in the back of refrigerator.

Grounding is necessary where	water can splash easily ; bathroom etc.	there is much moisture ; basement etc.	any wet and/or watery places.
Grounding by using grounding wire	Bury copper plate to which grounding wire is connected 25 cm deep in the ground.		
Grounding by using short-circuit breaker	Short-circuit breaker is a must where the floor is always wet, for example, fish shop, restaurant kitchen etc.		
Grounding is not necessary	in case of using side-grounded outlet.		
You should not connect the ground wire to	water pipe, gas pipe, telephone line, lightning-rod. There can be explosion or fire.		

Correct usage of Refrigerator

Plug in the refrigerator right after installation.	* See page 2 for details.
Set the both compartments' temperature to "3" to perform preparatory run for 2 or 3 hours. When the inside is cold enough, put the foods in.	* When the surrounding temperature is hot in midsummer, do not open and shut the doors too often after installation.

Installation Process

Attach the height adjustable legs to their holes in the left and right bottom of refrigerator.
Adjust the height by turning the legs until they touch the floor.

- Let the right adjustable leg touch the floor firmly, while the left, smoothly.



[You're reading an excerpt. Click here to read official DAEWOO FR-520NT user guide](http://yourpdfguides.com/dref/3407947)
<http://yourpdfguides.com/dref/3407947>

Manual abstract:

@@@¥ Insufficient space causes the noise of vibration, weakening of refrigerating power and the waste of electricity. Where there is little or no heat, moisture ¥ Direct sun rays, side heat of stove and gas range can weaken the refrigerating power. ¥ Avoid location by a sink or where moisture and water can cause rust and corrosion. ¥ Avoid location where moisture can cause electrical problems. ¥ Use hard board or plank on the concrete/cement floor.

CONTENTS 1. Installation Instructions

.....
.....
.....

1 Suitable Installation Place.....

.....
.....

... 1 Grounding .

.....
.....

.. 1 Correct usage of Refrigerator ...

.....
.....

1 Installation Process.....

.....
.....

.... 1 2. Safety Instructions

.....
.....
.....
.....

..... 2 3. Looks Out of Order, But, Not .

.....
.....
.....

... 6 4. Name of Each Part & Function.....

.....
.....

..... 8 Temperature regulation FR-520, 550NT/NB ...

.....
.....
.....
.....

. 8 FR-521, 551KT/KB....

.....
.....
.....
.....

.....
.... 10 FR-630, 662, 700KT/KB

.....
..... 12 FR-521, 551NT/NB ..

.....
14 FR-630, 662, 700NT/NB

.....
.... 16 FR-780, 820NT/NB .

.....
..... 18 5. Care & Cleaning...

.....
.. 20 6. Helpful Hints..

.....
.... 21 7. Efficient Storage of Foods.....

... 21 Grounding Grounding is necessary where Grounding by using grounding wire Grounding by using short-circuit breaker s Grounding terminal is the green one connected to the power cord in the back of refrigerator. water can splash easily ; bathroom etc. there is much moisture ; basement etc. any wet and/or watery places. Bury copper plate to which grounding wire is connected 25 cm deep in the ground. Short-circuit breaker is a must where the floor is always wet, for example, fish shop, restaurant kitchen etc. in case of using side-grounded outlet.

Side Grounded outlet Grounding is not necessary Grounding wire You should not connect the ground wire to water pipe, gas pipe, telephone line, lightning-rod. There can be explosion or fire. Correct usage of Refrigerator Plug in the refrigerator right after installation. * See page details. 2 Installation Process Attach the height adjustable legs to their holes in the left and right bottom of refrigerator.

Adjust the height by turning the legs until they touch the floor. ¥ Let the right adjustable leg touch the floor firmly, while the left, smoothly. for Set the both compartments' temperature to 030 to perform preparatory run for 2 or 3 hours. When the inside is cold enough, put the foods in. * When the surrounding temperature is hot in midsummer, do not open and shut the doors too often after installation.

1 2. Safety Instructions WARNING ATTENTION s Improper use can cause physical damage - personal injury. s Improper use can cause injury or material damage to the household WARNING NO Never install the refrigerator where there is much moisture and water can splash. ¥ It can be a danger of short circuit or fire. NO Do not allow children to hang on the doors. ¥ The refrigerator may be tipped over to hurt children. BE SURE TO KEEP NO/NEVER DO NOT DISASSEMBLE DO NOT TOUCH UNPLUG GROUND WARNING VENTILATION In case of gas leak, ventilate the room instead of unplugging the refrigerator. ¥ Explosion or fire may happen. EXCLUSIVE POWER OUTLET Use exclusive power outlet for the refrigerator only. ¥ Several plugs in an outlet may cause fire.

Do not use a double outlet or extension cord. NEVER USE When you smell something strange burning out of refrigerator, unplug it to stop running. ¥ It's very dangerous to keep the abnormal refrigerator running on and on. NEVER USE Never use plug if it is loose. ¥ There can be electric shock or fire by short

circuit. **NEVER USE ATTENTION** Do not eat any frozen food immediately from the freezer compartment. ¥ It can get you cold-burns. **NEVER EAT** Never eat deteriorated food stored too long in the refrigerator or in the out-of-order refrigerator. ¥ You can be food-poisoned. **DISCARDING** When discarding the refrigerator, remove the door packing.

¥ Children may be trapped inside it. Never use any spray near the refrigerator. ¥ It can cause danger of explosion. **CLEAN PLUG** Unplug and clean it with dry cloth if dirty. ¥ Dusty and dirty plug may cause fire.

NEVER STORE This refrigerator is for storing only foods. ¥ Do not store medicines, flammable things, and study sample, etc. **CURTAIN NEVER DISASSEMBLE** Do not repair the refrigerator on your own. ¥ It can work abnormally and cause bigger trouble. **NO** Never install the refrigerator where there is much moisture and water can splash.

¥ It can be a danger of short circuit or fire. **NO** Do not put heavy things or water contained tanks on top of refrigerator. ¥ It's dangerous when they fall down and fire by short circuit can happen. **NEVER TOUCH** Do not use any sharp tools when cleaning the inside. ¥ The cooling system can be damaged or there may be electric shock. **NEVER TOUCH** Do not pull and/or push the plug with wet hand. ¥ There can be danger of electric shock. **2 3 WARNING UNPLUG** Unplug first when exchanging the bulb and/or cleaning the refrigerator. **WARNING DOOR HANDLES** Opening and shutting doors, hold door handles, not other part. ¥ Your fingers may be jammed to be hurt.

UNPLUG If not using refrigerator for a long time, unplug and take all the foods out. ¥ In case of power failure, foods may decay and other accident (short circuit, fire etc.) can happen. **FOOD STORAGE** When you store foods in the pockets, push in to the pocket bottom. ¥ Tall bottles may fall down or the pockets can be broken. **UNPLUG** Grip the whole plug body to pull when you unplug. ¥ Holding only the wire can cause electric spark or short circuit. **GROUNDING** Be sure to ground. ¥ There is a danger of electric shock due to short circuit or mal-function. **POWER FAILURE** In case of power failure, open and shut the doors as seldom as possible.

¥ Cold air comes out and fresh storage, impossible. **HAND OVER** Handing over this refrigerator, you'd better give user's guide together to him/her. ¥ New user may not know well how to use this refrigerator. **WARNING MOVING/ CARRYING** When you move the refrigerator, take all the foods out and empty the ice box and evaporation dish of water. ¥ Foods may be damaged and you can slip on watery floor.

DRIVE / RUN After you unplugged refrigerator, wait 5 minutes or more to plug in again. ¥ If you plug in again immediately, electric parts can be damaged. **CAUTION** If there is water or oil on the floor around refrigerator, wipe it out. ¥ There is danger of slipping over to be hurt. **MOVING / CARRYING** Lift the refrigerator up enough not to scratch a soft floor.

¥ Front and rear wheels under the refrigerator may scratch the floor. **ATTENTION MOVING/ CARRYING** Grip two handle bars front bottom and formed handle top back of refrigerator. ¥ Gripping other parts can be slippery and dangerous. **FORBIDDEN** Do not store bottles, cans or canned food in the freezer compartment. ¥ They can be broken or exploded by expansion of freezing. **INSTALLATION** Place on a solid and level floor. ¥ Unstable installation causes distortion of cabinet and doors.



[You're reading an excerpt. Click here to read official DAEWOO](http://yourpdfguides.com/dref/3407947)

[FR-520NT user guide](http://yourpdfguides.com/dref/3407947)

<http://yourpdfguides.com/dref/3407947>

90 Foods should not protrude from shelves. They can fall down and/ or be broken when opening the door. CURTAIN HEIGHT ADJUSTING FEET When turning up the feet, lift the set a little.

It is hard to turn them up unless the set is lifted. HEIGHT ADJUSTING FEET When moving and carrying the set, turn the feet up. If the feet touch the floor, they can be broken or the floor may be scratched. DO NOT TOUCH Do not touch cold surfaces of foods or food containers in the freezer compartment directly. They are in the state of like frozen metal, so skin can adhere to these cold surfaces. (Especially when your hands are wet and damp.) DO NOT TOUCH Do not reach out your hands or legs under the refrigerator (when cleaning under the refrigerator. You can be hurt by rough edges and parts under the refrigerator. 4 5 3. It sounds water-flowing in the refrigerator.

Wipe out the surface with dry cloth. The sound can be heard when the compressor stops. When refrigerant to cools down, the system can make such a sound. Is the temperature near refrigerator less than 5°C? Is the mains plug firmly secure. Front feels warm.

When you store watery food unwrapped, frost may also form. It is all because of the moisture in the air being trapped inside.

Set the temperature to 0°C. Has too hot food put in? Check food storage state. Is the inside filled with too much food? Is either door open or did you open and shut the doors too often? Is there a gas range or a stove near the refrigerator? Is it in direct sun-light? Is strong odoring food stored unwrapped? Check the food storage state.

Do not store bottled drinks or foods that will be kept for so long. TEMPERATURE REGULATION LEVER OF FRESH FOOD

COMPARTMENT Used when you MAX MIN MED MAX WINTER MIN MED MAX WINTER MED WINTER MIN For ordinary use 10 Winter For ordinary use 11 Winter FR-630, 662, 700KT/KB ANTI-MICROBE DEODORIZER Anti-Microbe deodorizers, permanent and no need to replace or repair, get rid of odor. FREEZER COMPARTMENT SHELF Provided to make ice or store frozen food. FREEZER COMPARTMENT POCKETS Use when storing dried fish, dumpling skin, red pepper powder bean, pizza, spices etc. BOTTLE POCKET Storing big bottled drinks, juice, etc. BOTTLE POCKET Storing beer bottles, little bottled drinks, etc. FRONT COVER Don't let the children step on it for it can be broken. TEMPERATURE REGULATION OF FREEZER COMPARTMENT TEMPERATURE REGULATION OF FRESH FOOD COMPARTMENT 1 For ordinary use. MED 1 For ordinary use. MED MAX MIN MAX MIN 12 13 FR-521, 551NT/NB TEMPERATURE REGULATION LEVER OF FREEZER COMPARTMENT Used when you want to regulate temperature of freezer compartment.

Do not store bottled drinks or foods that will be kept for so long. ANTI-MICROBE DEODORIZER Anti-Microbe deodorizers, permanent and no need to replace or repair, get rid of odor. FRESH FOOD COMPARTMENT POCKETS EGG POCKET Storing eggs, cheese, etc. BOTTLE POCKET Storing big bottled drinks, juice, etc. MULTI-PURPOSE POCKET Storing short bottled food, packed drinks and spice containers, etc. BOTTLE POCKET Storing beer bottles, little bottled drinks, etc. FRESH CASE Stores food at 0-1°C to keep it of its own natural taste and nutrient. Push the case backward completely, or it may touch the door to be broken. FRESH FOOD COMPARTMENT SHELF Provided to store day to day food. FRONT COVER Don't let the children step on it for it can be broken.

HIGH HUMIDITY VEGETABLE CASE It keeps vegetables fresh at optimal humidity. Rails are installed for easy drawing. TEMPERATURE INDICATOR OF FRESH FOOD COMPARTMENT TEMPERATURE REGULATION OF FREEZER COMPARTMENT EASY CONTROL 1 For ordinary use. Use when surround temperature is over 10°C. 2 Use only in winter season when surround temperature is below 10°C.

Do not use when Use when surround temperature is over 10°C. MIN MED MAX WINTER MIN MED MAX WINTER TEMPERATURE REGULATION BUTTON OF FRESH FOOD COMPARTMENT TEMPERATURE REGULATION OF FRESH FOOD COMPARTMENT For the TEMP CONTROL Button. Middle Mode (0°C and 2°C light up) starts when the refrigerator is first plugged in. By pressing this button, indicators change from 0°C to 0°C WINTER. 3 For the 0°C WINTER Mode.

Use only in winter season when surround temperature is below 10°C. For ordinary use 14 Winter Do not use when Use when surround temperature is over 10°C. 15 FR-630, 662, 700NT/NB ANTI-MICROBE DEODORIZER Anti-Microbe deodorizers, permanent and no need to replace or repair, get rid of odor. FREEZER COMPARTMENT SHELF Provided to make ice or store frozen food. FREEZER COMPARTMENT POCKETS Use when storing dried fish, dumpling skin, red pepper powder bean, pizza, spices etc. BOTTLE POCKET Storing big bottled drinks, juice, etc. BOTTLE POCKET Storing beer bottles, little bottled drinks, etc. FRONT COVER Don't let the children step on it for it can be broken. TEMPERATURE INDICATOR OF FREEZER FOOD COMPARTMENT TEMPERATURE INDICATOR OF FRESH FOOD COMPARTMENT TEMPERATURE REGULATION BUTTON OF FRESH FOOD COMPARTMENT FREEZER COMPARTMENT Press FRZ.SET Button.

Middle Mode (0°C and 2°C light up) starts when the refrigerator is first plugged in. By pressing this button, middle left indicators change from 0°C to 0°C. Once you choose a temperature, temperature regulation ends. TEMPERATURE REGULATION BUTTON OF FREEZER COMPARTMENT FRZ.SET Q.F. EASY CONTROL REF. SET Q.R.

FRESH FOOD COMPARTMENT Press REF.SET Button. SET REF. SET Q.R.

16 17 FR-780, 820NT/NB ANTI-MICROBE DEODORIZER Anti-Microbe deodorizers, permanent and no need to replace or repair, get rid of odor. FREEZER COMPARTMENT SHELF Provided to make ice or store frozen food. FREEZER COMPARTMENT POCKETS Use when storing dried fish, dumpling skin, red pepper powder bean, pizza, spices etc. Do not store bottled drinks or foods that will be kept for so long. CHILLED ROOM Stores meat or fish at -1°C, on the brink of the freezing point but not freezing the food so no need to thaw the food.

NOTICE Close the chilled room cover completely. Chilled room bin and the cover can be broken if it is closed incompletely. FRESH FOOD COMPARTMENT POCKETS EGG POCKET Storing eggs, cheese, etc. BOTTLE POCKET Storing big bottled drinks, juice, etc. BOTTLE POCKET Storing beer bottles, little bottled drinks, etc.



You're reading an excerpt. Click here to read official DAEWOO FR-520NT user guide
<http://yourpdfguides.com/dref/3407947>

FRONT COVER *Do not let the children step on it for it can be broken.* TEMPERATURE INDICATOR OF FREEZER FOOD COMPARTMENT
TEMPERATURE INDICATOR OF FRESH FOOD COMPARTMENT TEMPERATURE REGULATION BUTTON OF FRESH FOOD COMPARTMENT
FREEZER COMPARTMENT Press *FRZ.SET* Button. *Middle Mode (1 and 2 light up) starts when the refrigerator is first plugged in. By pressing this button, middle left indicators change from 1 to 2.*

Once you choose a temperature, temperature regulation ends. TEMPERATURE REGULATION BUTTON OF FREEZER COMPARTMENT FRZ. SET
Q.F. EASY CONTROL REF. SET Q.R. FRESH FOOD COMPARTMENT Press *REF.SET* Button.

Spills of cooking oil, butter etc.

can cause the parts of plastics to crack. 6. Helpful Hints When you replace the light bulbs Light bulb of freezer compartment 1. Unplug the refrigerator. 2. Pull the light shield down forward, turn to take the bulb out. 3. Replace it with the same size and type of bulb. 1. Unplug the refrigerator. 2. Pull out the shelf. 3. Insert your finger into the groove under the light bulb and turn to take it out. 4.

Replace it with the same size and type of bulb. In Cleaning *Do not pour water to the refrigerator directly. Cleaning the inside, do not use chemical(alkaline) detergent, wax, gasoline, alcohol, benzen, thinner, hot(boiling) water, scrubber etc., cleaning the doors and cabinet, avoid solvent, abrasives, spray-on cleaners etc. Instead, use soft cloth with dish washer and clean up with water, dry with a soft cloth. Light bulb of fresh food compartment * Call the service center when you get the bulbs or too hard for you to replace it. After Cleaning See to the followings after cleaning. If something is wrong, call for service. Is the power cord peeled? Is the plug hot unusually? Did you plug in the outlet firmly? In case of power failure Do not open and shut the doors, if possible, then no problem storing the food 2~3 hours long even in the midsummer. In case of predicted power failure, do not store any more food and make as much ice as you can to put it on the upper shelf of fresh food compartment.*

The inside would be kept cold. On the freezer compartment shelf. Front & Rear Rollers *When cleaning the floor under refrigerator or the behind, shorten the height adjusting feet until the front rollers touch the floor enough and move the refrigerator. After cleaning, level the refrigerator by turning the feet. (See 4 page) When not using for a long time Dry the refrigerator for 3~2 days Clean the inside and leave the doors open for 2~3 days in order to prevent mold development or odor saturation.*

7. Efficient Storage of Foods *Be sure to wrap foods - fish, meat, etc. - to be stored in the freezer compartment to avoid odor. Keep foods clean !* EVAPORATION DISH New evaporating system, no need to clean at ordinary use. If it has to be cleaned due to strong odor at midsummer, see the following instruction.

1) Unplug the refrigerator. 2) Unscrew the cover below back of refrigerator and clean the dish. 3) After cleaning the dish, screw the cover and check if anything wrong. *While cleaning, be careful not to be hurt by hot pipes, compressor etc. and not to break system parts. Be sure to wipe the packed foods, wash vegetables. Cool down to room temperature ! If hot food is put in immediately, the temperature inside rises up, keeping foods fresh impossible, resulting in waste of electricity. Divide foods into one-time serving ! Dividing food into one-time serving and storage makes it easy to take out, enhancing refrigerating power. Frozen food can be thawed easily. divide! Wipe out Hot Food Wrap foods ! Make sure to wrap foods such as Kimchi and fish in order to prevent drying and odor.*

Do not fill the inside up ! Too much food will interfere with cold air circulation. Do not place watery food close to the cold air ducts. Open and shut doors quickly ! Frequent opening and shutting doors causes loss of cold air, waste of electricity weakening of refrigerating power. 20 21 SURROUND MULTI

FLOW REFRIGERATOR FR-520NT/NB FR-550NT/NB FR-521KT/KB FR-551KT/KB FR-630KT/KB FR-662KT/KB FR-700KT/KB FRZ. SET EASY CONTROL Q.F. REF. SET EASY CONTROL FRZ. SET Q.F.

EASY CONTROL Q.R. Q.R. REF.

SET SILENT SILENT *If the power cord of refrigerator is damaged, have it replaced by a repair shop by the manufacture, as special tools are required. Allow 6 cm or more clearance between wall and side and rear plate of the refrigerator for good fresh air circulation.* FR-521NT/NB FR-551NT/NB Code: SUM-1 FR-630NT/NB FR-662NT/NB FR-700NT/NB FR-7800NT/NB FR-820NT/NB .



[You're reading an excerpt. Click here to read official DAEWOO](#)

[FR-520NT user guide](#)

<http://yourpdfguides.com/dref/3407947>