



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO KOG-3705. You'll find the answers to all your questions on the DAEWOO KOG-3705 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual DAEWOO KOG-3705**  
**User guide DAEWOO KOG-3705**  
**Operating instructions DAEWOO KOG-3705**  
**Instructions for use DAEWOO KOG-3705**  
**Instruction manual DAEWOO KOG-3705**



[You're reading an excerpt. Click here to read official DAEWOO KOG-3705 user guide](http://yourpdfguides.com/dref/3403123)  
<http://yourpdfguides.com/dref/3403123>

**Manual abstract:**

*PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY (a) Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks. (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces. (c) WARNING : If the door or door seals are damaged, the oven must not be operated until it has been repaired by a trained person : (1) door (bent), (2) hinges and latches(broken or loosened), (3) door seals and sealing surfaces. (d) WARNING : It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy. (e) WARNING : Liquids or other foods must not be heated in sealed containers since they are liable to explode. (f) WARNING : Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use. TABLE OF CONTENTS  
PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY . . .*

.....  
.....  
.....  
.....  
.....  
.....

*. . 1 TABLE OF CONTENTS . . .*

.....  
.....  
.....  
.....  
.....  
.....

*. 1 EARTHING INSTRUCTIONS . . . .*

.....  
.....  
.....  
.....  
.....  
.....

*2 INSTALLATION . . . . .*

.....  
.....  
.....  
.....  
.....  
.....

*. . 2 IMPORTANT SAFETY INSTRUCTIONS . . . . .*

.....

.....  
.....

.....  
.....  
.....  
.....

.....  
*3 FEATURES DIAGRAM* .....

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... *4 OPERATION* .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
*5 COOKING UTENSILS* .....

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... *5 CARE AND CLEANING* .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

6 BEFORE YOU CALL FOR SERVICE .....

.....  
.....  
.....  
.....  
.....  
.....

6 QUESTIONS AND ANSWERS .....

.....  
.....  
.....  
.....  
.....  
.....

7 SPECIFICATIONS .....

.....  
.....  
.....  
.....  
.....  
.....

7 IMPORTANT .....

.....  
.....  
.....  
.....  
.....  
.....

7 1 EARTHING INSTRUCTIONS This appliance must be earthed. In the event of an electrical short circuit, earthing reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a earthing wire with a earthing plug. The plug must be plugged into an outlet that is properly installed and earthed. WARNING: Improper use of the earthing plug can result in a risk of electric shock.

@@@ This oven is designed for counter top use only. @@ If all vents are covered during operation, the oven may overheat and, eventually, oven failure. from radio and TV sets 3 Awaytelevision reception and radio interference may result if the oven is located close to a TV, Radio Poor antenna, feeder and so on.

Position the oven as far from them as possible. from heating 4 Awaythe oven away appliance and water taps when choosing a place to position it, or the insulation Keep from hot air, steam or splash might be adversely affected and breakdowns occur. 5 Power supply power source. This oven requires a current of approximately 11 amperes, 230V 50Hz. · Check your local · Power supply cord is about 0.

8 meters long. · The voltage used must be the same as specified on this oven. Using a higher voltage may result in a fire or other accident causing oven damage. Using low voltage will cause slow cooking. We are not responsible for damage resulting from use of this oven with a voltage of ampere fuse other

than those specified.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. oven after unpacking for 6 Examine the door, Broken door, A dent in any damage such as: are visible, DO NOT INSTALL, and A misaligned cavity. If any of the above notify dealer immediately. than room temperature. 7 Do not operate the oven if it is in colder weather.) Allow the oven to become room temperature before (This may occur during delivery cold operating. 8 The minimum height of free space necessary above the top surface of the oven is 100mm. 2 **IMPORTANT SAFETY INSTRUCTIONS WARNING:**To prevent fire, burns, electric shock and other warnings: Listed below are, as with all appliances, certain rules to follow and safeguards to assure high performance from this oven: 1. Do not use the oven for any reason other than food preparation, such as for drying clothes, paper, or any other nonfood items or for sterilizing purposes. 2.

Do not use the oven when empty, this could damage the oven. 3. Do not use the oven cavity for any type of storage, such as papers, cookbook, cookware, etc. 4. Do not operate the oven without the glass tray in place. Be sure it is properly sitting on the rotating base. 5. Make sure you remove caps or lids prior to cooking when you cook food sealed in bottles. 6. Do not put foreign material between the oven surface and door.

It could result in excessive leakage of microwave energy. 7. Do not use recycled paper products for cooking. @ @8. @ @ @ @ Do not use oil unless specified by the manufacturer.

9. @ @10. Do not pop popcorn longer than the manufacturer's directions. (popping time is generally below 3 minutes). @ @ Also, the cooking tray can become too hot to handle or may break.

11. @ @12. @ @13. @ @14. @ @ @ @15. @ @16. Keep the waveguide cover clean at all times. Wipe the oven interior with a soft damp cloth after each use. @ @17. @ @18.

@ @19. @ @ @ @ @ @2. Reflector (Insulator Heater) 3. Heating Element 4. Oven cavity 5. Safety interlock system 6. Knob V.P.C - Used to select a microwave power level. 7.

Knob timer - Used in setting cooking time for all functions. 8. @ @9. Metal Rack 10. @ @ This is to remain in the oven for all cooking.

11. @ @12. Glass cooking tray - Made of special heat resistant glass. Food in a proper receptacle is placed on this tray for cooking. 13.

Door viewing screen - Allows viewing of food. The screen is designed so that light can pass through, but not the microwave. 14. Door hook - When the door is closed, it will automatically shut off. If the door is opened while the oven is operating, the magnetron will immediately stop operating. 4 OPERATION 1 2 3 4

Connect the mains lead to an electrical outlet. After placing the food in a suitable utensil, open the oven door and put it on the glass tray. Glass tray must always be in place during cooking. Shut the door. Make sure that it is firmly closed.

How to set each function To set MICROWAVE cooking \* Set the variable power selector to the desired power level.



[You're reading an excerpt. Click here to read official DAEWOO](http://yourpdfguides.com/dref/3403123)

[KOG-3705 user guide](http://yourpdfguides.com/dref/3403123)

<http://yourpdfguides.com/dref/3403123>

SYMBOL 610W MAX POWER LEVEL DEFROST MED-HIGH HIGH (grill) position. (combi) position. OUTPUT POWER 33% 77% 100% To set GRILL cooking \* Set the POWER SELECTOR to the To set COMBI cooking \* Set the POWER SELECTOR to the 5 6 Set the time control by turning the timer knob and then microwave cooking starts. · If turning the timer knob for less than 2 minutes, turn it past 2 minutes and then back to the desired time. · During the same time, the rotating angle of the timer knob of the period from 35 to 10 minute is smaller than that of the period from 10 to 0 minute owing to the dual speed of the timer motor. Microwave energy will be turned off automatically when the timer point to "OFF". Then take out foods. · To prevent the oven operating with the door open, your microwave oven is fitted with safety door interlock switches. If you wish to inspect the food during the cooking time, simply open the door.

The oven will automatically stop cooking. To continue cooking, you simply close the door. · If you wish to stop cooking during the cooking, simply turn the timer knob the point "OFF". @@@@ · Never touch the oven window and metal interior of the oven oven surface. @@A : No.

The metal screen bounces back the energy to the oven cavity. The holes are made to allow light to pass through. They do not let microwave energy pass through. SPECIFICATIONS POWER SUPPLY MICROWAVE POWER CONSUMPTION GRILL COMBINATION MICROWAVE ENERGY OUTPUT MICROWAVE FREQUENCY OUTSIDE DIMENSIONS (WXHxD) CAVITY DIMENSIONS (WXHxD) NET WEIGHT TIMER POWER SELECTIONS CAVITY VOLUME 230V~50Hz, SINGLE PHASE WITH EARTHING 1200 W 1100 W 2200 W 800W 2450MHz 465X279X360mm 290X220X306mm APPROX. 13.4Kg 35 min. DUAL SPEED 5 LEVELS 0.7 Cu.Ft. \* Specifications are subject to change without notice. IMPORTANT The wires in this mains lead are coloured in accordance with the following code. Green-and-yellow : Earth Blue : Neutral Brown : Live As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The wire which is coloured green-and-yellow must be connected to the terminal in the plug which is marked with the letter 'E' or by the earth symbol or green-and-yellow. The wire which is coloured blue must be connected to the terminal which is marked with the letter 'N' or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter 'L' or coloured red. WARNING: This appliance must be earthed.

7.



[You're reading an excerpt. Click here to read official DAEWOO KOG-3705 user guide](http://yourpdfguides.com/dref/3403123)  
<http://yourpdfguides.com/dref/3403123>