



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO KOG-374R. You'll find the answers to all your questions on the DAEWOO KOG-374R in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual DAEWOO KOG-374R**  
**User guide DAEWOO KOG-374R**  
**Operating instructions DAEWOO KOG-374R**  
**Instructions for use DAEWOO KOG-374R**  
**Instruction manual DAEWOO KOG-374R**



[You're reading an excerpt. Click here to read official DAEWOO KOG-374R user guide](http://yourpdfguides.com/dref/3402995)  
<http://yourpdfguides.com/dref/3402995>

**Manual abstract:**

@@@@@(e) WARNING : Liquids or other foods must not be heated in sealed containers since they are liable to explode. (f) WARNING : Only allow children to use the oven without supervision when adequate TABLE OF CONTENTS PRECAUTIONS .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*1 EARTHING INSTRUCTIONS .....*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*..... 2 INSTALLATION..*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*..... 2 SPECIFICATIONS .*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*3 IMPORTANT .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*3 IMPORTANT SAFETY INSTRUCTIONS.....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*4 FEATURES DIAGRAM .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... *5 OPERATION PROCEDURE..*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

... *7 CONTROLS ..*

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.... *8 SETTING THE CLOCK .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... 8 WEIGHT DEFROSTING ....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

. 8 TIME DEFROSTING....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

... 9 COOKING IN ONE STAGE..

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

..... 9 GRILL COOKING.

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... *10 COMBI COOKING.*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... *10 EASY COOK ...*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.... *11 AUTO COOK.....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

.....  
.....

.....  
*. 11 CHILD SAFETY LOCK....*

.....  
.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.. 12 TO STOP THE OVEN WHILE THE OVEN IS OPERATING.....*

.....  
.....  
.....

.....  
.....  
.....

*... 12 COOKING UTENSILS.....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*13 CARE AND CLEANING .....*

.....  
.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.... 13 BEFORE YOU CALL FOR SERVICE .....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

. 14 QUESTIONS AND ANSWERS .....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 14 1 KOG-374ROS(;)2002.12.

**3112:19PM 2 EARTHING INSTRUCTIONS** This appliance must be earthed. In the event of an electrical short circuit, earthing reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a earthing wire with a earthing plug. The plug must be plugged into an outlet that is properly installed and earthed. **WARNING:** Improper use of the earthing plug can result in a risk of electric shock.

Consult a qualified electrician or serviceman if the earthing instructions are not completely understood, or if doubt exists as to whether the appliance is properly earthed. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade earthing plug, and a 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord should be equal to or greater than the electrical rating of the appliance.

**INSTALLATION 1** Steady, flat location set on a steady, flat surface. This oven is designed for counter top use only.

This oven should be space behind 2 Leave vents should be and side All air kept a clearance. If all vents are covered during operation, the oven may overheat and, eventually, oven failure. from radio and TV sets 3 Away television reception and radio interference may result if the oven is located close to Poor a TV, Radio antenna, feeder and so on. Position the oven as far from them as possible. from heating 4 Away the oven away appliance and water taps when choosing a place to position it, or the insulation might Keep from hot air, steam or splash be adversely affected and breakdowns occur. 5 Power supply power source. This oven requires a current of approximately 11 amperes, 230V 50Hz. · Check your local · Power supply cord is about 1.4 meters long. · The voltage used must be the same as specified on this oven.

Using a higher voltage may result in a fire or other accident causing oven damage. Using low voltage will cause slow cooking. We are not responsible for damage resulting from use of this oven with a voltage of ampere fuse other than those specified. · If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. oven after unpacking for 6 Examine the door, Broken door, A dent in any damage such as: are visible, **DO NOT INSTALL**, and notify A misaligned cavity. If any of the above dealer immediately. the oven if it is colder than 7 Do not operated during delivery in cold weather.) room temperature. room temperature before operating. (This may occur Allow the oven to become 8 The minimum height of free space necessary above the top surface of the oven is 100mm.

**2 KOG-374ROS(;)2002.12.3112:19PM 3 SPECIFICATIONS POWER SUPPLY MICROWAVE POWER CONSUMPTION GRILL COMBINATION MICROWAVE ENERGY OUTPUT MICROWAVE FREQUENCY OUTSIDE DIMENSIONS (WXHXD) CAVITY DIMENSIONS (WXHXD) NET WEIGHT TIMER POWER SELECTIONS CAVITY VOLUME** \* Specifications are subject to change without notice. 230V~50Hz, SINGLE PHASE WITH EARTHING 1200 W 1050 W 2200 W 800W 2450MH<sub>z</sub> 465X279X360mm 290X220X306mm APPROX. 13.

7Kg 59 min. 00 sec. 5 LEVELS 0.7 Cu.Ft.

**IMPORTANT** The wires in this mains lead are coloured in accordance with the following code. Green-and-yellow : Earth Blue : Neutral Brown : Live As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The wire which is coloured green-and-yellow must be connected to the terminal in the plug which is marked with the letter 'E' or by the earth symbol or green-and-yellow. The wire which is coloured blue must be connected to the terminal which is marked with the letter 'N' or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter 'L' or coloured red. 3 KOG-374ROS(;)2002.12.3112:19PM 4

**IMPORTANT SAFETY INSTRUCTIONS WARNING :** To prevent fire, burns, electric shock and other warnings: Listed below are, as with all appliances, certain rules to follow and safeguards to assure top performance from this oven: 1. Do not use the oven for any reason other than food preparation, such as for drying clothes, paper, or any other nonfood items or for sterilizing purposes. 2. Do not use the oven when empty, this could damage the oven.

3. Do not use the oven cavity for any type of storage, such as papers, cookbook, cookware, etc. 4. Do not operate the oven without the glass tray in place. Be



sure it is properly sitting on the rotating base. 5. Make sure you remove caps or lids prior to cooking when you cook food sealed in bottles. 6. Do not put foreign material between the oven surface and door. It could result in excessive leakage of microwave energy.

7. Do not use recycled paper products for cooking. They may contain impurities which could cause sparks and/or fires when used during cooking. 8. Do not pop popcorn unless popped in a microwave approved popcorn popper or unless it's commercially packaged and recommended especially for microwave ovens.

@@Do not use oil unless specified by the manufacturer. 9. @@10. Do not pop popcorn longer than the manufacturer's directions. (popping time is generally below 3 minutes).

@@Also, the cooking tray can become too hot to handle or may break. 11. @@12. @@13. @@14. @@@@15. @@16. Keep the waveguide cover clean at all times. Wipe the oven interior with a soft damp cloth after each use. @@17.

@@18. @@@@2. Reflector (Insulator Heater) 3. Heating Element 4. Oven cavity 5. Safety interlock system 6. Metal Rack 7. @@This is to remain in the oven for all cooking. 8. @@9.

Glass cooking tray - Made of special heat resistant glass. Food in a proper receptacle is placed on this tray for cooking. 10. Door viewing screen - Allows viewing of food. @@11.

Door hook - When the door is closed, it will automatically shut off. @@Dinner Plate 2. Soup 3. Beverage 4. @@@@13.

Grill/Combi- Used to cook grill/combi. 14. Power/Def.- Used to set power level. Used to ded 24 hour clock system, this digital clock allows you to set from 0:00 to 23:59. WEIGHT DEFROSTING WEIGHT DEFROST lets you easily defrost food by eliminating guesswork in determining defrosting time.



[You're reading an excerpt. Click here to read official DAEWOO KOG-374R user guide](http://yourpdfguides.com/dref/3402995)  
<http://yourpdfguides.com/dref/3402995>

@@Follow the steps below for easy defrosting. 1. Press Power/Def. button.

The DEF. @@The display will show what you selected. Power/Def. X 6 2. Turn the dial knob to adjust the defrosting weight. 3. @@indicator starts blinking to show the oven is in the DEFROST mode. The display counts down the time to show you how much defrosting time is left in the DEFROST mode. The oven beeps during the defrosting cycle to signal that the food needs to be turned or rearranged. When the defrosting time ends, you will hear 3 beeps.

8 KOG-374ROS(ç)2002.12.3112:19PM 9 TIME DEFROSTING When TIME DEFROST is selected, the automatic cycle divides the defrosting time into periods of alternating defrost and stand times by cycling on and off. 1. Press Power/Def. button. The DEF. indicator appears and " : 0" is displayed. Power/Def. X7 2.

Turn the dial knob to adjust the defrosting time. The display will show what you selected. NOTE: Your oven can be programmed for 59 minutes 00 seconds. (59:00) 3. Press Start button. Start When you press Start button, the DEF. indicator starts blinking to show the oven is the DEFROST mode. The display counts down the time to show you how much defrosting time is left in the DEFROST mode. The oven beeps during the defrosting cycle to signal that the food needs to be turned or rearranged. When the defrosting time ends, you will hear 3 beeps.

COOKING IN ONE STAGE Power X3 1. Press Power button. (Select the desired power level.) The M/W indicator appears and the display will show what you selected. This example shows power level 6. NOTE: If step 1 is omitted, the oven will cook at full power. 2. Turn the dial knob to adjust the cooking time. The display will show what you selected. NOTE: Your oven can be programmed for 59 minutes 00 seconds.

(59:00) 3. Press Start button. Start When you press Start pad, the M/W indicator starts blinking to show the oven is cooking. The display counts down the time to show how much cooking time is left. When the cooking time ends, you will hear 3 beeps.

NOTE: Using lower power levels increases the cooking time which is recommended for foods such as cheese, milk and slow cooking of meats. 9

KOG-374ROS(ç)2002.12.3112:19PM 10 GRILL COOKING This function allow you to brown food quickly. The heating element is located in the top of the oven.

There is no pre-heating the oven for grill cooking. Place food inside the oven when setting the controls. 1. Press Grill/Combi button. The Grill indicator lights and " : 0" is displayed. Grill/Combi 2. Turn the dial knob to adjust the cooking time. The display will show what you touched. NOTE: Time can be set up to 30 minutes. 3.

Press Start button. When you press Start button, the Grill indicator starts blinking to show the oven is cooking. The display counts down the time to show how much cooking time is left. When the cooking time ends, you will hear 3 beeps. COMBI COOKING The oven has combination mode which cooks food with heater and microwave at the same time. The combination mode accelerates the cooking process. 1. Press Grill/Combi button. The Grill indicator lights and " : 0" is displayed. Grill/Combi 2.

Press Grill/Combi button once more. 3. Turn the dial knob to adjust the cooking time. The Combi indicator lights and " : 0" is displayed. The display will show what you touched.

NOTE: Time can be set up to 59 minutes 00 seconds. (59:00) 4. Press Start button. When you press Start button, the Combi indicator starts blinking to show the oven is cooking. The display counts down the time to show how much cooking time is left.

When the cooking time ends, you will hear 3 beeps. 10 KOG-374ROS(ç)2002.12.3112:19PM 11 EASY COOKING EASY COOK allows you to reheat for 30 seconds at 100% (full power) by simply pressing the Easy cook button. By repeatedly pressing the Easy cook button, you can also extend reheating time to 5 minutes by 30 seconds. 1. Press Easy cook button. When you press Easy cook button, ":30" appears. After 1.5 seconds, the oven starts reheating.

When the cooking time ends, you will hear 3 beeps. Easy cook AUTO COOK AUTO COOK allows you to cook or reheat many of your favorite foods by repeatedly touching Auto cook button. 1. Press Auto cook button. When you press Auto cook button once, "AC-1" is displayed. By repeatedly pressing this button, you can select one of the four menu programs as shown in the chart below. The display will show what you selected. Auto cook 2. Turn the dial knob to adjust the desired quantity. Press Autocook Food button once Display Weight 350g 450g 350g 450g Directions Put foods on the microwave plate and cover with vented plastic wrap.

Pour soup in microwave bowl or mug. Stir before serving. Dinner Plate AC-1 Soup twice AC-2 1 CUP (200ml) Pour beverage in microwave mug and place it on the Beverage three times AC-3 2 CUPS (200mlx2) turntable. Do not cover. 3 CUPS (200mlx3) Stir before serving.

200g Fresh vegetable four times AC-4 400g Wash and put in casserole. Add no water if vegetables have just been washed. Cover tender vegetables with lid and stir after cooking. When you press Start button, the display changed into cooking time and the oven starts cooking. When the cooking time ends, you will hear 3 beeps.

3. Press Start button. Start 11 KOG-374ROS(ç)2002.12.3112:19PM 12 CHILD SAFETY LOCK The safety lock prevents unwanted oven operation such as by small children. To set, press and hold Stop/Clear for 3 seconds, and a beep sounds. Each time a pad(except Stop/Clear) is touched, "LOC" is displayed. To cancel, press and hold Stop/Clear for 3 seconds, and a beep sounds. TO STOP THE OVEN WHILE THE OVEN IS OPERATING 1. Press Stop/Clear button.

· You can restart the oven by pressing Start button. · Press Stop/Clear button once more to erase all instructions. · You must enter in new instructions. 2. Open the door. @@Microwave energy is produced by high frequency radio waves. @@@@@@Dishes with metal trim of any type-should not be used. This will cause sparking. 2. Glass or ceramic heat proof dishes-excellent for microwave cooking.

3. China dishes and plates-without metal trim may be used to cook and heat individual portions of food. 4. Wood or straw-use only for short period, wood contains some moisture and the microwave energy may cause the wood to dry out and crack. 5.

Aluminum foil-may be used in very small pieces for shielding only. Any aluminum foil used should never be closer than 2.5cm from side walls of oven. 6. Plastic-most heat resistant plastic dinnerware may be used for heating food.

However polyethylene, melamine, phenol are unsuitable for use in the oven. They become hot in the microwave. 7. Wax paper-use as a cover to avoid spatters. 8. Metal-in general, metal utensils should not be used in microwave oven. CARE AND CLEANING Although your oven is provided with safety features, it is important to observe the following: 1. It is important not to defeat or tamper with safety interlocks.



[You're reading an excerpt. Click here to read official DAEWOO](#)

[KOG-374R user guide](#)

<http://yourpdfguides.com/dref/3402995>

2. Do not place any object between the oven front face and the door or allow residue to accumulate on sealing surfaces.

Wipe the sealing area frequently with a mild detergent, rinse and dry. Never use abrasive powders or pads. 3. When opened, the door must not be subjected to strain, for example, a child hanging on an opened door or any load could cause the oven to fall forward to cause injury and also damage to the door. Do not operate the oven if it is damaged, until it has been repaired by a trained service technician. It is particularly important that the oven closes properly and that there is no damage to the: i) Door(bent) ii) Hinges and Hooks(broken or loosened) iii) Door seals and sealing surfaces. 4. The oven should not be adjusted or repaired by anyone except a properly trained service technician. 13 KOG-374ROS(ç)2002.12.

3112:19PM `14 BEFORE YOU CALL FOR SERVICE Refer to the following checklist, you may prevent an unnecessary service call. \* The oven doesn't work;

1. Check that the power cord is securely plugged in. 2. Check that the door is firmly closed.

3. Check that the cooking time is set. 4. Check for a blown circuit fuse or tripped main circuit breaker in your house. \* Sparking in the cavity; 1. Check utensils. Metal containers or dishes with metal trim should not be used. 2. Check that metal skewers or foil does not touch the interior walls. If there is still a problem, contact the service station. A list of these stations is included in the oven. DO NOT ATTEMPT TO SERVICE THE OVEN YOURSELF !

QUESTIONS AND ANSWERS \* Q : I accidentally ran my microwave oven without any food in it. Is it damaged? \* A : Running the oven empty for a short time will not damage the oven. However, it is not recommended. \* Q : Can the oven be used with the glass tray or roller guide removed? \* A : No.

Both the glass tray and roller guide must always be used in the oven before cooking. \* Q : Can I open the door when the oven is operating? \* A : The door can be opened anytime during the cooking operation. Then microwave energy will be instantly switched off and the time setting will maintain until the door is closed and START is touched. \* Q : Why do I have moisture in my microwave oven after cooking? \* A : The moisture on the side of your microwave oven is normal. It is caused by steam from cooking food hitting the cool oven surface. \* Q : Dose microwave energy pass through the viewing screen in the door? \* A : No. The metal screen bounces back the energy to the oven cavity. The holes are made to allow light to pass through. They do not let microwave energy pass through. 14 .



[You're reading an excerpt. Click here to read official DAEWOO](http://yourpdfguides.com/dref/3402995)

[KOG-374R user guide](http://yourpdfguides.com/dref/3402995)

<http://yourpdfguides.com/dref/3402995>