



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO KOG-8465. You'll find the answers to all your questions on the DAEWOO KOG-8465 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DAEWOO KOG-8465
User guide DAEWOO KOG-8465
Operating instructions DAEWOO KOG-8465
Instructions for use DAEWOO KOG-8465
Instruction manual DAEWOO KOG-8465

DAEW

MICRO

OPERATING
INSTRUCTIONS



[You're reading an excerpt. Click here to read official DAEWOO KOG-8465 user guide](http://yourpdfguides.com/dref/3403107)
<http://yourpdfguides.com/dref/3403107>

Manual abstract:

It is important not to defeat or tamper with the safety interlocks. (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces. (c) Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the: (1) Door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces. (d) The oven should not be adjusted or repaired by anyone except for qualified service personnel. TABLE OF CONTENTS PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY TABLE OF CONTENTS 1 1 1. Read all instructions before use 2. Read and follow the specific "P POSSIBLE EXPOSURE TO E ENERGY", found on page 1. 3. This appliance must be ear properly installation instructions 4.

Install or locate this appliance o provided installation instruction 5. Some products such as w containers-for example, close and should not be heated in thi 6. Use this appliance only for its in this manual. 7. As with any appliance, close when used by children. 8. Do not operate this appliance i plug, if it is not working pro damaged or dropped. 9. This appliance should be se service personnel. Contact service facility for examination, 10.

Do not cover or block any open 11. Do not use outdoors. 12. Do not immerse cord or plug in 13. Keep cord away from heated s 14. Do not let cord hang over edge 15. When cleaning surfaces of d together on closing the do abrasive soaps or detergents soft cloth. 16. To reduce the risk of fire in the (a) Do not overcook food. Care paper, plastic, or other com placed inside the oven to fa (b) Remove wire twist-ties from in oven.

@@17. @@@@To prevent this possibility the following steps should be taken: a. Avoid using straight sided containers with narrow necks. b. Do not over heat. c. @@@. After heating, allow to stand in the oven for a short time, stir or shake them again carefully and check the temperature of them before consumption to avoid burns (especially, contents of feeding bottles and baby food jars). 1. Eggs Never cook eggs in their shells.

Steam will build up inside the shell during cooking and the egg will explode. If you want to cook or reheat eggs which have not been broken up by scrambling or mixing, you must always pierce the yolks or these will also explode. You should slice shelled hard boiled eggs before you reheat them in your microwave oven. 2. Piercing Always pierce food which has a skin or membrane, for example, potatoes, tomatoes, apples, sausages etc.

if you don't pierce them, steam will build up inside and they may explode. 3. Lids Always remove the lids of jars and containers and take away food containers, before you cook using your microwave oven. If you don't, then steam and pressure might build up inside and cause an explosion even after the microwave cooking has stopped. This appliance must be earthed.

In an escape wire for the electric curr plug must be plugged into an outlet WARNING -Improper use of the e Consult a qualified e doubt exists as to wh If it is necessary to u and a 3-slot recepta should be equal to or INSTALLATION 1 2 3 4 5 Steady, flat location This oven should be set on Leave space behind and s Keep the oven at least 5cm ventilation. Away from radio and TV s Poor television reception an and so on. Position the oven as far from Away from heating applian Keep the oven away from adversely affected and brea Power supply · Check your local power so · Power supply cord is abou · The voltage used must be accident causing oven dam resulting from use of this o · Should the cable need cha Examine the oven after un A misaligned door, Broken immediately. Do not operate the oven if (This may occur during deliv WHICH UTENSIL CAN BE USED IN THE OVEN? Before use, the user should check that tensils are suitable for use in microwave ovens. Grill cooking No Yes Yes Yes Yes No Yes (2) Yes Yes (4) Yes No Microwave cooking Yes (1) Yes Yes (1) Yes Yes Yes (2) Yes (2) Yes (3) No No Yes Combined cooking No Yes Yes (1) Yes Yes No Yes (2) Yes Yes (4) No No Utensils made of china and ceramic excellent to use in your microwave oven. Most types of glass are also very good. Lead crystal glass can crack and should therefore, not be used. @@@@polypropene and polyamide. Some plastic materials, Eg. melamine, will be heated by the microwave, and be damaged.

@@@@Let the oven work on full power for one minute. A suitable container will only be lukewarm. Metal containers, Eg. saucepans or frying pans should not be used in microwave ovens. Nor should plates or vessels with decorations be used since metal Eg. @@@@Without metal parts or metal trims. 2. Some plastics are heat-proof only to certain temperatures. Check carefully! 3. @@@.

@@18 kg (40 lbs) 60 min. @@Never put other utensils directly on the roller guide. Use a m soft cloth to clean the roller guide. @@@@@@cooking. -Used to select a function before the cooking.

1) M/W OVEN-Used to heat food with microwave. 2) GRILL-Used to browning food with grill heater. @@Timer 60 50 40 30 20 10 9 8 7 6 1. @@Place food inside oven. 2.

Set POWER knob to ap 3. @@@@SYMBOL 2. GRILL COOKING · Grilling in this oven is similar to conventional broiling. · There is no need to preheat the oven for griling. 1. Place food on the Metal Rack, and set it on the Tray. 2. Set POWER knob to GRILL position. 3. Set TIMER knob to the cooking time.

3. COMBINATION COOKING · This oven has 3-cooking levels in · You can select these levels by PO (COMBI 1) Grill + M/W Low (COM Grill + M/W Med Power Timer 60 50 40 30 20 10 9 8 7 6 0 1 2 3 4 5 1. Place food on the Meta 2. Set POWER knob to SI 3. Set TIMER knob to the Power EXAMPLE: To Grill hamburgers, steaks, kabobs, etc. use the trays this way: METAL RACK NOTE: When using SIMULTANE To use: · Place food on Metal Rack. · Place the Metal Rack directly on the Turntable. · Coat the Metal Rack and Tray wit · Be careful when putting in or takin · Do not open the door so often, th time. · Never touch the oven window and The temperature inside the oven a · When using these modes, be care TURNTABLE NOTE: When using Grill mode. GENERAL COOKING HINTS KEEP THE OVEN CLEAN TURNTABLE AND ROLLER GUIDE It is occasionally necessary to remove the glass tray for cleaning.

Wash the glass tray in warm water or in a dish washer. The roller guide and oven cavity floor should be cleaned regularly of the avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent water or window cleaner and dry. The roller guide may be washed with mild water or a dish washer. 0 1 2 3 4 5 6 20 10 9 8 7 BEFORE CALLING You can often correct operating operating problem in the chart be If the microwave/grill oven still d PROBLEM

Ov Arc Uneven Ove Unde Power Timer 60 50 40 30 Note: Do not use any other Turntable in the oven. Do not operate the oven without the Turntable and Roller Guide Properly in place.



[You're reading an excerpt. Click here to read official DAEWOO](#)

[KOG-8465 user guide](#)

<http://yourpdfguides.com/dref/3403107>

DOOR While the oven door is still warm, any splatters or food soils should be wiped off with a damp cloth or sponge. Rinse with water and wipe dry with a cloth. If steam or condensation appears around this area, wipe with a cloth. @@@@Dry with a soft cloth.

These areas can also be cleaned by using plastic or nylon scouring pads recommended for use of Teflon and Silverstone. For hard to remove soil, use a mild non-abrasive cleaner. Use on the stainless steel areas, turntable and roller guide only. SOLUTION Is powe EXTERIOR CONTROL PANEL Excercise care when cleaning this area. To clean, wipe the panel with a slightly dampened cloth, using only water. Wipe dry. Do not scrub this area or use any sort of chemical cleaner. Avoid use of excess water. OUTSIDE SUFACE The outside surfaces should be cleaned with soap and water, rinsed and dried with a soft cloth. Do not use any type of household or abrasive cleanser.*

Note: DO NOT USE ANY TYPE OF OVEN CLEANER ON ANY PART OF THE OVEN. It will damage some of the interior and exterior surfaces of the oven.

QUESTIONS AND ANSWERS Q: I accidentally ran my microwave oven without any food in it. is it damaged? A: We do not recommend to operating the micro.



[You're reading an excerpt. Click here to read official DAEWOO](#)

[KOG-8465 user guide](#)

<http://yourpdfguides.com/dref/3403107>