




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO KOR-6167. You'll find the answers to all your questions on the DAEWOO KOR-6167 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DAEWOO KOR-6167
User guide DAEWOO KOR-6167
Operating instructions DAEWOO KOR-6167
Instructions for use DAEWOO KOR-6167
Instruction manual DAEWOO KOR-6167

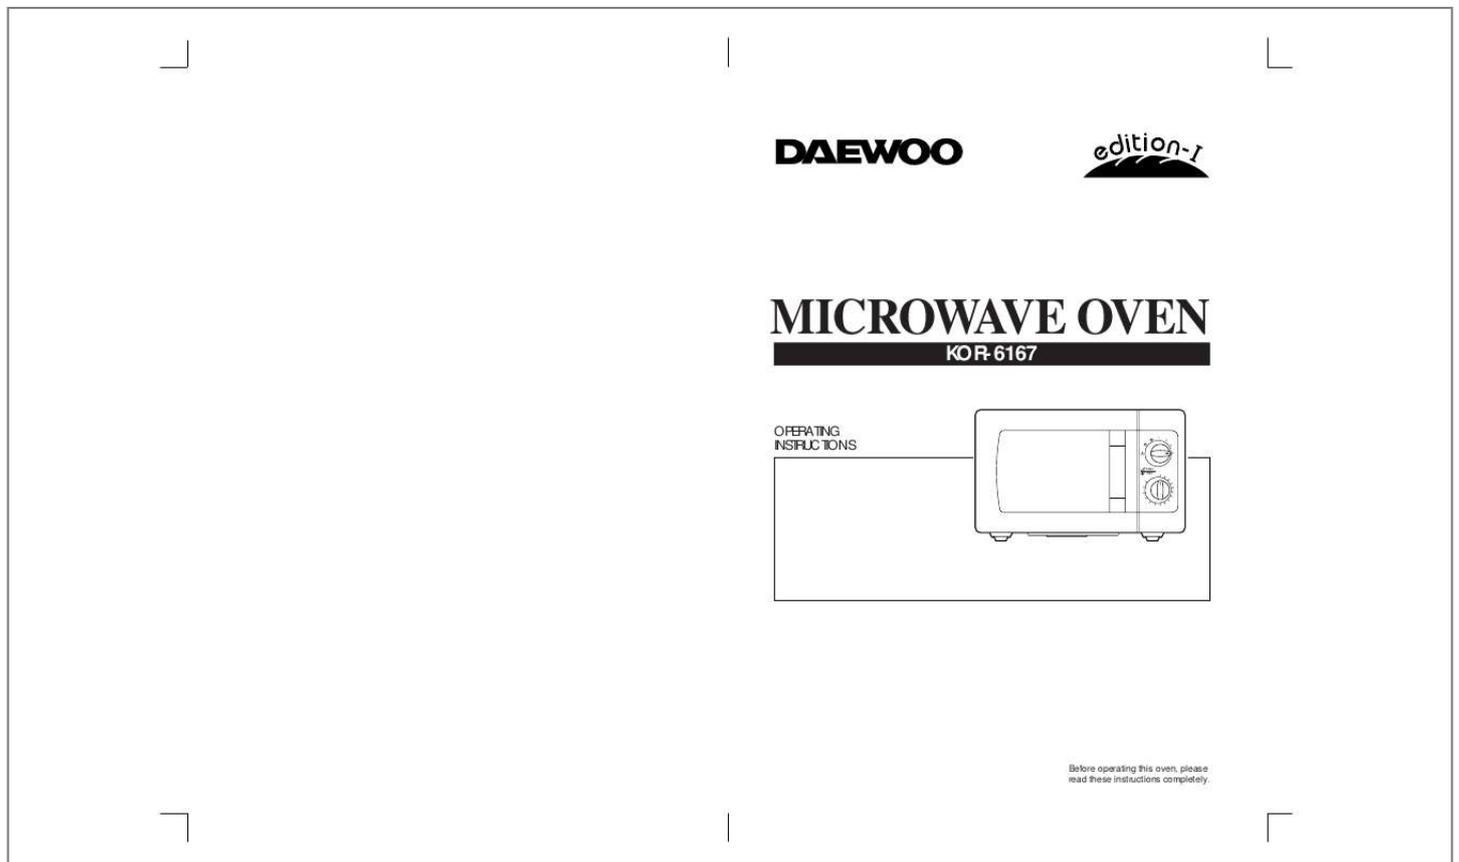

[You're reading an excerpt. Click here to read official DAEWOO KOR-6167 user guide](http://yourpdfguides.com/dref/3403099)
<http://yourpdfguides.com/dref/3403099>

Manual abstract:

EARTHING INSTRUCTIONS PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY (a) Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks. (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces. (c) Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces. (d) The oven should not be adjusted or repaired by anyone except properly qualified service personnel. This appliance must be earthed. In the event of an electrical short circuit, earthing reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a earthing wire with a earthing plug. The plug must be plugged into an outlet that is properly installed and earthed.

WARNING: Improper use of the earthing plug can result in a risk of electric shock. Consult a qualified electrician or serviceman if the earthing instructions are not completely understood, or if doubt exists as to whether the appliance is properly earthed. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade earthing plug, and a 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord should be equal to or greater than the electrical rating of the appliance. **INSTALLATION** 1 Steady, flat location set on a steady, flat surface.

This oven is designed for counter top use only. @@@@ Position the oven as far from them as possible. from heating and water 4 Away the oven away appliance air, steam or taps when choosing a place to position it, or the insulation Keep from hot splash might be adversely affected and breakdowns occur.

TABLE OF CONTENTS PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

.....	1 TABLE OF
CONTENTS.....	1 EARTHING
INSTRUCTIONS.....	2 INSTALLATION
.....	2 SAFETY INSTRUCTIONS FOR GENERAL USE
.....	3 FEATURES
DIAGRAM.....	4 OPERATION
.....	5 COOKING UTENSILS
.....	5 CARE AND CLEANING.....
.....·.....	7 5 Power supply
.....	power source.



[You're reading an excerpt. Click here to read official DAEWOO KOR-6167 user guide](http://yourpdfguides.com/dref/3403099)
<http://yourpdfguides.com/dref/3403099>

@@. Power supply cord is about 1.

1 meters long. · The voltage used must be the same as specified on this oven. Using a higher voltage may result in a fire or other accident causing oven damage. Using low voltage will cause slow cooking. We are not responsible for damage resulting from use of this oven with a voltage of ampere fuse other than those specified. · This appliance is supplied with cable of special type, which, if damaged, must be repaired with cable of same type. Such a cable can be purchased from DAEWOO and must be installed by a Qualified Person. oven after unpacking for 6 Examine the door, Broken door, A dent in any damage such as: are visible, DO NOT INSTALL, and A misaligned cavity. If any of the above notify dealer immediately. than room temperature.

7 Do not operate the oven if it is in colder weather.) Allow the oven to become room temperature before (This may occur during delivery cold operating. 1 2 SAFETY INSTRUCTIONS FOR GENERAL USE Listed below are, as with all appliances, certain rules to follow and safeguards to assure top performance from this oven: 1. Do not use the oven for any reason other than food preparation, such as for drying clothes, paper, or any other nonfood items or for sterilizing purposes. 2. Do not use the oven when empty, this could damage the oven. 3. Do not use the oven cavity for any type of storage, such as papers, cookbook, cookware, etc. 4. Do not operate the oven without the glass tray in place.

Be sure it is properly sitting on the rotating base. 5. Make sure you remove caps or lids prior to cooking when you cook food sealed in bottles. 6. Do not put foreign material between the oven surface and door.

It could result in excessive leakage of microwave energy. 7. Do not use recycled paper products for cooking. They may contain impurities which could cause sparks and/or fires when used during cooking. 8.

Do not pop popcorn unless popped in a microwave approved popcorn popper or unless it's commercially packaged and recommended especially for microwave ovens. Microwave popped corn produces a lower yield than conventional popping; there will be a number of unpopped kernels. Do not use oil unless specified by the manufacturer. 9. Do not cook any food surrounded by a membrane, such as egg yolks, potatoes, chicken livers, etc., without first piercing them several times with a fork. 10. Do not pop popcorn longer than the manufacturer's directions. (popping time is generally below 3 minutes). Longer cooking does not yield more popped corn, it can cause scorchings and fire.

Also, the cooking tray can become too hot to handle or may break. 11. Should the microwave oven emit smoke in quantity to indicate a fire, keep the oven door shut, switch the appliance off and disconnect the mains lead from the outlet. 12. When flammable food containers are used in the oven (e.g. @ @13. @ @14. @ @ @ @ @ @ @ @3 Oven cavity. @ @5 Safety interlock system.

6 Door viewing screen - Allows viewing of food. @ @7 Glass cooking tray - Made of special heat resistant glass. Food in a proper receptacle is placed on this tray for cooking. @ @9 Knob V.P.

C - Used to select a microwave power level. @ @the food in a suitable 2 After placing place during cooking. utensil, open the oven door and put it on the glass tray. Glass tray must always be in 3 Shut the door. it is firmly closed.

@ @It is important not to defeat or tamper with safety interlocks. 2. @ @ @ @Never use abrasive powders or pads. 3. @ @ @ @ @ @4. @ @ * The oven doesn't work; 1. Check that the power cord is securely plugged in. 2. Check that the door firmly closed. 3.

Check that the cooking time is set. 4. @ @ * Sparking in the cavity; 1. Check that utensils are metal containers or dishes with metal trim. 2. Check that metal skewers touch the interior walls. @ @ @ @Then take out foods. @ @ @ @The oven will automatically stop the cooking. · To continue cooking, you simply close the door. · If you wish to stop the cooking during the cooking simply turn the timer knob the point "OFF".

Cooking can be reset at any time during the cooking cycle by only turning the timer knob. · Do not let the timer continue to operate after removing food.

QUESTIONS AND ANSWERS * Q : I accidentally ran my microwave oven without any food in it. Is it damaged? * A : Running the oven empty for a short time will not damage the oven. However, it is not recommended.

* Q : Can the oven be used with the glass tray or roller guide removed? * A : No. Both the glass tray and roller guide must always be used in the oven before cooking. * Q : Can I open the door when the oven is operating? * A : The door can be opened anytime during the cooking operation. Then microwave energy will be instantly switched off and the time setting will maintain until the door is closed. * Q : Why do I have moisture in my microwave oven after cooking? *

A : The moisture on the side of your microwave oven is normal.

It is caused by steam from cooking food hitting the cool oven surface. * Q : Does microwave energy pass through the viewing screen in the door? * A : No.

The metal screen bounces back the energy to the oven cavity. The holes are made to allow light to pass through. They do not let microwave energy pass through. COOKING UTENSILS Microwave energy is produced by high frequency radio waves. They are reflected from metal, but will pass through most cooking utensils without heating them. As the waves come into contact with the food, they are converted into heat energy. Listed below are the suggested cooking utensils for this microwave oven and when to use them. 1.

Dishes with metal trim of any type-should not be used. This will cause sparking. 2. Glass or ceramic heat proof dishes-excellent for microwave cooking. 3.

China dishes and plates-without metal trim may be used to cook and heat individual portions of food. 4. @ @5. Aluminum foil-may be used in very small pieces for shielding only. @ @6.

@ @ @ @They become hot in the microwave. 7. Wax paper-use as a cover to avoid spatters. 8. Metal-In general, metal utensils should not be used in microwave oven.

5 6 SPECIFICATIONS POWER SUPPLY MICROWAVE POWER CONSUMPTION OUTPUT POWER FREQUENCY OUTSIDE DIMENSIONS (W X H X D) CAVITY DIMENSIONS (W X H X D) NET WEIGHT TIMER POWER SELECTIONS 230V~240V 50Hz, SINGLE PHASE WITH EARTHING 1200 W 800 W(IEC 705) 2450MHz 465 X 274 X 377 mm 290 X 200 X 290 mm APPROX. 13.5 Kg 35 min. DUAL SPEED 7 LEVELS * Specifications subject to change without notice. IMPORTANT The wires in this mains lead are coloured in accordance with the following code.

Green-and-yellow : Earth Blue : Neutral Brown : Live As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The wire which is coloured green-and-yellow must be connected to the terminal in the plug which is marked with the letter 'E' or by the earth symbol or green-and-yellow. The wire which is coloured blue must be connected to the terminal which is marked with the letter 'N' or coloured black.



[You're reading an excerpt. Click here to read official DAEWOO](#)

[KOR-6167 user guide](#)

<http://yourpdfguides.com/dref/3403099>