




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO KOR-61A5. You'll find the answers to all your questions on the DAEWOO KOR-61A5 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DAEWOO KOR-61A5
User guide DAEWOO KOR-61A5
Operating instructions DAEWOO KOR-61A5
Instructions for use DAEWOO KOR-61A5
Instruction manual DAEWOO KOR-61A5

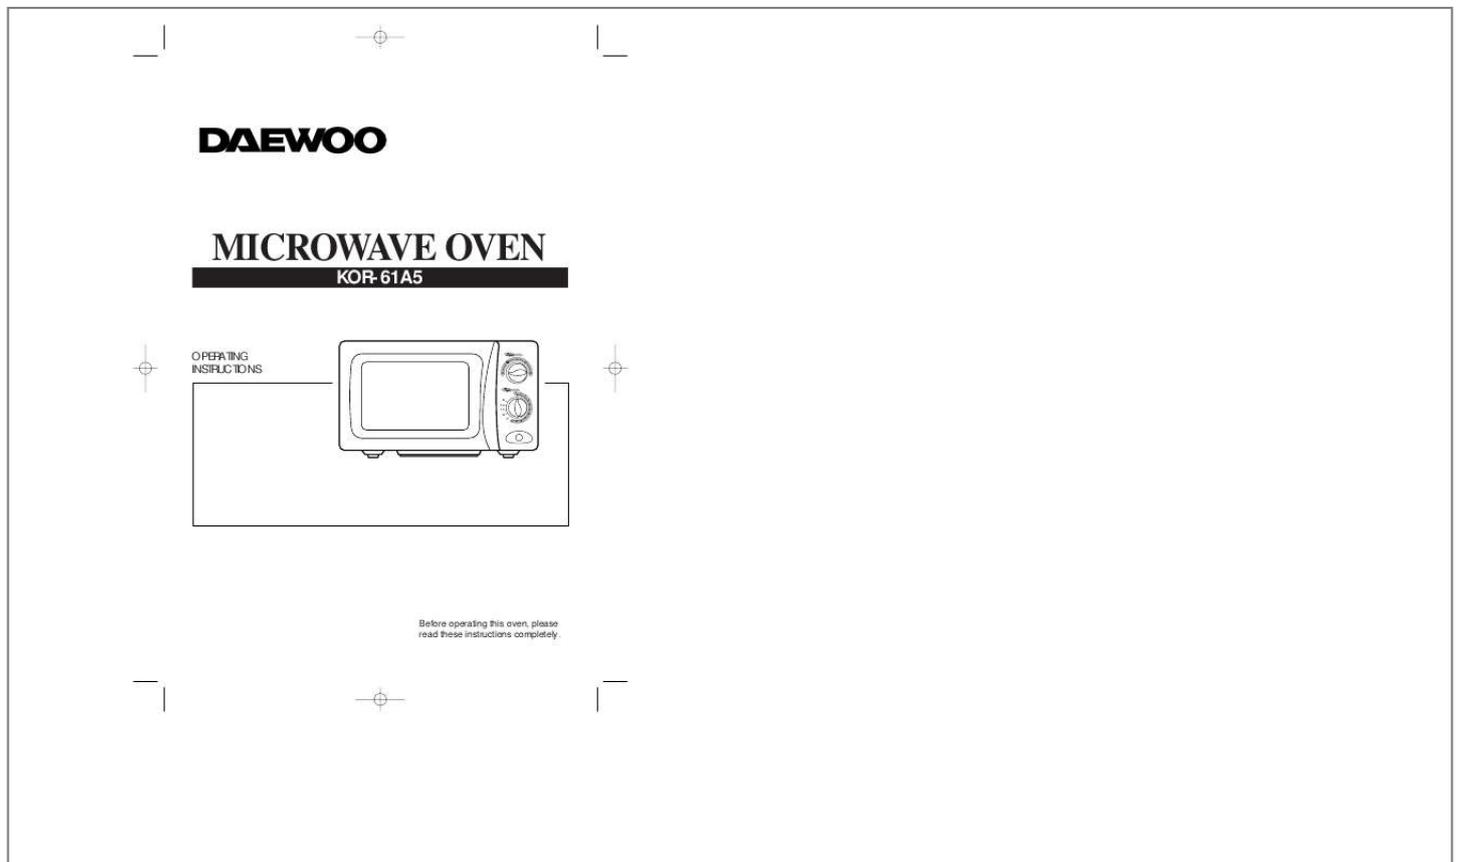

[You're reading an excerpt. Click here to read official DAEWOO KOR-61A5 user guide](http://yourpdfguides.com/dref/3403090)
<http://yourpdfguides.com/dref/3403090>

Manual abstract:

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY (a) Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks. (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces. (c) Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces. @@@@ @@@@ **WARNING:** Improper use of the earthing plug can result in a risk of electric shock.

Consult a qualified electrician or serviceman if the earthing instructions are not completely understood, or if doubt exists as to whether the appliance is properly earthed. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade earthing plug, and a 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord should be equal to or greater than the electrical rating of the appliance.

INSTALLATION 1 Steady, flat location set on a steady, flat surface.

This oven is designed for counter top. This oven should be used only. space behind 2 Leave vents should be clear. If any vents are covered during operation, the oven may overheat and, eventually, the oven will fail. from radio and TV sets 3 Away from television reception and radio interference may result if the oven is located too close to a TV, Radio antenna, feeder and so on. Position the oven as far from them as possible.

from heating and water 4 Away from the oven appliance air, steam or taps when choosing a place to position. Keep from hot splashes it, or the insulation might be adversely affected and breakdowns occur. 5 Power supply power source. This oven requires a current of approximately 5 - Check your local amperes, 230V 50Hz. Power supply cord is about 1.1 meters long.

The voltage used must be the same as specified on this oven. Using a higher voltage may result in a fire or other accident causing oven damage. Using low voltage will cause slow cooking. We are not responsible for damage resulting from use of this oven with a voltage or ampere fuse other than those specified.

This appliance is supplied with a special type of cable, which, if damaged, must be repaired with cable of same type. Such a cable can be purchased from DAEWOO and must be installed by a Qualified Person. @@@@ If any of the above NOT INSTALL, and notify dealer immediately. than room temperature.

@@ 13.5 Kg 35 min.

@@@@ @@@@ 2. Do not use the oven when empty, this could damage the oven. **SYMBOL POWER LEVEL WARM DEFROST MEDIUM MED.**

@@@@ @@@@ The oven will automatically stop cooking. To continue cooking, you simply close the door. @@@@ @@@@ 1. Dishes with metal trim of any type should not be used. This will cause sparking. 2. Glass or ceramic heat proof dishes-excellent for microwave cooking.

3. @@@@ 4. @@@@ 5. Aluminum foil-may be used in very small pieces for shielding only. @@@@ 6.

Plastic-most heat resistant plastic dinnerware may be used for heating food. However polyethylene, melamine, phenol are unsuitable for use in the oven. They become hot in the microwave. 7. Wax paper-use as a cover to avoid spatters.

8. Metal-In general, metal utensils should not be used in microwave oven. 6 **CARE AND CLEANING** Although your oven is provided with safety features, it is important to observe the following: 1. It is important not to defeat or tamper with safety interlocks. 2. Do not place any object between the oven front face and the door or allow residue to accumulate on sealing surfaces. Wipe the sealing area frequently with a mild detergent, rinse and wipe dry. Never use abrasive powders or pads. 3. When opened, the door must not be subjected to strain, for example, a child hanging on an opened door or any load could cause the oven to fall forward to cause injury and also damage to the door.

Do not operate the oven if it is damaged, until it has been repaired by a trained service technician. It is particularly important that the oven closes properly and that there is no damage to the: i) Door (bent) ii) Hinges and Hooks (broken or loosened) iii) Door seals and sealing surfaces. 4. The oven should not be adjusted or repaired by anyone except a properly trained service technician. **BEFORE YOU CALL FOR SERVICE** Refer to following checklist, you may prevent an unnecessary service call. * The oven doesn't work; 1. Check that the power cord is securely plugged in. 2. Check that the door is firmly closed. 3. Check that the cooking time is set. 4. Check for a blown circuit fuse or tripped main circuit breaker in your house. * Sparking in the cavity; 1. Check that utensils are metal containers or dishes with metal trim.

2. Check that metal skewers do not touch the interior walls. If there is still a problem, contact your dealer. **QUESTIONS AND ANSWERS** * Q : I accidentally ran my microwave oven without any food in it. Is it damaged? @@ However, it is not recommended.

@@ * A : No. @@ * Q : Can I open the door when the oven is operating? * A : The door can be opened anytime during the cooking operation. @@ * Q : Why do I have moisture in my microwave oven after cooking? * A : The moisture on the side of your microwave oven is normal. It is caused by steam from cooking food hitting the cool oven surface. * Q : Does microwave energy pass through the viewing screen in the door? * A : No. The metal screen bounces back the energy to the oven cavity. The holes are made to allow light to pass through. They do not let microwave energy pass through. 7.



[You're reading an excerpt. Click here to read official DAEWOO](http://yourpdfguides.com/dref/3403090)

[KOR-61A5 user guide](http://yourpdfguides.com/dref/3403090)

<http://yourpdfguides.com/dref/3403090>