



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO KOR-6305. You'll find the answers to all your questions on the DAEWOO KOR-6305 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DAEWOO KOR-6305
User guide DAEWOO KOR-6305
Operating instructions DAEWOO KOR-6305
Instructions for use DAEWOO KOR-6305
Instruction manual DAEWOO KOR-6305



[You're reading an excerpt. Click here to read official DAEWOO KOR-6305 user guide](http://yourpdfguides.com/dref/3408471)
<http://yourpdfguides.com/dref/3408471>

Manual abstract:

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY (a) Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks. (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces. (c) WARNING : If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person : (1) door (bent), (2) hinges and latches(broken or loosened), (3) door seals and sealing surfaces. (d) WARNING : It is hazardous for anyone other than a competent person to carry out any service or repair operation which involves the removal of a cover which gives protection against exposure to microwave energy. (e) WARNING : Liquids or other foods must not be heated in sealed containers since they are liable to explode. (f) WARNING : Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use. TABLE OF CONTENTS

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY 1

TABLE OF CONTENTS 1

EARTHING INSTRUCTIONS 2

INSTALLATION 2

IMPORTANT SAFETY INSTRUCTION 2

FEATURES DIAGRAM 3

OPERATION 4

COOKING UTENSILS 5

CARE AND CLEANING 5

BEFORE YOU CALL FOR SERVICE 6

QUESTIONS AND ANSWERS 6

SPECIFICATIONS 6

IMPORTANT 7

1 EARTHING INSTRUCTIONS This appliance must be earthed.



[You're reading an excerpt. Click here to read official DAEWOO](#)

[KOR-6305 user guide](#)

<http://yourpdfguides.com/dref/3408471>

In the event of an electrical short circuit, earthing reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a earthing wire with a earthing plug.

The plug must be plugged into an outlet that is properly installed and earthed. **WARNING: Improper use of the earthing plug can result in a risk of electric shock. Consult a qualified electrician or serviceman if the earthing instructions are not completely understood, or if doubt exists as to whether the appliance is properly earthed.** @@@@This oven is designed for counter top use only. @@@@from radio and TV sets: 3 Awaytelevision reception and radio interference may result if the oven is located close to a TV, Radio Poor antenna, feeder and so on.

Position the oven as far from them as possible. from heating 4 Awaythe oven away appliance and water taps when choosing a place to position it, or the insulation Keep from hot air, steam or splash might be adversely affected and breakdowns occur. 5 Pousing the oven. 17. Never heat oil or fat for deep frying as you cannot control the temperature and doing so may lead to overheating and fire.

18. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container. **SAVE THESE INSTRUCTIONS** 3 FEATURES DIAGRAM 32 4 1 9 0 5 78 6 q 1 Safety Interlock System. 2 Door Viewing Screen - Allows viewing of food. The screen is designed so that light can pass through, but not the microwave. 3 Door Hook - When door is closed, it will automatically lock shut. If the door is opened while the oven is operating, magnetron will immediately stop operating. 4 Oven Cavity. 5 Door Seal - Door seal maintains the microwave energy within the oven cavity and prevents microwave leakage. 6 Glass Cooking Tray - Made of special heat resistant glass.

Food in a proper receptacle is placed on this tray for cooking. 7 Roller guide - This must always be used for cooking together with the glass cooking tray. 8 Coupler - This fits over the shaft in the center of the oven's cavity floor. This is to remain in the oven for all cooking. 9 Knob V.P.C - Used to select a microwave power level. 0 Knob timer - Used in setting cooking time for all functions. q Door Release Button - By pushing this button the latch system cuts off all circuits and stops the oven before the door is opened. 4 OPERATION 1 2 3 4 Connect the mains lead to an electrical outlet.

After placing the food in a suitable utensil, open the oven door and put it on the glass tray. Glass tray must always be in place during cooking. Shut the door. Make sure that it is firmly closed. Set the variable power selector to the desired power level.

SYMBOL 130W 440W 610W MAX POWER LEVEL WARM DEFROST MEDIUM MED. HIGH HIGH OUTPUT POWER 17% 33% 55% 77% 100% 5 6 Set the time control by turning the timer knob and then microwave cooking starts. - If turning the timer knob for less than 2 minutes, turn it past 2 minutes and then back to the desired time. @@@@Then take out foods. @@@@The oven will automatically stop the cooking.

- To continue cooking, you simply close the door. @@@@Microwave energy is produced by high frequency radio waves. @@@@I. Dishes with metal trim of any type-should not be used. This will cause sparking. 2. Glass or ceramic heat proof dishes-excellent for microwave cooking. 3. @@4. @@5.

Aluminum foil-may be used in very small pieces for shielding only. @@6. @@@@They become hot in the microwave. 7. Wax paper-use as a cover to avoid spatters. 8. @@@It is important not to defeat or tamper with safety interlocks. 2. @@@@Never use abrasive powders or pads. 3.

When opened, the door must not be subjected to strain, for example, a child hanging on an opened door or any load could cause the oven to fall forward to cause injury and also damage to the door. Do not operate the oven if it is damaged, until it has been repaired by a competent service technician. It is particularly important that the oven closes properly and that there is no damage to the: i) Door(bent) ii) Hinges and Hookes(broken or loosened) iii) Door seals and sealing surfaces. 4. The oven should not be adjusted or repaired by anyone except a properly competent service technician.

5. The oven should be cleaned regularly and any food deposits removed; 6. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation. **BEFORE YOU CALL FOR SERVICE** Refer to following checklist, you may prevent an unnecessary service call. * The oven doesn't work; 1.

Check that the power cord is securely plugged in. 2. Check that the door firmly closed. 3. Check that the cooking time is set. 4. Check for a blown circuit fuse or tripped main circuit breaker in your house. * Sparking in the cavity; 1. Check that utensils are metal containers or dishes with metal trim. 2.

Check that metal skewers touch the interior walls. If there is still a problem, contact the service station. **QUESTIONS AND ANSWERS** * Q : I accidentally ran my microwave oven without any food in it. Is it damaged? A : Running the oven empty for a short time will not damage the oven. However, it is not recommended. * Q : Can the oven be used with the glass tray or roller guide removed? A : No. Both the glass tray and roller guide must always be used in the oven before cooking. * Q : Can I open the door when the oven is operating? A : The door can be opened anytime during the cooking operation. Then microwave instantly switched off and the time setting will maintain until the door is closed. @@@A : The moisture on the side of your microwave oven is normal.

@@@@A : No. The metal screen bounces back the energy to the oven cavity. The holes are made to allow light to pass through. @@@220-240V 50Hz, SINGLE PHASE WITH EARTHING 1200 W 800 W 2450 MHz; 465 X 279 X 360 mm 290 X 220 X 306 mm APPROX. 13 Kg 35 min.

DUAL SPEED 5 LEVELS IMPORTANT The wires in this mains lead are coloured in accordance with the following code. Green-and-yellow : Earth Blue : Neutral Brown : Live As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The wire which is coloured green-and-yellow must be connected to the terminal in the plug which is marked with the letter 'E' or by the earth symbol or green-and-yellow. The wire which is coloured blue must be connected to the terminal which is marked with the letter 'N' or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter 'L' or coloured red. **WARNING: This appliance must be earthed.**

7.



[You're reading an excerpt. Click here to read official DAEWOO](http://yourpdfguides.com/dref/3408471)

[KOR-6305 user guide](http://yourpdfguides.com/dref/3408471)

<http://yourpdfguides.com/dref/3408471>