




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAEWOO KOR-631R. You'll find the answers to all your questions on the DAEWOO KOR-631R in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DAEWOO KOR-631R
User guide DAEWOO KOR-631R
Operating instructions DAEWOO KOR-631R
Instructions for use DAEWOO KOR-631R
Instruction manual DAEWOO KOR-631R

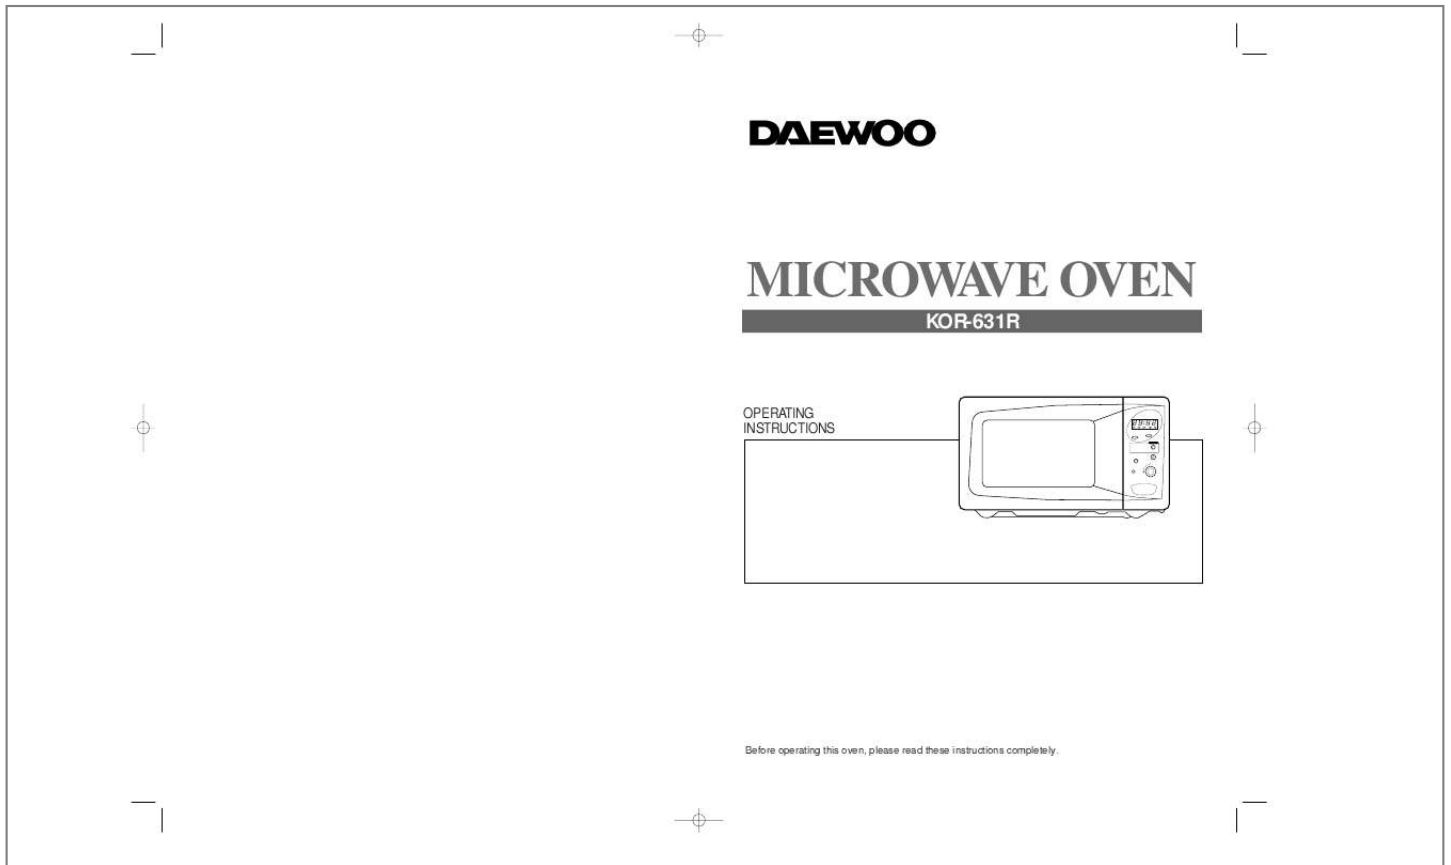

[You're reading an excerpt. Click here to read official DAEWOO KOR-631R user guide](http://yourpdfguides.com/dref/3403083)
<http://yourpdfguides.com/dref/3403083>

Manual abstract:

EARTHING INSTRUCTIONS PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY (a) Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks. (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces. (c) WARNING : If the door or door seals are damaged, the oven must not be operated until it has been repaired by a trained person : (1) door (bent), (2) hinges and latches(broken or loosened), (3) door seals and sealing surfaces. (d) WARNING : It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy. (e) WARNING : Liquids or other foods must not be heated in sealed containers since they are liable to explode. (f) WARNING : Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use. This appliance must be earthed. In the event of an electrical short circuit, earthing reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a earthing wire with a earthing plug.

The plug must be plugged into an outlet that is properly installed and earthed. WARNING : Improper use of the earthing plug can result in a risk of electric shock. @@@@This oven is designed for counter top use only. @@If all vents are covered during operation, the oven may overheat and, eventually, oven failure. 3 Away from radio and TV sets Poor television reception and radio interference may result if the oven is located close to a TV, Radio antenna, feeder and so on.

Position the oven as far from them as possible. 4 Away from heating appliance and water taps Keep the oven away from hot air, steam or splash when choosing a place to position it, or the insulation might be adversely affected and breakdowns occur. 5 Power supply · Check your local power source. This oven requires a current of approximately 6 amperes, 230V 50Hz. · Power supply cord is about 0.

8 meters long. · The voltage used must be the same as specified on this oven. Using a higher voltage may result in a fire or other accident causing oven damage. Using low voltage will cause slow cooking. We are not responsible for damage resulting from use of this oven with a voltage of ampere fuse other than those specified. · If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. TABLE OF CONTENTS PRECAUTIONS

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....1 EARTHING INSTRUCTIONS

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....2 INSTALLATION.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....2 SPECIFICATIONS ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....3 IMPORTANT .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

3 IMPORTANT SAFETY INSTRUCTIONS.....

.....

.....

.....

.....
.....

.....8 SETTING THE CLOCK ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.8 WEIGHT DEFROSTING

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..8 TIME DEFROSTING.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

9 COOKING IN ONE STAGE

.....
.....
.....

.....
.....
.....
.....
.....
.....
.....
.....

...10 COOKING IN TWO STAGES

.....
.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

10 EASY COOK

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

...11 AUTO COOK.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

.....
.....
.....

.11 CHILD SAFETY LOCK

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

...12 TO STOP THE OVEN WHILE THE OVEN IS OPERATING.....

.....
.....
.....
.....

.....
.....

12 COOKING UTENSILS

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....13 CARE AND CLEANING ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....13 BEFORE YOU CALL FOR SERVICE ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....14 QUESTIONS AND ANSWERS

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

....14 6 Examine the oven after unpacking for any damage such as: A misaligned door, Broken door, A dent in cavity. If any of the above are visible, DO NOT INSTALL, and notify dealer immediately. 7 Do not operate the oven if it is colder than room temperature. (This may occur during delivery in cold weather.) Allow the oven to become room temperature before operating. 8 The minimum height of free space necessary above the top surface of the oven is 100mm. I 2 SPECIFICATIONS POWER SUPPLY POWER CONSUMPTION MICROWAVE OUTPUT POWER FREQUENCY OUTSIDE DIMENSIONS (W X H X D) CAVITY DIMENSIONS (W X H X D) NET WEIGHT TIMER POWER LEVELS 230V AC 50 Hz SINGLE PHASE WITH EARTHING 1200 W 800 W 2450 MHz 465 X 279 X 360 mm 290 X 220 X 306 mm APPROX. 13KG 59 min. 00sec. 5 LEVELS IMPORTANT SAFETY INSTRUCTIONS WARNING : To prevent fire, burns, electric shock and other warnings: Listed below are, as with all appliances, certain rules to follow and safeguards to assure high performance from this oven: 1. Do not use the oven for any reason other than food preparation, such as for drying clothes, paper, or any other nonfood items or for sterilizing purposes.

2. Do not use the oven when empty, this could damage the oven. 3. Do not use the oven cavity for any type of storage, such as papers, cookbook, cookware, etc. 4.

Do not operate the oven without the glass tray in place. Be sure it is properly sitting on the rotating base. 5. Make sure you remove caps or lids prior to cooking when you cook food sealed in bottles. 6. Do not put foreign material between the oven surface and door. It could result in excessive leakage of microwave energy. 7. Do not use recycled paper products for cooking. They may contain impurities which could cause sparks and/or fires when used during cooking.

8. Do not pop popcorn unless popped in a microwave approved popcorn popper or unless it's commercially packaged and recommended especially for microwave ovens. Microwave popped corn produces a lower yield than conventional popping; there will be a number of unpopped kernels. Do not use oil unless specified by the manufacturer. 9. Do not cook any food surrounded by a membrane, such as egg yolks, potatoes, chicken livers, etc., without first piercing them several times with a fork. 10. Do not pop popcorn longer than the manufacturer's directions. (popping time is generally below 3 minutes). Longer cooking does not yield more popped corn, it can cause scorchings and fire. Also, the cooking tray can become too hot to handle or may break. 11. If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames. 12.

When heating food in plastic or paper containers, check the oven frequently due to the possibility of ignition. 13. The contents of feeding bottles and baby food jars are to be stirred or shaken and the temperature is to be checked before consumption, in order to avoid burns. 14. Always test the temperature of food or drink which has been heated in a microwave oven before you give it to somebody, especially to children or elderly people.

This is important because things which have been heated in a microwave oven carry on getting hotter even though the microwave oven cooking has stopped. 15. Eggs in their shell and whole hard-boiled eggs shall not be heated in microwave ovens since they may explode. 16. Keep the waveguide cover clean at all times. Wipe the oven interior with a soft damp cloth after each use. If you leave grease or fat anywhere in the cavity it may overheat, smoke or even catch fire when next using the oven. 17. Never heat oil or fat for deep frying as you cannot control the temperature and doing so may lead to overheating and fire. 18.

Microwave heating of beverages can result in delayed eruptive boiling, therefore care has to be taken when handling the container.



[You're reading an excerpt. Click here to read official DAEWOO KOR-631R user guide](#)

4 * Specifications are subject to change without notice. **IMPORTANT** The wires in this mains lead fitted to this appliance are coloured in accordance with the following code. Green-and-yellow : Earth Blue : Neutral Brown : Live As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: the wire which is coloured green-and-yellow must be connected to the terminal in the plug which is marked with the letter 'E', the earth symbol or coloured green-and-yellow. The wire which is coloured blue must be connected to the terminal which is marked with the letter 'N' or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter 'L' or coloured red. **WARNING: This appliance must be earthed.** 3 FEATURES DIAGRAM FEATURES DIAGRAM (continued) 1 2 3 4 5 0 M/W DEF. Lock Defrost g w Power q e r Weight/ Time 1. Dinner Plate 2.

Soup 3. Beverage 4. Fresh Vegetable Auto cook Start/ Easy cook t y Stop/ Clear Clock u 9 8 7 6 1. Door latch-When the door is closed it will automatically shut off. @@2.

@@3. Oven cavity 6. @@7. Glass cooking tray-Made of special heat resistant glass. The tray can be easily removed for cleaning.

Make sure it is correctly positioned (indentation) before operating. Place food in a suitable container (dish) on the tray. 8. Roller guide-Supports the glass cooking tray. 10. @@11. Defrost- Used to defrost foods by weight or time. 12. Power- Used to set power level. 14.

@@15. Stop/Clear- Used to stop the oven operation or to erase all entries. 16. Clock- Used to set clock. 13. Auto cook- Used to cook using a program or to reheat. 17. Dial knob- Used to set the time and weight. 4. @@5.

@@The oven will only operate with the door fully closed. When the door is open, the oven turns off and will much defrosting time is left in the DEFROST mode. @@When the defrosting time ends, you will hear 3 beeps. @@1. Press Defrost button.

The DEF. @@Press Power button. @@This example shows power level 6. @@@@2. Turn the dial knob to adjust the cooking time.

The display will show what you selected. @@(59:00) 3. Press Start button. 3. @@@@When the cooking time ends, you will hear 3 beeps. 4. Press Start button. Start When you press Start button, the DEF. indicator starts blinking to show the oven is the DEFROST mode. @@@@1.

Press Defrost button. Defrost 2. Turn the dial knob to adjust the defrosting weight. 3. Press Power button. (Select the desired power level.) The DEF.

@@@@This example shows power level 6. The display will show what you selected. Power X3 4.

Turn the dial knob to adjust the cooking time. 5. Press Start button. Start When you press Start button, the DEF and M/W indicators come on to confirm the power levels selected. The DEF.

indicator starts blinking to show you that the oven is in DEFROST mode. The display counts down the time remaining in DEFROST mode. When the oven beeps, turn over, break apart and/or redistribute the food. At the end of DEFROST mode, the oven will beep and start M/W cook. The DEF.

indicator disappears and the M/W indicator starts blinking. The display counts down the time remaining in M/W mode. When M/W cook ends, you will hear 3 beeps. 9 10 EASY COOKING EASY COOK allows you to reheat for 30 seconds at 100% (full power) by simply pressing the Easy cook button. By repeatedly pressing the Easy cook button, you can also extend reheating time to 5 minutes by 30 seconds. 1. Press Easy cook button. When you press Easy cook button, ":30" appears. After 1.5 seconds, the oven starts reheating.

When the cooking time ends, you will hear 3 beeps. **CHILD SAFETY LOCK SAFETY LOCK** lock prevents unwanted oven operation such as by small children. To set, press and hold Stop/Clear button for 3 seconds, Lock indicator appears and a beep sounds. To cancel, press and hold Stop/Clear button for 3 seconds, Lock indicator disappears and a beep sounds. **EASY COOK TO STOP THE OVEN WHILE THE OVEN IS OPERATING** 1. Press Stop/Clear button. · You can restart the oven by pressing Start button. · Press Stop/Clear button once more to erase all instructions. · You must enter in new instructions. 2.

Open the door. · You can restart the oven by closing the door and pressing Start button. **AUTO COOK AUTO COOK** allows you to cook or reheat many of your favorite foods by repeatedly touching Auto cook button. 1. Press Auto cook button.

When you press **AUTO COOK** button once, "AC-1" is displayed. By repeatedly pressing this button, you can select one of the four menu programs as shown in the chart below. The display will show what you selected. Auto cook **NOTE: Oven stops operating when door is opened.** 2.

Turn the **DIAL KNOB** to adjust the desired quantity. Press Autocook Food button once Display Weight 350g 450g 350g 450g 1 CUP (200ml) Beverage three times AC-3 Directions Put foods on the microwave plate and cover with vented plastic wrap. Pour soup in microwave bowl or mug. Stir before serving. Pour beverage in microwave mug and place it on the Dinner Plate AC-1 Soup twice AC-2 2 CUPS (200mlx2) turntable. Do not cover. 3 CUPS (200mlx3) Stir before serving. 200g Wash and put in casserole. Add no water if vegetables have just been washed. Cover tender vegetables with 400g lid and stir after cooking.

When you press Start button, the display changed into cooking time and the oven starts cooking. When the cooking time ends, you will hear 3 beeps. Fresh vegetable four times AC-4 3. Press Start button. Start 11 12 **COOKING UTENSILS** Utensils should be checked to ensure that they are suitable for use in microwave ovens. Microwave energy is produced by high frequency radio waves. They are reflected from metal, but will pass through most cooking utensils without heating them. As the waves come into contact with the food, they are converted into heat energy. Listed below are the suggested cooking utensils for this microwave oven and when to use them. **BEFORE YOU CALL FOR SERVICE** Refer to the following checklist, you may prevent an unnecessary service call.

* The oven doesn't work; 1. Check that the power cord is securely plugged in. 2. Check that the door is firmly closed. 3.

Check that the cooking time is set. 4. Check for a blown circuit fuse or tripped main circuit breaker in your house. * Sparking in the cavity; 1. Check utensils. Metal containers or dishes with metal trim should not be used. 2. Check that metal skewers or foil does not touch the interior walls. If there is still a problem, contact the service station. A list of these stations is included in the oven. **DO NOT ATTEMPT TO SERVICE THE OVEN YOURSELF !** 1. Dishes with metal trim of any type-should not be used. This will cause sparking. 2. Glass or ceramic heat proof dishes-excellent for microwave cooking.

3. China dishes and plates-without metal trim may be used to cook and heat individual portions of food.



[You're reading an excerpt. Click here to read official DAEWOO](#)

[KOR-631R user guide](#)

<http://yourpdfguides.com/dref/3403083>

4. Wood or straw-use only for short period, wood contains some moisture and the microwave energy may cause the wood to dry out and crack. 5. Aluminum foil-may be used in very small pieces for shielding only. Any aluminum foil used should never be closer than 2.5cm from side walls of oven. 6. Plastic-most heat resistant plastic dinnerware may be used for heating food.

However polyethylene, melamine, phenol are unsuitable for use in the oven. They become hot in the microwave. 7. Wax paper-use as a cover to avoid spatters. 8.

Metal-in general, metal utensils should not be used in microwave oven. **QUESTIONS AND ANSWERS** * Q : I accidentally ran my microwave oven without any food in it. Is it damaged? * A : Running the oven empty for a short time will not damage the oven. However, it is not recommended. * Q : Can the oven be used with the glass tray or roller guide removed? * A : No.

Both the glass tray and roller guide must always be used in the oven before cooking. * Q : Can I open the door when the oven is operating? * A : The door can be opened anytime during the cooking operation. Then microwave energy will be instantly switched off and the time setting will maintain until the door is closed and START is touched. * Q : Why do I have moisture in my microwave oven after cooking? * A : The moisture on the side of your microwave oven is normal. @@@* A : No. The metal screen bounces back the energy to the oven cavity. The holes are made to allow light to pass through. @@It is important not to defeat or tamper with safety interlocks. 2. @@Wipe the sealing area frequently with a mild detergent, rinse and dry.

Never use abrasive powders or pads. 3. When opened, the door must not be subjected to strain, for example, a child hanging on an opened door or any load could cause the oven to fall forward to cause injury and also damage to the door. Do not operate the oven if it is damaged, until it has been repaired by a trained service technician. It is particularly important that the oven closes properly and that there is no damage to the: i) Door(bent) ii) Hinges and Hooks(broken or loosened) iii) Door seals and sealing surfaces. 4. The oven should not be adjusted or repaired by anyone except a properly trained service technician. 13 14 .



[You're reading an excerpt. Click here to read official DAEWOO
KOR-631R user guide
http://yourpdfguides.com/dref/3403083](http://yourpdfguides.com/dref/3403083)