




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DAITSU DPA11. You'll find the answers to all your questions on the DAITSU DPA11 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual DAITSU DPA11**  
**User guide DAITSU DPA11**  
**Operating instructions DAITSU DPA11**  
**Instructions for use DAITSU DPA11**  
**Instruction manual DAITSU DPA11**

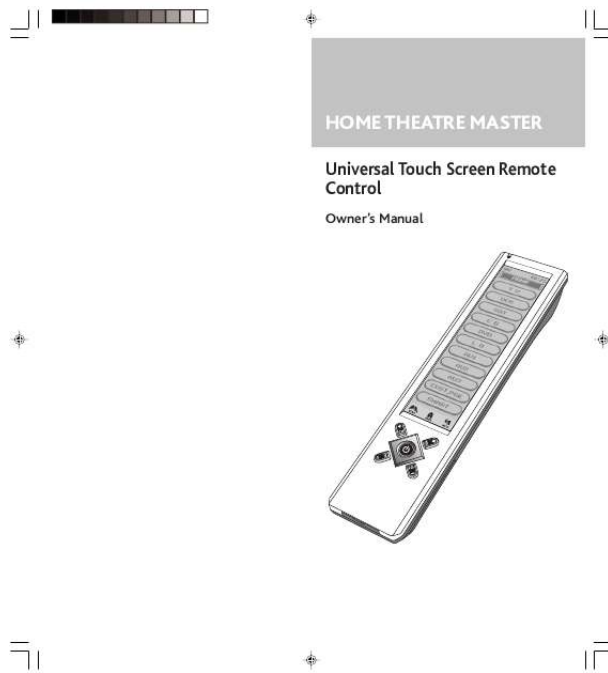

[You're reading an excerpt. Click here to read official DAITSU DPA11 user guide](http://yourpdfguides.com/dref/2716932)  
<http://yourpdfguides.com/dref/2716932>

**Manual abstract:**

3. 4. 5. @ @ 7. 8. 9. 10. Touch Screen panel Short cut keys Hard keys Connection jack Battery compartment 1.1 Key Features · Pre-programmed with learning capability · 10-in-1 remote (replace TV, VCR, SAT, CTV, DVD, LD, CD, AV1, AV2 and AV3) · Learn up to 240 commands · Maximum 70 keys per device mode · EL backlit touch screen panel with intelligent light sensor for power saving · 5 useful hard keys for direct access ( , CH+, CH, VOL+, VOL) · 3 touch screen shortcuts ( M E N U , H O M E , M U T E ) · Set up by code entering, device brand name search and library code search · 10 smart programs, each with 32 steps in maximum · Device name and function keys editing, moving, deleting and restoring · Custom page for personal set up and frequently used commands · Remote-to-remote copy function · Volume punch through control for TV and AMP · Interactive help screen · Security password lock · Real time clock · Battery level indicator · Auto power off · AC/DC power charger · Re-chargeable batteries 1 2 3 4 5 6 Optional Features · Docking charger for quick battery charging · Computer link (PC link) for special key layout and function via USB connection to PC · Perform PC software upload and download MENU HOME MUTE 7 H Note: This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. "Modifications not authorized by the manufacturer may void users authority to operate this device." VO C 10 9 2 1 VO L L 8 C H 1.3 Specifications Operation System: Compatibility: Integrated preprogrammed & learning infrared remote control system Preprogrammed with code library of Televisions (TVs), Video Cassette Recorders (VCRs), Satellite/Digital Satellite Receivers (SATs), Cable Converters (CTVs), Laser Disc Players (LDs), Compact Disc Players (CDs), Digital Video Disc Players (DVDs)and Integrated Amplifiers (AMPs) 240 learning commands 2 Getting Start After insert batteries, it prompts at the main page which show all devices and function for selection.

Tap " HOME " at any time will jump to this page. If the remote is inactive for about 60 seconds, it goes to power saving (sleep) mode and shut down the display. Simply, touch the screen panel to activate the unit. Note: When in power saving (sleep) mode, the hard key section is still available for command. Tap any of the device icon on the screen to enter the corresponding device mode. LCD shows a remote key platform. Tap a key directly to send out the corresponding infra-red command. Tap " PAGE " at bottom of screen to change command pages. Tap " HOME " to return to main page. There will be no label or symbol for an empty key (these keys are available for learning, for details, please refer to Learning section of this manual).

Tap " MENU " to setup the unit. Non-volatile and permanent memory Monochrome touch screen LCD 320 x 80 pixels Blue-Green EL backlighting with light sensor 8 Metres (25 feet) 4 x AAA size NiMH rechargeable batteries About 17 hours 220 x 51 x 25 mm 165g (without batteries installed) 215g (with batteries installed) Included Accessories: AC/DC power adaptor (DC 9V, 400mA, 3.6VA) x 1 Connector x 1 (for charging purpose) 4 x AAA NiMH size rechargeable batteries Optional Accessories: Docking Charger -- Quick charger PC Link software for MS Windows 98, 2000 USB Cable For improvement purposes, specifications and functions are subjected to change without priority notice. Memory Capacity: Memory Retention after battery disconnection: Display Panel: Resolution: EL Backlighting: Operating Distance: Power Requirement: Charging Time: Dimensions: Weight : 2.1 Panel Calibration Please follow the below instruction for calibration of the remote touch screen panel. @ @ @ @ @ @ @ @ You should recharge the batteries. To install the batteries, open the battery cover, follow the polarity symbol shown in battery compartment. Place the batteries inside, then replace the cover. To recharge batteries, put the power adaptor into AC wall outlet, insert the DC jack to the connector, then connect to the socket at the bottom of the remote. It takes about 17 hours maximum to fully charge the batteries.

Remove the rubber protector Important Note: Reset -- If your Home Theatre Master is halt by any reason, you can reset the remote by pressing the " RESET " key inside the battery compartment, see illustration. 2.2 Hot Keys There are 3 hot keys on bottom of LCD display. · HOME Jump to main page for device mode selection e.g.

TV, VCR, DVD, etc... · MENU Access main setup menu for configuration/setting · MUTE Volume mute function 2.3 Hard Keys There are 5 hard keys, it transmits IR command corresponding to device selected. Press to detach MENU HOME MUTE Note: C H VO L 1. Battery icon " " is not shown when in Menu mode. 2. The unit is designed for optimum operation with original batteries. 3. DO NOT connect power adaptor and connector when use the non-original batteries. 4. To avoid data lost, remote setup is prohibited when batteries are weak. . . . . CH+ CH VOL+ VOL Power ON/OFF Program up or channel up Program down or channel down Volume up Volume down 4 3 VO L H C 2.4 Key Tone When you tap any key, there is a short beep sound. User can enable/disable this function from main menu setting.

(For details, please refer to Remote Setting section in this manual.) · Edit the keyname or just tap " OK " to confirm. · Tap the same key on the Home Theatre Master. · Again aim the original remote to the front of the Home Theatre Master. Press and hold the same key of the original remote until Home Theatre Master responds a successful message.



[You're reading an excerpt. Click here to read official DAITSU DPA11 user guide](http://yourpdfguides.com/dref/2716932)  
<http://yourpdfguides.com/dref/2716932>

· Edit the key name or just tap " OK " to confirm. 2.5 Backlit There are two separated EL backlights for LCD screen and hard keys, and will be turned ON separately. Backlit will be turned ON for 5 seconds (factory default setting) after a key is pressed, and this function can be disabled by user. (For details, please refer to Remote Setting section in this manual.

) Note: The optimum receiving distance is 5-8cm for remote learning. If you have any reported problem during the learning process, you can slightly adjust the distance of two remotes and try again. 2.6 IR Codes Library To setup a code, tap " MENU " once then select a device to setup, choose a setup method. User can setup by learning key command from an original remote control, entering a code number, browsing through brand name list, or searching through the whole library.

@@@ (e.g. TV) · Tap " Brand Name " from Setup menu. · Select a device. (e.

g. @@@@ (e.g. @@ (e.g. @@@@ · Tap " " to skip previous code. @@@@ Select one of the following setup method. @@@@ (e.g. TV) · Tap a key to be learnt from the Home Theatre Master.

· Aim an original remote to the front of the Home Theatre Master. Press and hold the key of the original remote until Home Theatre Master responds a successful message, it normally takes a short while. · Edit the keyname or just tap " OK " to confirm. · Tap another key to continue learning for the rest of the useful commands. · Tap " MENU " to return to main menu, or tap " HOME " to return to main page. Note: If you have reached the end of code, you will be prompted to continuous for Auto-Search or Exit. For details of autosearch setup, please refer to Auto Search Setup section in this manual. Dual Signal Learning If you found a learned command work for your A/V equipment only occasionally, your original remote control may contain dual signals. Please follow the below steps and reprogram those commands. · Tap " Learning " from Setup menu.

@@ (e.g. TV) · Tap a key to be learnt from the Home Theatre Master. · Aim the original remote to the front of the Home Theatre Master. Press and hold the key of the original remote until Home Theatre Master responds a successful message, it normally takes a short while.

Enter Code setup the pre-programmed code by entering code number. (Home Theatre Master is preloaded with numerous of control codes for most popular AV equipment, you can refer to the enclosed code list for your devices.) · Tap " Enter Code " from Setup menu. · Select a device. (e.

g. TV) · Tap numeric digit to enter code number (check your code from the code list, e.g. 0021). · Tap " Delete " to delete the last entered digit (if you have mistyped a number). · Tap " Back " to cancel and return to previous menu page. · Tap " OK " to confirm the input. e copied to custom page. (e.g.

" ) · Tap " Yes " to confirm the selection. · Tap to select other key to create new command or tap " MENU " to exit and return to main menu. Remarks: number of characters input depends on the corresponding key size. 3.1.2. Device Name rename device label · Tap " Device Name " from Edit menu. · Select a device. · Tap ABC , ?!À or i for quick access to different group of keys (character, symbol or graphic), and tap " &quoace to face in a distance of 5-8cm during the whole cloning process. 3.

4.1. Add new smart create a new smart command · Select an empty smart key. @@@@ · Select an item from the command list and tap " Move Up " and " Move Down " to re-order the sequence of that item, or tap " Delete " to remove that item from the list. · Tap " Test " to test the function of Smart.

· Tap " OK " to confirm. 3.5.1. @@@@ Copy all Devices copy all user 3.

4.2. @@@@ · Tap " Test " to test the function of Smart. @@@@ Note: 1. Please be noted that all user settings will be overwritten at receiving end by sending remote. 2. Do not interrupt the linking during sending and receiving data. 3. Be sure to keep two remotes within 5cm to 8cm during the copy process for better performance. MENU HOME MUTE 3.

4.3. Delete smart delete a smart key · Select an existing smart. · Tap " OK " to confirm. · Tap " Back " to abort. L VO . . . . Select an existing smart. Tap a character from the touch screen. Tap " Delete " to last entered character. Tap " Back " to ignore and return to previous page. Tap " OK " to confirm.

11 12 VO L 3.4.4. Rename smart to rename label of a smart key C C H H 3.6 PC Link -- connect with computer for download/upload data Tap " MENU ", then choose " PC Link ".

Q : How can I prevent someone to edit/change the setting of my Home Theatre Master? A: You can simply activate the "Password " function to lock your remote. For details, please refer to section " 3.3.4. Password ".

PC-to-remote data upload/download function, you have to purchase the Home Theatre Master Docking package. @@) on the top right corner of screen. @@@@ (Reset key is locate inside the battery compartment.) · If password is set, user needs to enter password for accessing main menu. Enter "AAAAA" if you forget the password. Q : What is SMART? A: It is an advanced feature of your Home Theatre Master which allows you to program a series of commands with appropriate time delay. By simply a press of the selected " SMART " button, your Home Theatre Master will execute a chain of IR signals automatically. For details, please refer to section " 3.4 SMART ". 4 A: Troubleshooting Please make sure that you have put in the provided rechargeable batteries with correct polarity and you have performed the charging.

For detail, please refer to " 1.2 Battery Installation and Charging " section of this manual. If your Home Theatre Master is halt, please press " RESET " button inside the battery compartment. For details, please refer to " 2.1 Panel Calibration " section of this manual. Q : What is Clone? A: It is an advanced feature of your Home Theatre Master which allows data transferred of 2 Home Theatre Master remotes. @@@@ For details, please refer to the owner's manual of the Home Theatre Master Docking Station. A: Q : I have installed a code from the provided code list for my device but the remote is not working or only partly working with my device. A: The selected code is not matched with your device, you have to try another code if it is available on the code list. Or you have to go through the " Auto Search " to locate another possible code.



[You're reading an excerpt. Click here to read official DAITSU DPA11 user guide](http://yourpdfguides.com/dref/2716932)

<http://yourpdfguides.com/dref/2716932>

Or you can simply learn the original remote to your Home Theatre Master by learning function. For details, please refer to " 2.7 Configuration/Setting Up the Unit ". Q : I have copied my original remote to Home Theatre Master. But I found that some of the commands are occasionally function.  
A: Your original remote may carry dual signal commands. You have to go through the section " 2.7 Configuration/Setting Up the Unit -- Dual Signal Learning " and program again. Q : I cannot move a key to another location. A: You have to make sure that the selected key type is identical.  
You cannot exchange key position with different key type. For details, please refer to section " 3.1.3. Move Key ". Q : The backlit of the LCD is not working.  
A: You have to make sure that you have selected either " By sensor " or " Always On " in the Remote Setting menu. For details, please refer to " 3.3 Remote Setting " section. 13 14 5 Device Code List Code 0331 0431 0481 0251 0361 0441 0351 0411 0351 0361 0351 0251 0161 0291 0271 0331 0331 0021 0361 0331 0171 0441 0131 0271 0391 0431 0031 0011 0181 0311 0001 0361 0381 0351 0031 0341 0221 0271 0331 0361 0221 0351 0351 0551 0241 0271 0031 0551 0541 0271 0191 0161 0361 0401 0511 0351 0351 0251 0541 0051 TV Device Model AKAI ALBA AMSTRAD ANAM AOC BAUER CANDLE CENTURION CITIZEN COLORTYME CONCERTO CRAIG CURTIS MATHES DAEWOO DECCA DIXI ELTA EMERSON ENVISION ETRON FISHER FORMENTI GE GEC GEMINI GENEXXA GOLDSTAR GOODMAN/TASHIKO HITACHI JENSEN JVC KENWOOD LOGIK LUXMAN MAGNASONIC MAGNAVOX MARANTZ MATSUI MEMOREX MGA MITSUBISHI MONTGOMERY MTC NAD NEC NIKKAI NIKKO OPTIMUS OPTONICA OSAKI PANASONIC PENNY PHILCO PHILIPS PIONEER PROTON PULSER QUASAR RADIO SHACK RCA 0361 0361 0361 0301 0331 0061 0071 0081 0091 0101 0111 REALISTIC SAISHO SAMPO SAMSUNG SANYO SEARS SHARP SIGNATURE SIMPSON SONY SQUAREVIEW SUPRA SYLVANIA SYMPHONIC TANDY TATUNG TECHWOOD TEKNIKA TELETECH TERA TMK TOSHIBA VECTOR RESEARCH VIDIKRON WARDS YAMAHA ZENITH 0541 0331 0361 0331 0171 0161 0461 0351 0581 0371 0481 0351 0361 0481 0271 0271 0351 0351 0331 0501 0351 0351 0361 0211 0361 0361 0011 0341 0231 0171 0471 0381 0351 0361 0271 0351 0481 0521 0541 0611 0621 0451 0631 0441 0581 0591 0601 0431 0381 0571 0521 0381 0451 0541 0581 0591 0601 0041 0381 0161 0201 VCR Device Model Code 0262 0202 0412 0342 0342 0342 0202 0342 0072 0182 0082 0402 0102 0002 0202 0022 0342 0202 0342 0222 0232 0592 0452 0472 0472 0442 0202 0412 0442 0402 0212 0012 0392 0202 0592 0282 AKAI AUDIO DYNAMICS BLAUPUNKT CANDLE CITIZEN CURTIS MATHES DBX DYNATECH EMERSON GOLDSTAR GOODMAN HITACHI JVC KENWOOD LXI MAGNAVOX MARANTZ MATSUSHITA MEI MEMOREX MINOLTA MITSUBISHI MONTGOMERY MOTOROLA NAD NEC OLYMPUS OPTIMUS OPTONICA ORION PANASONIC PENNY PENTAX PHILIPS 0121 0351 0411 0271 0351 0261 0281 0391 0601 0351 0331 0351 0561 0321 0361 0401 0411 0421 0581 0591 0361 0381 0571 0571 0561 0571 0472 0122 0132 0142 0152 0162 0172 0192 0212 0342 0562 0572 0582 0592 0602 0202 0472 0522 0532 0542 0552 0542 0342 0482 0492 0502 0512 0402 0242 0472 0512 0602 0462 0542 0351 0361 0431 0251 0351 0361 0521 0531 0581 0591 0601 0551 0501 0292 0422 0432 0542 0472 0472 0052 0092 0222 0342 0372 0382 0412 0432 0602 0602 0342 0402 0492 0141 0151 0181 0411 0491 0531 15 16 PIONEER PULSAR QUARTZ QUASAR RADIO SHACK RCA REALISTIC RICOH SAISHO SAMSUNG SANKY SANSUI SANYO SBR SCOTT SEARS SHARP SONY STS SUNPAK SYLVANIA TEKNIKA TELEFUNKEN TMK TOSHIBA VECTOR RESEARCH VICTOR VIDEO CONCEPTS WARDS YAMAHA ZENITH 0442 0512 0272 0382 0472 0112 0402 0352 0212 0212 0472 0292 0242 0282 0342 0302 0402 0032 0602 0352 0492 0322 0252 0212 0062 0202 0542 0202 0322 0202 0042 0542 0392 0382 0392 0482 0592 0602 0472 0362 0582 0312 0512 0542 0342 0592 0602 0472 0332 0352 0362 0502 0302 0342 0432 0552 0432 0402 0472 0482 0602 0362 0512 SAT/DSS/CBL Device Model ABC AKIBA ALBA ALLSAT ALPHA STAR AMSTRAD ANSONIC ANTRONIX ARCHER ASTRA AUTOVOX BBT BEKO BRITISH SKY BROADCASTING (BSKYB) BT CABLETIME CANAL DIGITAL CANAL SATELLITE CANAL+ CARENA CLYDE CABLEVISION COLOUR VOICE COMTRONICS CONRAD CYRUS DNT DUAL D-BOX EAGLE COMTRONICS EASTERN Code 0253 0373 0963 0963 0923 0773 1143 0953 0133 0133 0283 1053 1113 0073 0963 1143 1033 0163 0943 0943 0863 0963 0193 0303 0213 1063 0923 0923 1113 1073 0273 0063 ECHOSTAR ELECTRICORD ELECTUS FERGUSON FINLANDIA FINLUX FLINT GE GEC CABLE SYSTEM GENERAL INSTRUMENT GOLD BOX GOODING GOODMAN GRANADA GRUNDIG HAMLIN HIRSCHMANN HISAWA HITACHI HTS HUGHES NETWORK SYSTEMS ITT ITT/NOKIA JERROLD JOK JVC KATHREIN LUXOR MAGNAVOX MAMM MANHATTAN MARANTZ MASPRO MATSUI MEDIASAT MEMOREX MINERVA MITSUBISHI MIVAR MOVIE TIME MYRYAD NOKIA NORTHCOAST NSC OAK OAK SIGMA ONDIGITAL PACE 0953 0943 0343 0273 0783 0203 0263 1113 0963 0963 0963 0113 0193 0793 0943 1023 0963 1053 0973 0633 1063 0963 0753 0783 0813 1053 1163 0253 1033 1023 0923 1053 0003 0293 0963 0923 0973 1023 0943 0003 1023 1053 0953 0143 0923 0963 0013 0143 0103 0533 0933 0903 1143 PALLADIUM 1023 PANASAT 1173 PANASONIC 0443 PANDA 0963 PARAGON 0383 PHILIPS 0003 0343 0943 1013 PIONEER 0003 PREMIERE 0943 PRIMESTAR 0803 PULSAR 0383 PROMAX 0963 RADIOLA 0923 RCA 0833 RCA DIGITAL SATELLITE SYSTEM 0393 REALISTIC 0133 0943 1053 1053 0123 0803 0953 0983 1023 1143 0643 0653 0663 0673 0963 1053 0433 0593 0603 0613 0803 0823 1063 1073 0413 0423 0763 1113 0383 0763 0203 1053 1063 1073 1083 0543 1013 1093 0963 1093 1103 1113 1123 1133 1153 0453 0463 0473 1143 0033 0413 0953 1023 0083 0953 0823 0213 0423 0963 1033 0553 1073 0303 0763 0973 1043 0693 0313 0323 0333 0913 0923 0933 0983 0993 1003 0943 0953 0403 17 18 REGENCY/EASTERN RFT RUNCO SABA SABRE SAGEM SALORA SAMSUNG SCHNEIDER SCIENTIFIC ATLANTA SEDEA SIGNAL SKY SL MARX SONY SPECTRAVISION STANDARD COMPONENTS STARCOM V STARGATE STRONG SYLVANIA/TEXSCAN TANTEC TEKNIKA TELESERVICE TELEVIEW TEXSCAN TFC THOMSON TOCOM TOSHIBA TPS TUDI UNIVERSUM UNIDEN UNIKA UNIVERSAL VENTANA VIDEOWAY VIEWSTAR WISI XSAT ZENITH 0683 0923 0383 1033 0963 0963 1053 0273 0983 0363 0863 0273 0893 0273 0843 0233 0183 0253 0273 1173 0373 0963 0173 0053 0273 0183 0023 0943 0223 0383 0873 0043 1023 0763 0133 0133 0923 0093 0213 0963 0883 0243 1113 1183 1113 0563 0573 0583 0873 0883 EROICA FISHER GARRARD GENEXXA GOLDSTAR H/K HITACHI INKEL JVC KENWOOD 1143 0493 1113 0373 0963 0353 0503 0513 0523 0853 1183 0153 0203 0283 0383 0483 CD Device Model ACOUSTIC RESEARCH ADC ADCOM ADS AIWA AKAI ALPINE AUDIO TECHNICA BSR CALIFORNIA AUDIO LAB CAMBRIDGE AUDIO CAPETEONIC CARRERA CARVER CASIO CROWN CURTIS MATHES DENON DUAL DYNAMIC BASS (H) EMERSON Code 1346 0076 0256 0316 0346 0226 1266 0596 0296 0106 1416 1256 0296 0336 0396 0236 0396 0326 0556 0606 0256 0116 0306 1066 0996 1086 1106 0536 0586 1356 0706 0826 1186 0926 0936 0376 1156 1326 0146 0416 0356 1186 0156 0246 0166 0366 0096 0806 KYOCERA 0076 LUXMAN 0126 MAGNAVOX 0216 MARANTZ 0266 MCINTOSH 0406 MCS 0956 MEMOREX 0256 MGA 0186 MISSION 0266 MITSUBISHI 0186 MTC 1306 NAD 0086 NAKAMICHI 0176 NEC 0306 NIKKO 0596 ONKYO 0206 OPTIMUS 0276 0946 PANASONIC 0106 PENNY 0956 PHILIPS 0216 PIONEER 0356 PROTON 0266 QUASAR 0106 RCA 0256 REALISTIC 0256 REVOX 1226 ROTEL 0006 SABA TELECOMMANDER (E) 0556 SAE 0266 SAMSUNG 1336 SANSUI 0266 SANYO 0196 SCOTT 0376 SEARS 0396 SHARP 0286 SHERWOOD 0166 SIEMENS GARRARD 1296 SIGNATURE 0226 SONTEC 1216 SONY 0116 STARON 1286 STS 0076 SYLVANIA 0266 SYMPHONIC 0386 TANDY 0356 TANGBERG 1246 TEAC 0286 TECHNICS 0106 TECHWOOD 1376 TELEFUNKEN 0556 THOMSON 0556 TOSHIBA 0086 VECTOR RESEARCH 0116 VICTOR 0366 WARDS 0226 YAMAHA 0056 0606 0976 1056 0376 1276 0226 0256 0446 1156 1316 1386 0516 1046 0556 0866 0146 0456 0636 0776 0786 0796 0946 0476 0266 0286 1136 1366 0276 0496 0666 0486 0956 1056 0506 0296 0986 0876 0736 0746 0566 1016 0546 0856 1206 0606 0646 0896 0906 0916 1146 1176 0726 0756 0766 1036 0696 1006 0426 0836 1396 0286 0356 0376 1156 0266 0986 1096 1236 0966 1166 0276 0286 0376 0606 0896 0016 0026 0036 0046 0266 0676 1026 1076 1156 0606 0686 0816 1156 0716 0946 1116 1126 0286 0446 0526 0616 0916 1196 0386 0436 0576 0846 0886 1406 0656 1146 0736 1186 0066 0136 0466 0596 0626 1116 19 20 LD Device Model AIWA DENON DISCO VISION FUNAI HITACHI KENWOOD MAGNAVOX MARANTZ MITSUBISHI NAD PANASONIC PHILIPS PIONEER RCA REALISTIC ROTEL SHARP SONY VICTOR YAMAHA Code 0177 0167 0037 0177 0037 0107 0047 0047 0157 0157 0097 0047 0037 0187 0177 0007 0147 0067 0117 0027 TOSHIBA UNIVERSUM X-BOX YAMAHA ZENITH 3DLAB 0058 0138 0278 0398 0018 0138 0148 0158 0168 0178 0288 0138 0248 0278 0288 0127 AMP/TUNER Device Model Code 0085 0075 0005 0015 0025 0035 0045 0055 0065 AUDIO

INNOVATIONS CAMBRIDGE AUDIO ROTEL YAMAHA 0197 0057 0157 0017 0077 0137 0087 DVD Device Model AKAI DENON FINLUX GOLDSTAR  
GRUNDIG HANSEATIC HARMAN/KARDON HITACHI JVC KENWOOD LG LINN LOEWE MARANTZ MAGNAVOX MICROMEDIA MICROMEGA  
MITSUBISHI NAD ONKYO OPTIMUS PANASONIC PHILIPS PIONEER PROSCAN RCA ROTEL SALORA SAMSUNG SHARP SHERWOOD SHINCO  
SONY SONY PS2 TEAC TECHNICS THETA DIGITAL THOMSON Code 0068 0208 0278 0278 0288 0278 0318 0308 0098 0158 0278 0358 0288 0218 0138  
0288 0288 0148 0328 0078 0228 0038 0108 0118 0168 0168 0008 0278 0088 0048 0238 0258 0028 0298 0278 0038 0228 0178 0338 0378 0188 0288 0368  
0288 0138 0138 0218 0288 0368 0128 0198 0228 0338 0268 0348 0388 21 22 .



[You're reading an excerpt. Click here to read official DAITSU DPA11 user guide](http://yourpdfguides.com/dref/2716932)  
<http://yourpdfguides.com/dref/2716932>