



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DELONGHI BAR 41. You'll find the answers to all your questions on the DELONGHI BAR 41 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DELONGHI BAR 41
User guide DELONGHI BAR 41
Operating instructions DELONGHI BAR 41
Instructions for use DELONGHI BAR 41
Instruction manual DELONGHI BAR 41

COFFEE MACHINE
MACHINE A CAFE
CAFETERA ELÉCTRICA
CAFETEIRA ELÉTRICA

Owner's instructions
Mode d'emploi
Instrucciones para el uso
Manual de instruções



READ AND SAVE THESE INSTRUCTIONS
LISEZ ET GARDEZ CES INSTRUCTIONS
REPASE Y GUARDE ESTAS INSTRUCCIONES



[You're reading an excerpt. Click here to read official DELONGHI BAR 41 user guide](http://yourpdfguides.com/dref/3674690)
<http://yourpdfguides.com/dref/3674690>

Manual abstract:

â· Never allow the appliance to be used by children or unfit persons. â· Unplug from the outlet when not in use and before cleaning. Allow to cool before fitting or taking off parts, and before cleaning the appliance. â· Do not operate with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. The use of accessory attachments or spare parts not recommended by the appliance manufacturer may result in fire, electrical shock or personal injury. Do not let the cord hang over the edge of the table or counter, or touch hot surfaces. â· Do not place on or near a hot gas or electrical burner, or in a heated oven. â· Plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet. â· Do not use the appliance for other than the intended use.

This appliance is to be utilised for domestic use only. Any other use is to be considered improper and therefore, dangerous. @@@@If the appliance is provided with 3- wire, grounding type cord, the extension should be a GROUNDING TYPE 3 - WIRE CORD. The longer cord should be arranged so that it will not drape over the counter-top or table top where it can be pulled on by children or tripped over. Your product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other).

This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

Thank you for choosing this Delonghi coffee machine. To get the very best out of your new coffee machine it is advisable to read these instructions before using the appliance. This is the only way to ensure optimum results and maximum safety. Never touch the appliance with wet or damp hands. Place the coffee maker on flat work surface at a safe distance from taps and sinks. In the event of incompatibility between the plug on the appliance and the socket, have the plug replaced with another of the right type by a qualified professional. Never install the machine in an environment that can reach a temperature less than or equal to 0Â°C (if the water in it freezes, the coffee maker may be damaged). â· When the machine is in operation, any additional cable can be stored in the machine by inserting it back into the cable supply outlet. The following terms are used throughout the instruction manual 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 Filter holder for ground coffee 1-cup filter 2-cup filter Filter holder for pods (if fitted) Steam release knob Coffee tamper Removable drip tray - black area inside for positioning cups Power supply cable 'OK' light Boiler on function Selector knob Espresso function "O" OFF position Cappuccino function (for milk frothing) Coffee measuring spoon Boiler outlet Milk frother Steam nozzle Delivery tube Water tank Lid for water tank When you are using the machine for the first time, you should wash all the accessories i. To ensure best tasting coffee the internal circuits must also be flushed through at least five times.

To do this follow the directions below in "How to prepare espresso coffee" but use only water and not coffee. This machine has been built to "make coffee" and to "reheat beverages"; please be careful to avoid burns from the sprays of hot water or steam and avoid any improper use. â· After unpacking, make sure that the machine is complete and undamaged. In case of doubt, do not use the appliance and seek the advice of a qualified service professional.) should not be left within the reach of children as this could be a potential source of danger. â· The manufacturer takes no responsibility for damage FILLING THE WATER TANK: To remove the water tank simply pull upwards (fig 2) and fill the tank at the sink (fig 3). Do not exceed the MAX level on the water tank. The tank may also be filled without removing it, simply by pouring water into it directly from a jug. Replace the tank by connecting the valve at the bottom of the tank with the hole in the base on the machine. Note: Do not operate the appliance without water in the tank and always remember to fill the tank when the water level goes below the MIN level.

PREHEATING THE COFFEE MACHINE To ensure your espresso coffee is dispensed at the right temperature it is essential that the coffee unit is preheated. â· Turn the selector knob so that the indented line on the selector knob points to the boiler on function . Attach the empty filter holder (without coffee) to the machine by positioning it under the boiler outlet with the handle towards the left (fig 5). Push upwards and at the same time turn the handle as far right as possible. It does not matter if the handle is not centrally aligned with the machine, as long as the filter holder is firmly attached to the appliance.

Use the same cup that the coffee will be served in, so that it may be preheated. â· Wait until the orange "OK" light comes on (fig 6) and turn the selector knob to the espresso function position (fig 7). @@@@â· Tamping the coffee gives a better quality espresso. @@@@ 1. @@@@ 10). @@@@ 6 To detach the filter holder, turn the handle from right to left. @@ 7. @@ 12). @@@@Always follow the instructions on the package of the wafers for the correct positioning of the wafer in the filter. Note: Use pods which conform to the ESE standard: this will be indicated on the packaging by the following symbol: Way into the steam nozzle, aligning the 'C' arrow with the 'B' notch, as shown in figure 21, and then turning it in an anti-clockwise direction. IMPORTANT: always clean the milk frother and steam nozzle immediately after use. 17), allow a little steam to come out for a few seconds. Then close firmly by turning clockwise. 2. Hold the upper part tight with one hand and use your other hand to unscrew the cappuccino maker, rotating it in a clockwise direction, and remove it from the nozzle (fig.

Wash the cappuccino maker and steam nozzle thoroughly with tepid water. If necessary, clean them with the help of a pin. 6. Re-attach the steam nozzle by inserting it into the steam tube and aligning the 'A' arrow with the 'B' notch, as indicated in figure 20. 7. Re-attach the cappuccino maker by sliding it all the way into the steam nozzle, aligning the 'C' arrow with the 'B' notch, as shown in figure 21, and then turning it in an anti-clockwise direction. PRODUCING HOT WATER 1. Turn on the coffee unit by turning the selector knob to the position (fig. When the 'OK' pilot light comes on, position the selector knob at (fig. The ESE standard is a system accepted by the leading coffee pod manufacturers, and allows espresso coffee to be prepared simply and without any mess.



[You're reading an excerpt. Click here to read official DELONGHI](#)

[BAR 41 user guide](#)

<http://yourpdfguides.com/dref/3674690>

â· Attach the filter holder onto the machine, moving from left to right (fig 5). If the waffle filter holder is used, after using the filter holder for ground coffee, it is essential to first remove any coffee grains (fig. 24) that may have stuck to the hot water drip spout. If this cleaning is not done, water may exit from the sides of the waffle filter holder while the coffee is being made. â· Proceed as in points 4, 5 and 6 in the previous section on how to prepare espresso.

â· To remove the pod, press the button on the filter holder and simply lift the pod out. â· To turn the coffee machine off, turn the selector knob on the appliance to the Off position "O" (fig 13). Prepare espresso coffee, using cups that are large enough for cappuccinos (see "How to prepare espresso coffee). Wait until the orange "OK" light comes on, to indicate that the boiler has reached the ideal temperature for producing steam. 3. In the meantime, fill a container with approximately 3 fl.

Oz of milk for each cappuccino to be prepared. The milk must be cold from the refrigerator (not warm!). In choosing the container, bear in mind that the volume of the milk will increase by 2 or 3 times. semi skimmed milk gives best results. NOTE: We suggest you used semi-skimmed milk at refrigerator temperature. 4. Position the container with the milk in it under the milk frother (fig. If necessary, clean them with the help of a pin 6. Re-attach the steam nozzle by inserting it into the steam tube and aligning the 'A' arrow with the 'B' notch, as indicated in figure 20.s not cold enough.

The milk does not froth when making a cappuccino. Always use milk at refrigerator temperature. â· Carefully clean the pinholes in the milk frother. We warrant each appliance to be free from defects in material and workmanship. Our obligation under this warranty is limited to repair at our factory or authorized service center of any defective parts or part thereof, other than parts damaged in transit. In the event of a product's replacement or return, the unit must be returned transportation prepaid. The repaired or new model will be returned at the company expense. This warranty shall apply only if the appliance is used in accordance with the factory directions, which accompany it, and on an Alternating current (AC) circuit. How long does the coverage last? This warranty runs for one year (1) from the purchase date found on your receipt and applies only to the original purchaser for use. What is not covered by the warranty? The warranty does not cover defects or damage of the appliance, which result from repairs or alterations to the appliance outside our factory or authorized service centers, nor shall it apply to any appliance, which has been subject to abuse, misuse, negligence or accidents. @@@@How do you get service? @@@@All implied warranties are limited to the applicable warranty period set forth above.

This limitation does not apply if you enter into an extended warranty with De'Longhi. Some states do not allow limitations on how long an implied warranty lasts, so the above exclusions may not apply to you. De'Longhi does not authorize any other person or company to assume for it any liability in connection with the sale or use of its appliance. How does state law apply? This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. .



[You're reading an excerpt. Click here to read official DELONGHI](http://yourpdfguides.com/dref/3674690)

[BAR 41 user guide](http://yourpdfguides.com/dref/3674690)

<http://yourpdfguides.com/dref/3674690>