



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DELONGHI BCO 120. You'll find the answers to all your questions on the DELONGHI BCO 120 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DELONGHI BCO 120
User guide DELONGHI BCO 120
Operating instructions DELONGHI BCO 120
Instructions for use DELONGHI BCO 120
Instruction manual DELONGHI BCO 120

GB

Read this manual thoroughly before installing and using the appliance.
This is the only way to ensure best results and maximum safety for the user.

DESCRIPTION

(see figure on fig. 3)

The terminology below will be used repeatedly on the following pages.

1. Power cable
2. Steam tube
3. Spray hood
4. Drip tray
5. Boiler filter disk for espresso coffee
6. Warming plate
7. ON/OFF switch for espresso coffee and cappuccino
8. ON/OFF switch for drip coffee
9. ON light for drip coffee
10. ON light for espresso coffee and cappuccino
11. Small jug for espresso coffee
12. Two cup adapter for espresso coffee
13. Measure
14. Filter holder for espresso coffee
15. Filter for espresso coffee
16. Filter holder for drip coffee
17. Large jug for drip coffee
18. "Vario System" flavour selector for espresso coffee
19. "Flavour System" flavour selector for drip coffee
20. Water tank for drip coffee (removable)
21. Water tank lid
22. Boiler for espresso coffee
23. Boiler cap
24. Steam knob
25. Flavor saver
26. Filter for drip coffee

SAFETY WARNINGS

- This appliance is designed to make coffee or heat drinks. Be careful to avoid being scalded by sprays of water or steam or due to improper use of the appliance.
- This appliance is intended for domestic use only. Any other use is considered improper and thus dangerous.
- The manufacturer cannot be held responsible for any damage caused through incorrect, wrong or unreasonable use.
- When using the appliance, do not touch hot surfaces. Use the knobs or handles.
- Never touch the appliance with wet or damp hands or feet.
- Do not allow children or unfit persons to use the appliance unsupervised.
- Young children should be supervised to ensure they do not play with the appliance.
- In the event of failure or malfunction, unplug the appliance from the mains.

For repairs, contact an authorized Service Centre only and request original spare parts. Failure to respect the above could reduce the safety of the appliance.

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

INSTALLATION

- After removing the packaging, make sure the product is complete. If in doubt, do not use the appliance and contact a qualified professional.
- The packing elements (plastic bags, polystyrene foam, etc.) should be kept out of reach of children as they are a safety hazard.
- Place the appliance on a work surface far away from water taps, basins and sources of heat.
- After positioning the appliance on the work top, leave a space of at least 5 cm between the surfaces of the appliance and the side and rear walls and at least 20 cm above the coffee maker.
- Never install the appliance in environments where the temperature may reach 0°C or lower (the appliance may be damaged if the water freezes).
- Check that the voltage of the mains power supply corresponds to the value indicated on the appliance rating plate. Connect the appliance to an efficiently earthed socket with a minimum current rating of 10A only. The manufacturer may not be considered liable for possible incidents caused by the failure to adequately earth the mains.
- If the power socket does not match the plug on the appliance, have the socket replaced with a suitable type by a qualified professional.
- The power cable on this appliance must not be replaced by the user as this operation requires the use of special tools. If the cable is damaged or requires replacing, contact an authorised service centre only to avoid all risks.



[You're reading an excerpt. Click here to read official DELONGHI BCO 120 user guide](http://yourpdfguides.com/dref/3393776)
<http://yourpdfguides.com/dref/3393776>

Manual abstract:

This is the only way to ensure best results and maximum safety for the user. For repairs, contact an authorized Service Centre only and request original spare parts. Failure to respect the above could reduce the safety of the appliance. **IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.** At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. @@@@1. Power cable 2. Steam tube 3. Spray hood 4. Drip tray 5. Boiler filter disk for espresso coffee 6. Warming plate 7. ON/OFF switch for espresso coffee and cappuccino 8. ON/OFF switch for drip coffee 9. ON light for drip coffee 10. ON light for espresso coffee and cappuccino 11. Small jug for espresso coffee 12. Two cup adapter for espresso coffee 13.

Measure 14.

Filter holder for espresso coffee 15. Filter for espresso coffee 16. Filter holder for drip coffee 17. Large jug for drip coffee 18. "Vario System" flavour selector for espresso coffee 19. "Flavour System" flavour selector for drip coffee 20. Water tank for drip coffee (removable) 21. Water tank lid 22. Boiler for espresso coffee 23. Boiler cap 24.

Steam knob 25. Flavor savor 26. Filter for drip coffee · This appliance is designed to make coffee or heat drinks. Be careful to avoid being scalded by sprays of water or steam or due to improper use of the appliance. · This appliance is intended for domestic use only. Any other use is considered improper and thus dangerous. · The manufacturer cannot be held responsible for any damage caused through incorrect, wrong or unreasonable use. · When using the appliance, do not touch hot surfaces. Use the knobs or handles. · Never touch the appliance with wet or damp hands or feet.

@@@@@@If in doubt, do not use the appliance and contact a qualified professional. · The packing elements (plastic bags, polystyrene foam, etc.) should be kept out of reach of children as they are a safety hazard. · Place the appliance on a work surface far away from water taps, basins and sources of heat. · After positioning the appliance on the work top, leave a space of at least 5 cm between the surfaces of the appliance and the side and rear walls and at least 20 cm above the coffee maker.

· Never install the appliance in environments where the temperature may reach 0°C or lower (the appliance may be damaged if the water freezes).

@@@@@@@1). @@2). You can leave the tank in the appliance and fill using the drip coffee jug marked with the levels (fig. 3).

· Replace the tank in the appliance and press gently. · Open the filter holder by rotating towards the right (fig. 4) and pulling by the handle. · Position the filter in the filter holder (fig. 5). · Place the ground coffee in the filter using the measure supplied and level evenly (Fig. 6). As a general rule, use one level measure of ground coffee (about 7 grams) for each cup (for example 10 measures for 10 cups). The quantity of ground coffee used may, however, be varied according to personal taste. Use good quality medium ground coffee for drip coffee machines.

· Close the filter holder and place the jug on the warming plate with the lid on. · Choose the desired flavour as indicated in the paragraph "HOW TO CHOOSE THE FLAVOUR OF DRIP COFFEE". · Press the ON/OFF switch for drip coffee (fig. 7). The light (9) above the switch comes on. · Delivery of coffee will start after a few seconds. It is completely normal for the appliance to release a little steam while the coffee is percolating. · If you leave the ON/OFF switch for drip coffee pressed after percolation has finished with the jug on the warming plate, the coffee will be kept at the ideal temperature. **HOW TO PREPARE ESPRESSO COFFEE** 1. Unscrew the boiler cap by turning it anticlockwise.

2. @@@@3. Pour the water into the boiler (fig. 10). 4.

Close the boiler cap by turning it firmly clockwise. 5. Place the filter for espresso coffee into the filter holder (fig. 11). 6.

@@12). @@7. Remove excess coffee from the edge of the filter (fig. 13). 8. @@@@Always rotate as far as it will go. 9. Place the small jug for espresso coffee under the filter holder (fig. 15). @@10.

@@16). 11. Make sure the steam knob is closed by turning it clockwise. 12. Press the ON/OFF switch for espresso coffee. @@17). 13. @@18). @@14. @@7).

15. Pour the coffee into the cups. 16. To eliminate the used coffee grounds, unhook the filter holder. @@@@@@@20).

NB: For reasons of safety, when the boiler is hot, the cap cannot be opened as it turns without catching. If you need to remove it, vent all the steam in the boiler using the steam knob as described above. **HOW TO USE THE TWO CUP ADAPTER** The adapter must be used whenever you want to make coffee directly in the cups rather than in the small jug. To mount, hook onto the bottom of the filter holder (fig. 21).

IMPORTANT: When you use the appliance for the first time, all accessories and the internal circuits must be washed as follows: · **FOR THE DRIP COFFEE**

MAKER: make at least two jugs of coffee without using ground coffee (following the instructions in the section **HOW TO PREPARE DRIP COFFEE**).

@@@@@ · Immerse the frother into the milk by about 5 mm (fig. @@@@@@@24). @@ · Press the ON/OFF switch for espresso/cappuccino to turn off the appliance. · Pour the frothed milk over the coffee, with the aid of a spoon. Then, as a final touch, sprinkle a bit of cocoa powder over the frothy milk to have a perfect cappuccino. · In order to make 4 cappuccinos, it is necessary to repeat the previous operations, paying attention to the quantity of ground coffee and water, indicated in the chart at the end of the text. Furthermore, before positioning the Vario System selector to the Cappuccino position, brew enough coffee into the coffee pot to reach the level 4 on the "COFFEE LEVEL" side as indicated in figure 25. **IMPORTANT:** The milk frother for cappuccinos must be thoroughly cleaned after each use. Proceed as follows: · Unscrew the milk frothing bit from the tube by turning in a clockwise direction (fig.

26) and wash it accurately with warm water. @@27, are not plugged. If necessary, clean the holes with a pin or needle. @@@@ · Brew the coffee into the small espresso coffee pot. @@22), place the Vario System selector to the "cappuccino" mode (fig. 16). Careful attention must be paid to this operation: in fact, if the coffee should surpass the level 2, there will be no water left in the tank to make the steam for frothing the milk. · Pour the coffee into 2 sufficiently large cups. · Pour approximately 100 grams of milk into the recipient for each cappuccino to be made. It is important to use fresh milk which has not been boiled 14 **CLEANING AND MAINTENANCE** · Before performing any cleaning operations, leave the appliance to cool down and unplug from the mains socket.



[You're reading an excerpt. Click here to read official DELONGHI](#)

[BCO 120 user guide](#)

<http://yourpdfguides.com/dref/3393776>