




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DELONGHI CA F FE' TREVISO BAR 14 F. You'll find the answers to all your questions on the DELONGHI CA F FE' TREVISO BAR 14 F in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DELONGHI CA F FE' TREVISO BAR 14 F
User guide DELONGHI CA F FE' TREVISO BAR 14 F
Operating instructions DELONGHI CA F FE' TREVISO BAR 14 F
Instructions for use DELONGHI CA F FE' TREVISO BAR 14 F
Instruction manual DELONGHI CA F FE' TREVISO BAR 14 F

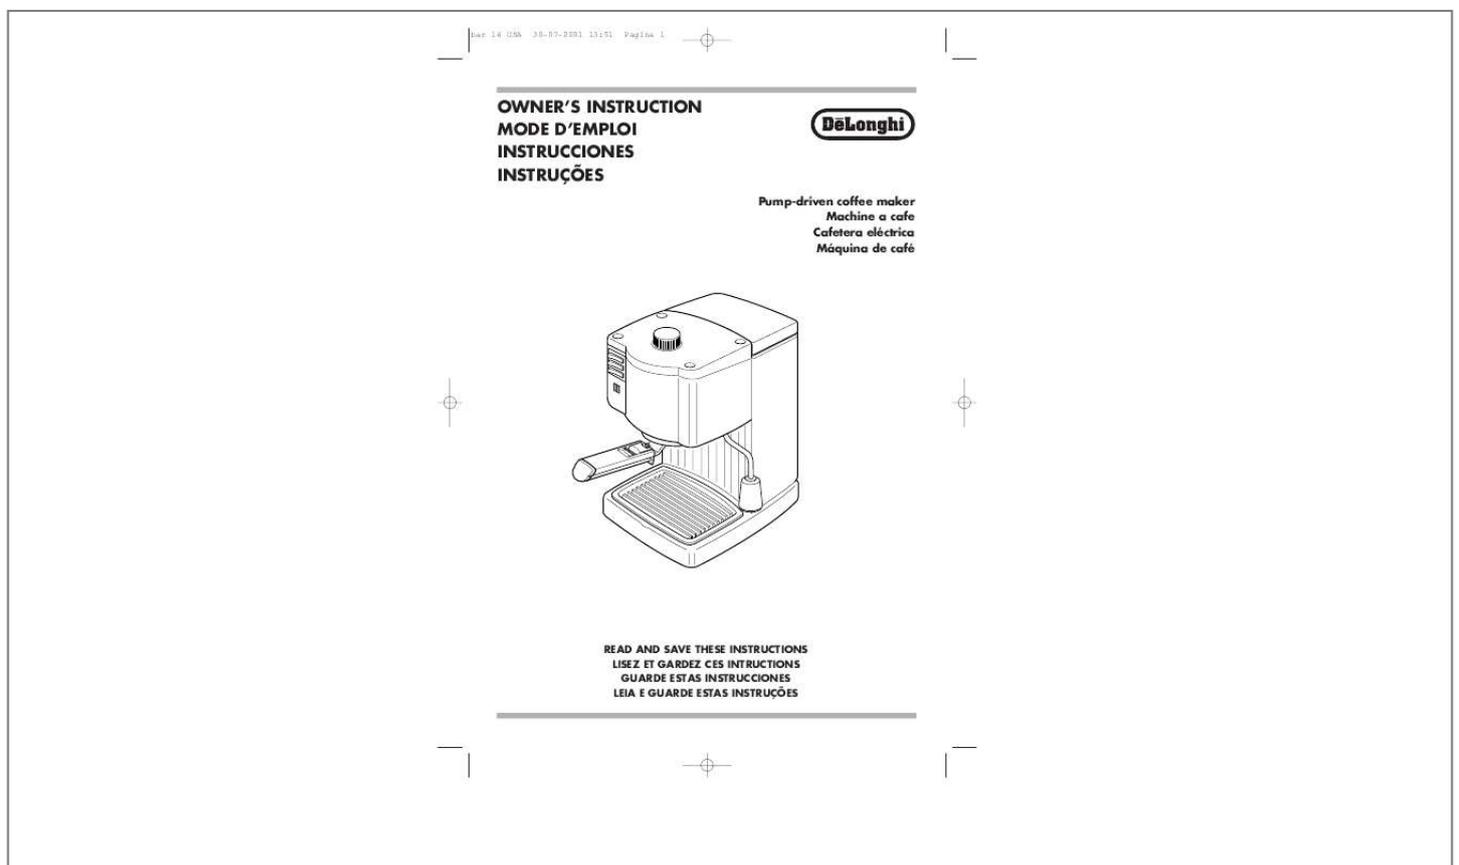

[You're reading an excerpt. Click here to read official DELONGHI CA F FE' TREVISO BAR 14 F user guide](http://yourpdfguides.com/dref/3383061)
<http://yourpdfguides.com/dref/3383061>

Manual abstract:

· Do not touch hot surfaces. Use handles and knobs. · To protect against fire, electrical shock and personal injury, do not immerse cord, plug or appliance in water or other liquid. · Close supervision is necessary when any appliance is used by or near children. · Unplug from the outlet when not in use and before cleaning. Allow to cool before fitting or taking off parts, and before cleaning the appliance. · Do not operate with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment. · The use of accessory attachments or spare parts not recommended by the appliance manufacturer may result in fire, electrical shock or personal injury. · Do not use outdoors.

· Do not let the cord hang over the edge of the table or counter, or touch hot surfaces. · Do not place on or near a hot gas or electrical burner, or in a heated oven. · Always attach plug to appliance first, then plug cord into the wall outlet. @@@@If the appliance is provided with 3-wire, grounding type cord, the extension should be a GROUNDING TYPE 3 - WIRE CORD. The longer cord should be arranged so that it will not drape over the counter-top or table top where it can be pulled on by children or tripped over.

Your product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet.

Do not defeat the safety purpose of the polarized plug. - 5 bar 14 USA 30-07-2001 13:51 Pagina 6 USE OF THE MACHINE THIS MACHINE IS FOR HOUSEHOLD USE ONLY When using for the first time After unpacking the appliance, remove the plastic bag containing the accessories. All accessories (filterholder, measuring spoon, two filters) must be washed with detergent and lukewarm water, then rinsed thoroughly. Then the internal circuit should be washed as follows: Filling the reservoir Remove the tank cover and pour fresh water into the tank (fig. 1). In some models the tank can be removed by lifting it upwards and, at the same time, lifting the intake tubes (fig. 2). Rinse the tank and fill with cold water to the upper mark (MAX.), then replace the tank in its housing, ensuring that the tubes are immersed in the water. Pre-wash - Insert the plug into the power socket (do not forget the safety warnings).

- Press the ON/OFF switch (S) and the delivery switch (U). The ON/OFF pilot lamp will light (fig. 3) and the pump will switch on. Wait until water begins to flow from the boiler nozzle; then turn the delivery switch off. After about 2 minutes, the pilot lamp will light (fig. 4) to indicate that the water in the boiler has reached the correct temperature. - Press the delivery switch again for 10/15 seconds, allowing water to flow from the boiler nozzle (fig. 5). Then turn the delivery switch off. - To ensure perfect pre-washing, repeat this procedure at least five or six times.

The machine is now ready for use. Positioning the filter-holder To insert the filter-holder in the machine, position it under the nozzle (fig. 6). Then push the filter holder upwards and at the same time rotate it towards the right as far as it will go. HOW TO MAKE A PERFECT ESPRESSO COFFEE Some suggestions - Always use fresh water and keep the tank clean.

- Before making coffee, always wait for the "OK" pilot lamp to light. (This lamp indicates that the water in the boiler has reached the correct temperature for brewing coffee). @@@@- Insert the 1 or 2-cup filter into the filter holder (fig. @@- Wait until the "OK" pilot lamp lights (fig. @@How to operate - Switch on the machine by pushing the ON/OFF switch.

@@This is perfectly normal. Insert the 1- or 2-cup filter (fig. 7). Place 1 or 2 measures of ground coffee in the filter. @@8), which gives a even better cup of espresso. Remove any excess of coffee from the filter rim. Attach the filter-holder as described previously (fig. 6), remembering to rotate it towards the right as far as it will go. @@9). When the "OK" pilot lamp lights, press the delivery switch.

@@@@@@@10). @@@@Switch the machine on by pressing the "ON/OFF" switch. Press the steam switch (T). After about 3 minutes, the OK pilot lamp (fig. @@@@However, care should be taken to avoid scalding. @@12). Lower the container until the nozzle skims the surface of milk (fig. @@@@14). Note: Immediately after use, unscrew and rinse the "cappuccino" nozzle to remove any milk deposit (fig. 15).

From time to time, use a pin to clean the holes in the cappuccino nozzle. - - PRODUCING STEAM Steam is useful for heating liquids such as tea, soup, etc. Operating instructions - Press the ON/OFF switch (S) and the steam switch (T). - After a few minutes, the "OK" pilot lamp lights to indicate that the machine has reached the correct temperature for the selected function (in this case, the making of steam). - Immerse the steam nozzle in the liquid to be heated and turn the steam control knob counterclockwise.

@@- When the liquid is hot, completely close the steam knob and turn the ON/OFF switch (S) and the steam switch (T) off. - Clean the steam nozzle immediately after use. - For a few moments, the steam will come out mixed together with a little water. @@If you have not used the machine to make coffee for a long period of time, you may have difficulty producing steam. 7 bar 14 USA 30-07-2001 13:51 Pagina 8 If so proceed as follows: - close the steam control knob; - press the delivery switch allowing water to flow from the boiler nozzle; - turn the delivery switch off and repeat operations previously described.

Producing hot water (to prepare tea, hot chocolate, consommé, etc.) - Press the ON/OFF switch (S). - Wait until the "OK" pilot lamp lights (fig. 4). - Place a cup or glass under the steam nozzle. - Press the delivery switch and, at the same time, open the steam control knob. - Hot water will flow from the nozzle. As soon as the desired quantity of hot water has been te of delivery and applies only to the original purchaser. What Does This Warranty Not Cover? This warranty does not cover defects or damage of the Espresso Coffee Machine which result from repairs or alterations to the machine outside our factory or authorized service centers, nor shall it apply to any Espresso Coffee Machine which has been subject to abuse, misuse, negligence or accidents. Also, consequential and incidental damages resulting from the use of this product or arising out of any breach of contract or breach of this warranty are not recoverable under this warranty.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.



[You're reading an excerpt. Click here to read official DELONGHI CAFFE' TREVISO BAR 14 F user guide](http://yourpdfguides.com/dref/3383061)
<http://yourpdfguides.com/dref/3383061>

How Do You Get Service? If repairs become necessary or spare parts are needed, please write to: De'Longhi America Inc. Park 80, West Plaza One, 4th floor Saddle Brook NJ 07663 Tel. No. 1-800-322-3848 or visit our internet site www.delonghiusa.com The above warranty is in lieu of all other express warranties and representations; All implied warranties are limited to the applicable warranty period set forth above. This limitation does apply if you enter into an extended warranty with De'Longhi. @@How Does State Law Apply? @@@@@Cette garantie remplace toutes les autres garanties et représentations, exprimées ou impliquées, et toute autre obligation ou responsabilité de notre part. Nous n'autorisons aucune autre personne ou compagnie à assumer pour nous une quelconque responsabilité en relation avec la vente ou l'utilisation de nos appareils.

Cette garantie ne s'appliquera ni aux appareils qui seront réparés ou endommagés hors de notre usine, ni aux appareils qui auront été sujets à une mauvaise utilisation, à une négligence ou à un accident. Si des réparations ou des pièces de rechange sont nécessaires, vous êtes priés d'écrire à: De'Longhi America Inc. Park 80, West Plaza One, 4th floor Saddle Brook NJ 07663 Tel. No. 1-800-322-3848 ou bien contacter notre site internet www.delonghiusa.com 10.



[You're reading an excerpt. Click here to read official DELONGHI CA
F FE' TREVISO BAR 14 F user guide
<http://yourpdfguides.com/dref/3383061>](http://yourpdfguides.com/dref/3383061)