



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DELONGHI CF 212. You'll find the answers to all your questions on the DELONGHI CF 212 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DELONGHI CF 212
User guide DELONGHI CF 212
Operating instructions DELONGHI CF 212
Instructions for use DELONGHI CF 212
Instruction manual DELONGHI CF 212

02-5751010900 14-11-2003 14:17 Pagina 15

Warnings

GENERAL WARNINGS
After removing the packaging, make sure the product is complete and undamaged. If in doubt, do not use. Contact an authorized technical service centre.
Packaging (bags, polystyrene foam, staples, etc.) should be kept out of reach of children as they are a potential hazard.

- Before connecting the appliance, make sure the specification given on the rating plate corresponds to that of the mains electricity supply.
- The appliance must be connected to a mains socket conforming to current legislation on domestic installations.
- The mains must be earthed and with a power adequate for the rated power of the appliance.
- The appliance must be used exclusively for the purpose for which it was expressly conceived, namely as an air conditioning unit for domestic use or similar.
- Any other use is considered improper and thus dangerous.
- Improper, incorrect or irresponsible use disavows the manufacturer from all liability for resulting damage.

When using any electrical appliance, certain fundamental rules should be respected. In particular:

- Do not touch the appliance with wet or damp hands or feet.
- Protect the appliance from atmospheric agents (rain, sun, etc.).
- Always position the air conditioning unit on a stable surface.
- Do not use the appliance near bath tubs, showers or sinks (minimum distance, 1 metre).
- Keep the appliance away from electric or convection heaters or other heat generating appliances.
- Never insert objects into the intake or outlet venting holes.
- Leave a minimum of 50 cm between the appliance and furniture or walls.
- Do not rest anything on top of the appliance.
- Avoid contact with chemical substances.
- Do not use the appliance without the filter.
- Do not use the plug to turn the appliance on and off. Always use the switch on the control panel.
- Clean the air filter when dirty. The appliance is much more efficient when the air filter is clean.
- Do not allow children or unfit persons to use the appliance without adequate supervision.
- Never allow children to play with the appliance.
- Children and elderly or disabled persons are not always aware of the potential risks deriving from use of an electrical appliance. The appliance must never be used without adult supervision.
- Never connect the appliance to multiple sockets or extensions.
- Never scratch or twist the power cable.
- Before cleaning or maintenance of any sort, always turn the appliance off and disconnect from the mains power supply by unplugging from the socket or turning off the mains switch.
- In the case of breakdown and/or faulty operation, turn the appliance off. Do not tamper.
- If repairs are necessary, contact an authorized technical service centre only and ask for original spare parts only to be used. Failure to respect the above may jeopardise the safety of the appliance.
- When not in use, you should render the appliance inoperative by turning it off and disconnecting it from the mains (after turning off the mains switch).
- Parts which may constitute a danger, particularly if played with by children, should also be rendered harmless.
- The appliance conforms to EC directives 89/336/EEC - 92/31/EEC - 93/68/EEC on electromagnetic compatibility (EMC) and EC directives 72/23/EEC - 93/68/EEC on low voltage (LVD).
- Do not obstruct the air intake or discharge grills. To use the air exhaust kit supplied, you must leave a window or french window open slightly.

ENGLISH



[You're reading an excerpt. Click here to read official DELONGHI CF 212 user guide](http://yourpdfguides.com/dref/3387309)
<http://yourpdfguides.com/dref/3387309>

Manual abstract:

If in doubt, do not use. Contact an authorised technical service centre. Packaging (bags, polystyrene foam, staples, etc) should be kept out of reach of children as they are a potential hazard. · Before connecting the appliance, make sure the specification given on the rating plate corresponds to that of the mains electricity supply. · The appliance must be connected to a mains socket conforming to current legislation on domestic installations. · The mains must be earthed and with a power adequate for the rated power of the appliance. · This appliance must be used exclusively for the purpose for which it was expressly conceived, namely as an air conditioning unit for domestic use or similar. · Any other use is considered improper and thus dangerous. · Improper, incorrect or irresponsible use absolves the manufacturer from all liability for resulting damage. When using any electrical appliance, certain fundamental rules should be respected, in particular: · Do not touch the appliance with wet or damp hands or feet.

· Protect the appliance from atmospheric agents (rain, sun, etc). · Always position the air conditioning unit on a stable surface. · Do not rest anything on top of the appliance. · Avoid contact with chemical substances. · Do not use the appliance without the filter.

· Do not use the plug to turn the appliance on and off. Always use the switch on the control panel. · Clean the air filter when dirty. The appliance is much more efficient when the air filter is clean. · Do not allow children or unfit persons to use the appliance without adequate supervision.

· Never allow children to play with the appliance. · Children and elderly or disabled persons are not always aware of the potential risks deriving from use of an electrical appliance. The appliance must never be used without adult supervision. · Never connect the appliance to multiple sockets or extensions. · Never scratch or twist the power cable. · Before cleaning or maintenance of any sort, always turn the appliance off and disconnect from the mains power supply by unplugging from the socket or turning off the mains switch. · In the case of breakdown and/or faulty operation, turn the appliance off. Do not tamper. · If repairs are necessary, contact an authorised technical service centre only and ask for original spare parts only to be used. Failure to respect the above may jeopardise the safety of the appliance.

· When not in use, you should render the appliance inoperative by turning it off and disconnecting it from the mains (after turning off the mains switch). · Parts which may constitute a danger, particularly if played with by children, should also be rendered harmless. · The appliance conforms to EC directives 89/336 EEC - 92/31/EEC - 93/68 EEC on electromagnetic compatibility (EMC) and EC directives 72/23/EEC - 93/68 EEC on low voltage (BT). · Do not obstruct the air intake or discharge grills. To use the air exhaust kit supplied, you must leave a window or French window open slightly. 15 ENGLISH GB-5751010900 14-11-2003 14:17 Pagina 16 Introduction The portable air conditioner is a compact unit for regulating air temperature and humidity. Its extremely flexible characteristics make it easy to use at any time and in any room. It can be operated in multiple modes including cooling, dehumidifying and ventilating. The appliance has been designed for domestic use and may be used in the home, office, etc. · Keep the filter clean.

· The temperature cannot be selected in advance. · Do not connect to multiple sockets.

OPERATING IN AIR CONDITIONING MODE 1. Make sure the condensate tank is correctly in place. 2.

"COOL" appears on the display. 4. Press the FAN SPEED button to select a suitable fan speed: Max, Med, Min. OPERATING IN DEHUMIDIFYING MODE 1. Keep the windows and door closed to make dehumidification of the room more efficient.

2. Make sure the condensation tank is correctly in place. 3. Repeatedly press the "MODE" button to select the dehumidifying mode. "DRY" appears on the display. 4. Neither the fan speed nor temperature can be regulated. 5. Do not use the exhaust hose to expel the air outside. The hot air given out at the back of the appliance should not be expelled from the room.

20 GB-5751010900 14-11-2003 14:17 Pagina 21 Operation TIMER FUNCTION When the air conditioning unit is off (but plugged into the mains socket), to turn it on at the required time press the "TIMER ON/OFF" button (" " will appear on the display), then press the "TIMER HOUR" button until the number of hours to elapse before the appliance comes on appears on the display. Vice versa, when the air conditioning unit is on, to turn it off at the required time press the "TIMER ON/OFF" button (" " will appear on the display), then press the "TIMER HOUR" button until the number of hours to elapse before the appliance goes off appears on the display. The timer can be set from one to 12 hours. AUTOMATIC SWING FUNCTION Press the SWING button once. The fins will swing, distributing the air flow in the room. Press the button again, the flow will be steady in one direction. CHILD SAFETY Pressing the "+" and "-" buttons on the control panel together for more than two seconds locks the keypad. The " " symbol appears on the LCD display. The same keypad lock function can be activated on the remote control unit by pressing the " " button. To unlock, repeat the operation.

BEFORE USING THE APPLIANCE 1. If the appliance has been in a horizontal position during storage or transport, you are recommended to wait at least three hours before turning it on. 2. Always position the air conditioning unit on a stable surface. 3.

Attach the air exhaust hose to the air conditioning unit. 4. Plug the air conditioning unit into a suitably rated mains socket. 5. Set the various functions of the air conditioning unit according to your requirements.

6. The cooling system will shut down when room temperature drops below the set temperature. The fan will, however, continue to operate at the set speed. If the room temperature rises above the temperature set, the cooling system comes on again automatically. 21 ENGLISH GB-5751010900 14-11-2003 14:17

Pagina 22 Installation CHOOSING THE INSTALLATION SITE Position the air conditioning unit on a flat surface where the air outlet grills cannot be obstructed. Position the appliance at least 50 cm away from walls or obstacles. INSTALLING THE AIR EXHAUST HOSE 1. Open out the end of the hose and screw the two adapters on anticlockwise (see figure). 2. Fit the square adapter on the air exhaust hose tank, remove and completely empty it of water.

Clean with neutral detergents, rinse and dry thoroughly.



[You're reading an excerpt. Click here to read official DELONGHI CF](http://yourpdfguides.com/dref/3387309)

[212 user guide](http://yourpdfguides.com/dref/3387309)

<http://yourpdfguides.com/dref/3387309>

Then replace in the original position. AIR FILTER If the air filter is blocked by dirt or dust, the flow of air diminishes, reducing the performance of the appliance and leading to malfunction. @@1. Open the air filter holder grill by pulling it towards the outside. 2. Remove the filter from the filter holder grill. 3. @@4. @@5.

Replace the grill on the unit. END OF SEASON PROCEDURE 1. @@2. In models with a continuous condensation drain tube only, before emptying the condensation water from the tank, remove the cap from the plastic tube to enable water in the tube to flow into the tank, then operate the unit in fan mode for half a day to ensure that the inside of the unit is completely dry. Filter holder grill Pins 3.

Empty the condensation water from the tank, clean and dry 4. Wind the power cable around the cable winder, then cover the appliance with a cover or bag and store in a dry place. plastic tube cap grill 25 ENGLISH GB-5751010900 14-11-2003 14:17 Pagina 26 T r o u b l e s h o t i n g Before contacting an authorised technical service centre, check the following: Problem The appliance does not work. Check Solution · If there is a power cut · If the plug is not correctly inserted in the socket · If the mains switch or the switch on the air conditioning unit is off. · If the condensation tank indicator light is on. · If the condensation tank is positioned correctly · Check it no longer occurs · Plug into the mains · Check the mains switch or turn the air conditioning unit switch on · Empty the water in the tank · Position the condensation tank correctly The appliance does not cool satisfactorily · If the air intake and outlet grills are blocked · If there are other sources of heat in the room · If the air filter is very dirty · If the temperature set (SET TEMP) is not correct · If the internal fan speed is on slow · Clean and free from obstructions · Move the heat source · Clean the air filter · Set the temperature · Set the fan speed correctly · This is normal · Place the appliance in a horizontal position There is excessive noise and vibration · It is caused by the refrigerant fluid running through the tubes · Is it sloping? The unit shuts down or starts up frequently · Is the air expelled through the exhaust hose correctly or does the hose follow a tortuous path? · Other exhausts have been connected together on the same hose · Try and keep the air exhaust hose in as horizontal a position as possible to facilitate evacuation of the air. · Do not use other exhaust hoses, always use the hose supplied to expel the air. 26 .



[You're reading an excerpt. Click here to read official DELONGHI CF](http://yourpdfguides.com/dref/3387309)

[212 user guide](http://yourpdfguides.com/dref/3387309)

<http://yourpdfguides.com/dref/3387309>