



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DELONGHI DAP 700E. You'll find the answers to all your questions on the DELONGHI DAP 700E in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DELONGHI DAP 700E
User guide DELONGHI DAP 700E
Operating instructions DELONGHI DAP 700E
Instructions for use DELONGHI DAP 700E
Instruction manual DELONGHI DAP 700E

Air Purifier with Ionizer
Épurateur d'air avec ionisateur
Luftreiniger mit Ionisator
Purificatore d'aria con ionizzatore
Luchtzuiveringsapparaat met Ionisator
Purificador de Aire con Ionizador
Purificador de Ar com Ionizador
Ιονιστής αέρα
Luftrenser med ioniseringsanordning
Luftrenare med jonisator
Ilmanpuhdistaja - ionisoja
Luftrenser med ioniseringsanordning

Instructions for use
Mode d'emploi
Gebrauchsanweisung
Istruzioni per l'uso
Gebruiksaanwijzing
Instrucciones para el uso
Instruções para o uso
Οδηγίες χρήσης
Bruksanvisning
Bruksanvisning
Käyttöohje



[You're reading an excerpt. Click here to read official DELONGHI DAP 700E user guide](http://yourpdfguides.com/dref/3390771)
<http://yourpdfguides.com/dref/3390771>

Manual abstract:

1 1 2 Fig. 2 3 Fig. 3 3 READ THIS BOOKLET CAREFULLY BEFORE USING THE APPLIANCE. THIS IS THE ONLY WAY TO ENSURE BEST RESULTS AND MAXIMUM SAFETY. GENERAL INSTRUCTIONS GB - This appliance must be used exclusively for the purpose for which it was expressly conceived, namely as a domestic air purifier. Any other use is considered improper and thus dangerous. Improper, incorrect or irresponsible use and/or repairs performed by unqualified personnel absolve the manufacturer from all liability for resulting damage. - After unpacking, make sure the appliance is complete and undamaged. If in doubt, do not use and consult a qualified electrician. @@@@ - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- Children or infirm persons should not be allowed to use this product unsupervised - Children should not be allowed to play with this appliance - Never immerse the appliance in water. - When the appliance is plugged into the mains, always respect the following fundamental safety rules: - never touch the appliance with damp or wet hands; - do not use the appliance with bare or damp feet; - do not pull the power cable or appliance itself to unplug from the mains; - keep the appliance out of reach of children; - do not insert foreign bodies into the appliance; - protect the appliance from atmospheric agents and do not use out of doors; - do not obstruct the air intake and outlet grills; - If the power cable is damaged, it must be replaced at once by specialist personnel authorised by the manufacturer only. - If the appliance is to be disposed of definitively, after unplugging from the mains socket, you are recommended to remove the power cable to make it unusable. - Before cleaning or maintenance of any sort, always unplug the appliance from the mains socket. - In the event of breakdown and/or malfunction, turn the appliance off.

Do not attempt to repair it. - For all repairs, contact professional service centres only and insist on the use of original spare parts and accessories. - Before use, always check that the power cable is undamaged. KEEP THESE INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE 4 FEATURES 1.

De'Longhi air purifiers incorporate the latest technology in domestic air filtration; 2.

A powerful silent fan motor draws in the air from the front panel; 3. The contaminated air passes through a washable prefilter which removes the larger impurities such as dust and pollen. The partially filtered air is then passed through a long-lasting HEPA filter with a large filtering surface. This is easily recognisable as it is made with special folded paper. @@@@ @@@@ @@@@ @@@@ 2. Remove the front grill (A). Inside you will find the filters packed in plastic bags; 3. Remove the filter packaging. @@@@ @@@@ @@@@ The light corresponding to the mode selected comes on. @@ The light on the button comes on.

@@ The appliance goes off after three hours. @@@ Dry the components carefully before replacing. The top air emission grill can be cleaned with a small, soft brush. WARNING: Never immerse the appliance in water to clean the purifier. 6 MAINTENANCE AND FILTER REPLACEMENT 1. @@ These should therefore be checked regularly. 2. Remove the front panel. Inspect the prefilter. If a considerable amount of dust and other dirt has accumulated, remove the filter from the grill and wash it by hand in warm soapy water.

Dry well before replacing; 3. The life of the HEPA and activated carbon filters depends on the conditions of use. In general, with continuous 24-hour operation at medium speed in conditions with normal amounts of dust/smoke in the air, the HEPA filters last about 12-18 months and the activated carbon filters about 6-12 months. To change the activated carbon filter, first remove the HEPA filter, then remove the activated carbon filter and replace with a new one. Before replacing the front panel, check that the prefilter is clean.

Frequent cleaning of the prefilter will help prolong the life of the HEPA filter; 4. When the white filter becomes dark grey or brown, it needs replacing. Do not wash the activated carbon or HEPA filters. Once exhausted, these filters can no longer be used. 5.

De'Longhi replacement filters are available from our service centres and home appliance retailers. IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC. At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin. ELECTRICAL CONNECTION (UK ONLY) A If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below.

@@ @@@@ In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug.

B) If your appliance is not fitted with a plug, please follow the instructions provide.



[You're reading an excerpt. Click here to read official DELONGHI](http://yourpdfguides.com/dref/3390771)

[DAP 700E user guide](http://yourpdfguides.com/dref/3390771)

<http://yourpdfguides.com/dref/3390771>