



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DELONGHI DES 12. You'll find the answers to all your questions on the DELONGHI DES 12 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DELONGHI DES 12
User guide DELONGHI DES 12
Operating instructions DELONGHI DES 12
Instructions for use DELONGHI DES 12
Instruction manual DELONGHI DES 12

SOME NOTIONS ON HUMIDITY

Air always contains a certain amount of water in the form of vapour; this determines the level of humidity in an atmosphere.

The capacity of the air to hold water vapour increases with temperature.

This is why in our homes, as soon as the temperature decreases, the vapour contained in the air condenses, as is evident on the colder surfaces in the room, such as the windows, walls etc.

The purpose of a dehumidifier is to remove the excess moisture from the air, avoiding the damage

caused by condensation.

Experts have established that the optimum environmental conditions for our well being and for the home are obtained between 40% and 60% relative humidity. With very low temperatures, you are recommended to heat the room even minimally.


This considerably increases the dehumidifying power of the appliance.

With heating, the condensation formed by the water vapour on windows and other cold surfaces evaporates into the air to be collected by the dehumidifier. Air leaving the dehumidifier is usually about 1°C warmer than room temperature.

DESCRIPTION/ACCESSORIES

1. Control panel
2. Water level viewing window
3. Condensate collection tank

4. Lifting handle
5. Air intake grille
6. Silver ion air filter
7. Air outlet grille
8. Condensate drain hose (2 m)
9. Castors

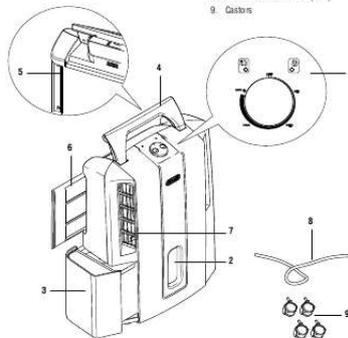

10



[You're reading an excerpt. Click here to read official DELONGHI DES 12 user guide](http://yourpdfguides.com/dref/3390695)
<http://yourpdfguides.com/dref/3390695>

Manual abstract:

This determines the level of humidity in an atmosphere. The capacity of the air to hold water vapour increases with temperature. This is why in our homes, as soon as the temperature decreases, the vapour contained in the air condenses, as is evident on the colder surfaces in the room, such as the windows, walls etc. The purpose of a dehumidifier is to remove the excess moisture from the air, avoiding the damage caused by condensation. Experts have established that the optimum environmental conditions for our well being and for the home are obtained between 40% and 60% relative humidity. @@This considerably increases the dehumidifying power of the appliance. @@Air leaving the dehumidifier is usually about 1°C warmer than room temperature. 4. Lifting handle 5. Air intake grille 6.

Silver ion air filter 7. Air outlet grille 8. Condensate drain hose (2 m) 9. Castors DESCRIPTION/ACCESSORIES 1. Control panel 2. Water level viewing window 3. Condensate collection tank 5 4 1 6 8 7 2 3 9 10 INTRODUCTION Thank you for choosing a De'Longhi product. Take a couple of minutes to read these instructions. This will avoid danger or damage to the appliance. SAFETY Fundamental safety warnings GB Symbols used in these instructions These symbols draw your attention to important warnings.

It is vital to respect these warnings. @@@@Important! @@N.B.: This symbol draws your attention to important recommendations and information. Problems and repairs In the event of problems, first try and resolve them by reading the information given in the "Troubleshooting" section on page 17. If the appliance requires repair, always contact a Service Centre authorised by the manufacturer. Always insist on original spare parts. Repairs carried out by unauthorised personnel may be dangerous and invalidate the guarantee. Danger! This is an electrical appliance, it is therefore important to respect the following safety warnings: · Do not touch the appliance with wet hands. · Do not touch the plug with wet hands.

@@· Always unplug the appliance using the plug itself. Never pull the cable as it might be damaged. @@· If the appliance malfunctions, do not attempt to repair it. @@· Do not move the appliance by pulling the power cable. @@@@· Do not use extension leads. @@@@Have your electrical circuit checked by a qualified electrician. Danger! Keep packaging materials (plastic bags, polystyrene foam) out of reach of children. Danger! The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Always supervise children. Make sure they do not play with the appliance.

11 Appropriate use The appliance is designed and produced for domestic use only. Use this appliance only as described in this instruction manual. As with all electrical equipment, whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be applied when operating and installing this appliance. Instructions Read these instructions carefully before installing and/or using the appliance.

· Keep these instructions carefully. If the appliance is transferred to other owners, they should also be given these instructions. · Failure to respect the instructions may result in injury or damage to the appliance. The manufacturer is not liable for damage deriving from failure to follow these instructions.

@@Do not install near sources of heat.

Do not use the appliance on sloping surfaces. @@aerosol cans). Do not rest heavy or hot objects on top of the appliance. Always transport the appliance upright or resting on one side. Remember to drain the condensate tank before moving the appliance. @@However, you should avoid perforating the refrigerant circuit. @@@@The materials used for packaging can be recycled. @@Do not use the appliance outdoors. Do not obstruct the air intake or outlet. @@@@· The power socket matches the plug.

@@@@@@@@The tank can be easily removed (fig.1). NO YES fig. @@3) Fit the castors by inserting the pins into the holes. (see figure 4/2) B) Continuous external draining If the appliance is to be operated for long periods but you are unable to empty the tank regularly, you are recommended to use the continuous drain facility. 1) Remove the continuous drain cap by turning it anticlockwise then remove the rubber bung from the spout (fig. 2). 2) Fasten the rubber hose to the spout. N.B.

: While fitting the castors, do not tilt the appliance at an angle of more than 45°. After fitting the castors, wait for at least an hour before using the dehumidifier again. fig. 4 fig. @@Make sure there are no kinks in the hose (Fig.

3). @@Make sure the "tank full/tank missing" light is off. If it is on, position the tank correctly. @@@@On MAX, it removes a large amount of humidity. @@@@A red indicator light on the control panel comes on to warn the user when: 1. the tank is full:

.
... empty the tank 2.
the tank is missing:

. reposition the tank 3. the tank is incorrectly positioned: . . .

. . position the tank correctly 4. with continuous drain: the hose is blocked or sloping upwards (water is still draining into the tank) . .

. remove the obstruction When the cause has been removed, the light goes off and the appliance resumes operation. Dehumidifying standby/lowtemperature operation light The light comes on: 1) To indicate the appliance is in standby for about three minutes before start-up. This device protects the compressor from starting and stopping too often. 2) To indicate low temperature operation. When the temperature in the room is too low, the low temperature operation electronic device trips. This operates the appliance with alternate cycles of dehumidifying and fan only to avoid the formation of ice. For frequent use in particularly cold rooms, you are recommended to raise room temperature, even if only slightly. @@Clean and reposition the filter. @@Do not use petrol, alcohol or solvents to clean the appliance.

@@@@The frequency depends on the duration and conditions of operation. If the unit is used constantly or systematically, you are recommended to clean the filter once a week. 2°C-32°C 30-90% Important information for correct disposal of the product in accordance with EC Directive 2002/96/EC. At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal .



[You're reading an excerpt. Click here to read official DELONGHI
DES 12 user guide](http://yourpdfguides.com/dref/3390695)
<http://yourpdfguides.com/dref/3390695>