



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DELONGHI DH 300P. You'll find the answers to all your questions on the DELONGHI DH 300P in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual DELONGHI DH 300P**  
**User guide DELONGHI DH 300P**  
**Operating instructions DELONGHI DH 300P**  
**Instructions for use DELONGHI DH 300P**  
**Instruction manual DELONGHI DH 300P**

## Introduction and important safeguards

**T**hank you for choosing this appliance. This Owner's Manual will provide you with valuable information necessary for the proper care and maintenance of your new appliance. If properly maintained, your appliance will give you many years of trouble-free operation. Please take a few moments and read the instructions thoroughly and familiarize yourself with all of the operational aspects of this appliance.  
This unit can be conveniently moved from room to room within your home and prepared for use in just a few minutes.

### Important safeguards

- Use your appliance only as described in this instruction manual.
- As with all electrical equipment, whilst the instructions aim to cover as many eventualities as possible, common sense and caution must be used when operating and maintaining any household appliance.
- If the power cable is damaged, it must be replaced by the manufacturer or an authorised service centre in order to eliminate all risk.
- This appliance is designed to dehumidify domestic rooms and must not be used for other purposes.
- The appliance must not be modified in any way, as any modifications may be extremely dangerous.
- If the appliance requires repair, always contact a Service Centre authorised by the manufacturer. Always insist on original spare parts. Repairs carried out by unauthorised personnel may be dangerous and invalidate the guarantee.
- This appliance must be used by adults only. Do not allow children to play with the appliance.
- The appliance must be connected to an efficient earth system. Have your electrical circuit checked by a qualified electrician.
- Do not use an extension cable.
- Always unplug the appliance from the mains before performing cleaning or maintenance operations.
- Never unplug the appliance by pulling on the power cable.
- Do not install the appliance in rooms where the air contains gas, oil or sulphur. Do not install near sources of heat.
- Keep the appliance at least 50 cm away from flammable substances (alcohol etc) or pressurised containers (e.g. aerosol cans).
- Do not rest objects on top of the appliance.
- Clean the air filter regularly.
- The appliance must always remain upright or laid on one side during transportation.  
After moving the appliance, it is good practice to wait at least an hour with the appliance in the vertical before turning it on again.  
Remember to drain the condensate tank before moving the appliance.
- R134A refrigerant gas complies with European environmental protection directives. At the end of its working life, consign the appliance to a specialist collection centre.
- The materials used for packaging can be recycled.  
You are therefore recommended to dispose of them in special differentiated waste collection containers.

13



[You're reading an excerpt. Click here to read official DELONGHI DH 300P user guide](http://yourpdfguides.com/dref/3390721)

<http://yourpdfguides.com/dref/3390721>

**Manual abstract:**

This Owner's Manual will provide you with valuable information necessary for the proper care and maintenance of your new appliance. If properly maintained, your appliance will give you many years of trouble-free operation. Please take a few moments and read the instructions thoroughly and familiarize yourself with all of the operational aspects of this appliance. This unit can be conveniently moved from room to room within your home and prepared for use in just a few minutes. Important safeguards · Use your appliance only as described in this instruction manual. · As with all electrical equipment, whilst the instructions aim to cover as many eventualities as possible, common sense and caution must be used when operating and maintaining any household appliance. · If the power cable is damaged, it must be replaced by the manufacturer or an authorised service centre in order to eliminate all risk. · This appliance is designed to dehumidify domestic rooms and must not be used for other purposes. · The appliance must not be modified in any way, as any modifications may be extremely dangerous. · If the appliance requires repair, always contact a Service Centre authorised by the manufacturer. Always insist on original spare parts. @@ · This appliance must be used by adults only. Do not allow children to play with the appliance. @@ Have your electrical circuit checked by a qualified electrician. · Do not use an extension cable. @@ · Never unplug the appliance by pulling on the power cable. @@ Do not install near sources of heat. · Keep the appliance at least 50 cm away from flammable substances (alcohol etc) or pressurised containers (e.g. aerosol cans). · Do not rest objects on top of the appliance. · Clean the air filter regularly. · The appliance must always remain upright or laid on one side during transportation. After moving the appliance, it is good practice to wait at least an hour with the appliance in the vertical before turning it on again. Remember to drain the condensate tank before moving the appliance. · R134A refrigerant gas complies with European environmental protection directives. At the end of its working life, consign the appliance to a specialist collection centre. · The materials used for packaging can be recycled. You are therefore recommended to dispose of them in special differentiated waste collection containers. 13 Description Description of the appliance 4 8 1 10 2 5 6 3 7 9 1.

2. 3. 4. 5. 6. Control panel Cabinet Castors Air Filter Condensate collection tank Power plug 7. 8. 9. Continuous drain outlet Continuous drain hose Connection for continuous condensate drain with pump 10. Continuous condensate drain hose with pump Description of the control panel ON light Display Defrost light MODE button Room temperature button °F/°C Fan speed button TURBO POWER button PUMP button TIMER button Tank warning light Decrease humidity level/ time button STAND-BY button Increase humidity level/ time button Pump light 14 Control panel STAND-BY button Press to turn the appliance on and off. To turn the appliance off completely, unplug from the mains socket.

Room FAN temperature button Press this button to display the Temperature on the display. If you press the button once the display will show the °F. If you press the button twice, the display will show °C. After a few seconds, the display will automatically show the humidity level again. speed button Press to select fan speed (High, Medium, Low).

Decrease TIMER or increase Humidity Level/ Time buttons These buttons are used to adjust the desired humidity level, with 5% increments; they are also used to set the timer. From 0 -10, the hours increase in steps of 30 minutes. From 1024 they increase in steps of 1 hour. button With the appliance switched ON, if you press the TIMER button the display will show the hours after which you want the appliance to switch OFF (1-2-3... hours). With the appliance in the STAND-BY position, if you press the TIMER button the display will show the hours after which you want the appliance to switch ON (1-2-3... hours). MODE TURBO PUMP button Press this button to select the Fan only or Dehumidifier modes. POWER button Use this button to activate the "turbo power" function. In this mode, the appliance will operate at maximum fan speed and in continuous mode. If pressed again, the unit will revert back to the previous settings.

button Use this button to activate the heavy-duty pump system for active drainage. 15 Control panel On Tank light When the STANDBY button is pressed to start the unit, the ON light comes on. The light will go off again when the unit is switched off. @@@@2. Install your dehumidifier on a floor, table, or shelf. @@@@ Do not sit or stand on the dehumidifier. 3. The tank must be properly positioned. 4. @@ Use the unit in a basement to help prevent moisture damage.

2. @3. @4. @@@@ When the tank is full, remove (fig.1) and empty into a sink.

When finished, replace it properly. NOTE: The tank must be positioned correctly. An intermittent beep means the tank is not correctly positioned. B) Continuous drain. @@ Proceed as follows: 1.

Remove the tank. 2. @3. Connect the hose to the outlet (fig. 3). Make sure the hose is free of kinks or bends. @@4. @@@@5). Select the dehumidifying function and press the pump button. Note: If the condensate hose is not in place and the pump is activated, the pump light will flash.

To eliminate this problem: · Position the hose correctly; · Unplug the appliance from the mains socket then plug in again. fig. 3 fig. 1 Drill fig. 2 Hose fig. 4 Drain 1 P U S H 2 fig. 5 18 S e l e c t i n g t h e o p e r a t i o n s Stand-by How position When the appliance is plugged into the mains socket, the level of humidity to be obtained is displayed on the left (the default value is 60) and two lines are displayed on the right for one minute followed by the level of humidity in the room. to select the required humidity level 1) Push the stand-by button. 2) Press the buttons to set the required humidity level. (80% to a humid environment, 30% corresponds to a dry environment; when the button is pressed again, "--" is displayed to indicate continuous operation. ). 3) Push the MODE button to select the dehumidifying function; the function is selected when the small dot on the display is under the symbol). 4) When the appliance reaches the humidity set point the appliance will automatically stop working. As soon as the humidity increases above the set point, the appliance will automatically resume dehumidification operation. Note: The appliance is equipped with a safety device which will not allow dehumidifying to be activated until three minutes have passed since the last shut down.

How Turbo to use the FAN 1) Push the stand-by button.



[You're reading an excerpt. Click here to read official DELONGHI DH 300P user guide](http://yourpdfguides.com/dref/3390721)  
<http://yourpdfguides.com/dref/3390721>

2) Push the **MODE** button to select the **FAN** function; the function is selected when the small dot on the display is under the symbol). 3) Press the button to modify fan speed (min/med/max). power 1) Press the button. 2) The turbo power function is an automatic dehumidifying function for when you want to use the appliance at maximum power.

When in this mode, two lines are displayed on the left and the level of humidity in the room is displayed on the right. To stop the turbo power function, simply press the button again. How to programme delayed start-up with the appliance off 1) With the unit **OFF**, press the button and use the buttons to set the number of hours after which the appliance should start functioning. 2) The number of hours after which the appliance should start functioning (1-24h) is displayed on the left and a small dot under the symbol indicates that the timer function has been selected. @@@@The care and maintenance instructions are given below. eaning the Front Panel and Cabinet · Use a soft cloth to clean the front panel and cabinet with warm water and mild soap or detergent. · Rinse and dry thoroughly. Wipe the control panel and cabinet with a soft dry cloth. **NOTE:** Never sprinkle the appliance with water to avoid the risk of short circuit and fire. · Never use gasoline, thinner or any other similar chemicals for cleaning.

· Do not use bleach or abrasives. Cl eaning the Air Filter If the filter is dirty, air circulation is compromised and dehumidifying becomes inefficient. It is therefore good practice to clean the filter at regular intervals. The frequency depends on the duration and conditions of operation. · To remove the air filter, pull it out (Fig. 6). · Use a vacuum c.



[You're reading an excerpt. Click here to read official DELONGHI DH 300P user guide](http://yourpdfguides.com/dref/3390721)

<http://yourpdfguides.com/dref/3390721>