



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DELONGHI DNC 65. You'll find the answers to all your questions on the DELONGHI DNC 65 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DELONGHI DNC 65
User guide DELONGHI DNC 65
Operating instructions DELONGHI DNC 65
Instructions for use DELONGHI DNC 65
Instruction manual DELONGHI DNC 65

Useful information on humidity

Air always contains a certain amount of water in the form of vapour. This determines the level of humidity in an atmosphere.

The capacity of the air to hold water vapour increases with temperature. This is why in our homes, as soon as the temperature decreases, the vapour contained in the air condenses, as is evident on the colder surfaces in the room, such as the windows, walls etc. The purpose of a dehumidifier is to remove the excess moisture from the air, avoiding the damage caused by condensation.

Experts have established that the optimum environmental conditions for our well-being and for the home are obtained between 40% and 60% relative humidity. With temperatures near 5°C, you are recommended to heat the room even minimally. With heating, the condensation formed by the water vapour on windows and other cold surfaces evaporates into the air to be collected by the dehumidifier.

Negative ions change the polarity of airborne particles, causing them to magnetically attract together. As a result, they become too large to remain airborne, and fall out of the air that you breathe in. Negative ions are present in our environment, wherever we feel the air clean and fresh, especially around waterfalls, ocean surf, rivers and mountains. It has been proven that negative ions promote wellness, and, as such, provide additional benefits when there are more negative ions than positive ones in the air we breathe.

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.  Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

12



[You're reading an excerpt. Click here to read official DELONGHI DNC 65 user guide](http://yourpdfguides.com/dref/3390747)
<http://yourpdfguides.com/dref/3390747>

Manual abstract:

This determines the level of humidity in an atmosphere. The capacity of the air to hold water vapour increases with temperature. This is why in our homes, as soon as the temperature decreases, the vapour contained in the air condenses, as is evident on the colder surfaces in the room, such as the windows, walls etc. The purpose of a dehumidifier is to remove the excess moisture from the air, avoiding the damage caused by condensation. Experts have established that the optimum environmental conditions for our well being and for the home are obtained between 40% and 60% relative humidity. With temperatures near 5°C, you are recommended to heat the room even minimally. With heating, the condensation formed by the water vapour on windows and other cold surfaces evaporates into the air to be collected by the dehumidifier. Negative ions change the polarity of airborne particles, causing them to magnetically attract together. As a result, they become too large to remain airborne, and fall out of the air that you breathe in. Negative ions are present in our environment, wherever we feel the air clean and fresh, especially around waterfalls, ocean surf, rivers and mountains.

As with all electrical equipment, whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be applied when operating and installing this appliance. This appliance is designed to dehumidify domestic rooms and dry laundry and must not be used for other purposes. It is dangerous to modify or alter the characteristics of the appliance in any way. If the appliance requires repair, always contact a Service Centre authorised by the manufacturer. Always insist on original spare parts.

Repairs carried out by unauthorised personnel may be dangerous and invalidate the guarantee. Never allow the appliance to be used by people (including children) with psychological, physical or sensory impairments or with insufficient experience and knowledge, unless closely supervised and instructed by someone responsible for their safety. Always supervise children. Make sure they do not play with the appliance. If the power cable is damaged, it must be replaced by the manufacturer, an authorised service centre or a qualified electrician in order to eliminate all risk.

The appliance must be connected to an efficient earth installation. Have your electrical circuit checked by a qualified electrician. The use of an extension lead is not recommended, however if it is necessary then follow carefully the extension lead's instructions, and most importantly ensure that the extension lead is correctly rated in accordance with the appliance being used and NEVER overloaded. Before cleaning or maintenance operations, always unplug the appliance from the power socket. Do not move the appliance by pulling the power cable. Never use the appliance in very damp rooms (laundries for example). Do not use the appliance on sloping surfaces. Keep the appliance at least 50 cm away from flammable substances (alcohol etc) or pressurised containers (e.g. aerosol cans).

Do not rest heavy or hot objects on top of the appliance. Clean the air filter regularly. At the end of its working life, consign the appliance to a specialist collection centre. The materials used for packaging can be recycled. You are therefore recommended to dispose of them in appropriate waste collection containers. Do not use the appliance outdoors. Do not obstruct the air intake or outlet. Do not insert metal objects into the apertures. Danger!

The power socket matches the plug. 1.

When the appliance is functioning. MIN. 20 cm MIN. 20 cm MIN. 20 cm MIN.

Do not drop or tilt the appliance. If the appliance falls over, place it upright immediately. 2) Press the ON/OFF button. If it is on, position the tank correctly or empty it. To turn the appliance off, press the POWER ON/OFF button.

Each time you press the (comes on (AUTO, MIN, MAX). Auto: to maintain a comfortable level of humidity. Min: for silent operation. Max: to dehumidify rapidly. NB: The humidity level is maintained at around 55% in Auto mode and the appliance therefore comes on and goes off automatically. (When a humidity of 55% is reached, the appliance switches into fan mode.) Place the dehumidifier at least than 30 cm from the laundry to be dried. NEVER place the dehumidifier under the laundry to be dried. To dry the laundry, select the corresponding button. You can choose between two different programmes: ECON economy function: Use this programme during the summer.

The appliance operates automatically with low energy consumption. turbo mode: use this programme to dry garments rapidly and or during the winter. How to dry laundry Del ayed shutdown timer Before using this function, make sure the appliance is on. Each time the TIMER button is pressed, the number of hours the appliance operates changes (2-4-8 hours) When the timer is set, even if the tank full light is flashing, after emptying and repositioning the tank, the appliance continues to operate for the time left. 16 O p e r a t i o n I o n i s e r ENGLISH button. The light comes on and the appliance emits negative ions from the air button again to interrupt negative ion emission. (The light goes off). Before using this function, make sure the appliance is on. Press the outlet grille.

Press the A large quantity of negative ions are produced, quantitatively similar to those present in environments such as forests or waterfalls.

How to direct the air Press the SWING button to set automatic swing of the deflector, choosing between three types of swing: 1st press (air is delivered forwards and vertically) 2nd press (air is delivered forwards) 3rd press (air is delivered vertically). Press the SWING button again to stop the deflector in its current position. 17 Emptying the tank/ C o n t i n o u s e x t e r n a l d r a i n i n g When the tank is full, the appliance stops automatically and the Empty the tank: tank full light lights up. fig. 2 fig.

3 fig.4 fig.5 1 Extract the tank slowly using the designed grip, holding the appliance firmly (fig. 2). 2 Position the handle of the tank vertically as shown (fig. 3). 3 Remove the lid (fig. 4). 4 Empty the tank (fig. 5). 5 Replace the lid and lower the handle. 6 Put the tank back in the appliance. When the empty tank is put back, the appliance starts functioning according to the previous settings. The tank full light goes off). Important: Do not remove the float inside the tank.

The float is required to sense when tank is full. Replace the lid correctly before returning the tank to the appliance. When you remove the tank, do not touch internal parts of the dehumidifier. It could damage the appliance. Push the tank into place carefully. If it knocks against the walls or is incorrectly inserted, the appliance may not function.



[You're reading an excerpt. Click here to read official DELONGHI](http://yourpdfguides.com/dref/3390747)

[DNC 65 user guide](http://yourpdfguides.com/dref/3390747)

<http://yourpdfguides.com/dref/3390747>

@@1) Remove the rubber bung from the outlet tube (fig. 6). 2) Fasten the rubber hose to the outlet tube (fig. 7).

@@8). N.B.: Keep the rubber bung. @@6 18 fig.

@@ · Never put the machine in water or let the cord or plug get wet. eaning the body · Wipe the appliance body with a damp cloth, then dry. Don't use abrasives they'll scratch the plastic surfaces. · Never use alcohol or solvents to clean the appliance. eaning the air filter If the filter is dirty, air circulation is compromised and the efficiency of the dehumidifying and air purifying functions decreases.
It is therefore good practice to clean the filter at regular intervals. The frequency depends on the duration and conditions of operation. If the unit is used regularly, you are recommended to clean the filter once a week. Removing the filter · Extr.



[You're reading an excerpt. Click here to read official DELONGHI](#)

[DNC 65 user guide](#)

<http://yourpdfguides.com/dref/3390747>