



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DELONGHI EC 410 B. You'll find the answers to all your questions on the DELONGHI EC 410 B in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual DELONGHI EC 410 B**  
**User guide DELONGHI EC 410 B**  
**Operating instructions DELONGHI EC 410 B**  
**Instructions for use DELONGHI EC 410 B**  
**Instruction manual DELONGHI EC 410 B**

#### GB

Thank you for choosing this coffee machine. To get the very best out of your new coffee machine it is advisable to read these instructions before using the appliance. This is the only way to ensure optimum results and maximum safety.

#### DESCRIPTION OF THE APPLIANCE

The following terms are used throughout the instruction manual

- 1 Lid for water tank
- 2 Water tank
- 3 Steam release knob
- 4 Coffee tamper
- 5 Power supply cable
- 6 Boiler on function
- 7 'OK' light
- 8 Espresso function
- 9 Selector knob
- 10 Cappuccino function (for milk frothing)
- 11 'O' OFF position
- 12 Coffee measuring spoon
- 13 Removable drip tray - black area inside for positioning cups
- 14 Boiler outlet
- 15 Delivery tube
- 16 Steam nozzle
- 17 Milk frother
- 18 Filter holder for pods (if fitted)
- 19 Filter for pods (if fitted)
- 20 Filter holder for coffee
- 21 Filter for coffee with frother

#### SAFETY WARNINGS

- This machine has been built to 'make coffee' and to 'reheat beverages'; please be careful to avoid burns from the sprays of hot water or steam and avoid any improper use.
- When the appliance is in use, do not touch any of the machine's hot surfaces.
- After unpacking, make sure that the machine is complete and undamaged. In case of doubt, do not use the appliance and seek the advice of a qualified service professional.
- Packaging materials (plastic bags, foam polystyrene, etc.) should not be left within the reach of children as this could be a potential source of danger.
- This appliance is to be utilized for domestic use only. Any other use is to be considered improper and therefore, dangerous.

- The manufacturer takes no responsibility for damage derived from improper use.
- Never touch the appliance with wet or damp hands.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- In case of breakdown or malfunctioning, turn off the appliance immediately and do not touch it. For repairs, please contact a Service Centre authorized by the manufacturer and request the use of original replacement parts only. The lack of respect for this point may compromise the safe use of the appliance.
- The power supply cable of this appliance must never be replaced by the user, because its replacement requires the use of special tools. If the cable should become damaged, or in case it needs to be replaced, please go to a Service Centre authorized by the manufacturer.
- When the appliance is not in use, turn off and disconnect the plug from the socket.
- As with any electrical appliance, whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be applied when operating your appliance, particularly in the vicinity of young children.

#### INSTALLATION

- Place the coffee maker on a flat work surface at a safe distance from taps and sinks.
- Check that the voltage corresponds to that indicated on the appliance rating plate. The appliance must always be connected to a well-earthed socket rated at 10 A minimum. The manufacturer is not liable for damage caused by inadequate earthing of the appliance.
- In the event of incompatibility between the plug on the appliance and the socket, have the plug replaced with another of the right type by a qualified professional.
- If the cable is damaged or requires replacing, contact a service centre authorised by the manufacturer only.
- Never install the machine in an environment that can reach a temperature less than or equal to 0°C (if the water in it freezes, the coffee maker may be damaged).
- When the machine is in operation, any additional cable can be stored in the machine by inserting it back into the cable supply outlet.

12



[You're reading an excerpt. Click here to read official DELONGHI EC 410 B user guide](http://yourpdfguides.com/dref/3389020)  
<http://yourpdfguides.com/dref/3389020>

**Manual abstract:**

To get the very best out of your new coffee machine it is advisable to read these instructions before using the appliance. This is the only way to ensure optimum results and maximum safety. **DESCRIPTION OF THE APPLIANCE** The following terms are used throughout the instruction manual 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 Lid for water tank Water tank Steam release knob Coffee tamper Power supply cable Boiler on function 'OK' light Espresso function Selector knob Cappuccino function (for milk frothing) "O" OFF position Coffee measuring spoon Removable drip tray - black area inside for positioning cups Boiler outlet Delivery tube Steam nozzle Milk frother Filter holder for pods (if fitted) Filter for pods (if fitted) Filter holder for coffee Filter for coffee with frother · The manufacturer takes no responsibility for damage derived from improper use. · Never touch the appliance with wet or damp hands. · The appliance is not intended for use by young children or infirm persons without supervision. · Young children should be supervised to ensure that they do not play with the appliance. · In case of breakdown or malfunctioning, turn off the appliance immediately and do not touch it. For repairs, please contact a Service Centre authorized by the manufacturer and request the use of original replacement parts only. The lack of respect for this point may compromise the safe use of the appliance. · The power supply cable of this appliance must never be replaced by the user, because its replacement requires the use of special tools.

If the cable should become damaged, or in case it needs to be replaced, please go to a Service Centre authorized by the manufacturer. · When the appliance is not in use, turn off and disconnect the plug from the socket. @@@@ in the event of incompatibility between the plug on the appliance and the socket, have the plug replaced with another of the right type by a qualified professional. If the cable is damaged or requires replacing, contact a service centre authorised by the manufacturer only. · Never install the machine in an environment that can reach a temperature less than or equal to 0°C (if the water in it freezes, the coffee maker may be damaged).

· When the machine is in operation, any additional cable can be stored in the machine by inserting it back into the cable supply outlet. **SAFETY WARNINGS** · This machine has been built to "make coffee" and to "reheat beverages"; please be careful to avoid burns from the sprays of hot water or steam and avoid any improper use. · When the appliance is in use, do not touch any of the machine's hot surfaces. · After unpacking, make sure that the machine is complete and undamaged. In case of doubt, do not use the appliance and seek the advice of a qualified service professional.

· Packaging materials (plastic bags, foam polystyrene, etc.) should not be left within the reach of children as this could be a potential source of danger. · This appliance is to be utilised for domestic use only. Any other use is to be considered improper and therefore, dangerous. **12 HOW TO PREPARE ESPRESSO COFFEE FILLING THE WATER TANK:** To remove the water tank simply pull upwards (fig 2) and fill the tank at the sink (fig 3). Do not exceed the MAX level on the water tank. The tank may also be filled without removing it, simply by pouring water into it directly from a jug. Replace the tank by connecting the valve at the bottom of the tank with the hole in the base on the machine. Note: Do not operate the appliance without water in the tank and always remember to fill the tank when the water level goes below the MIN level. **PREHEATING THE COFFEE MACHINE** To obtain espresso coffee at the right temperature, the coffee maker must be preheated.

Turn the selector knob to the position (fig. 4) at least half an hour before making the coffee, making sure the filter holder is attached to the appliance (check that the steam release knob is closed). To attach the filter holder, place it under the boiler outlet with the handle towards the left (fig. 5). Push upwards and at the same time turn the handle as far to the right as possible. To avoid leaks of water, rotate firmly. After half an hour, make coffee following the instructions of the next paragraph. Alternatively, for a faster operation, proceed as follows: 1. Turn the selector knob so that the indented line on the selector knob points to the boiler on function (fig. 4).

Attach the empty filter holder (without coffee) to the machine 2. Position a cup under the filter holder. Use the same cup that the coffee will be served in, so that it may be preheated. 3. Wait until the orange "OK" light comes on (fig 6) and turn the selector knob to the espresso function position (fig 7). Allow water to flow until the orange "OK" light goes out, then stop the flow of water by turning the selector knob to the boiler on function (fig 4) 4. Empty the cup, wait until the "OK" pilot light comes on again and repeat the whole operation one more time. (It is normal for a small and harmless puff of steam to be given off when removing the filter holder). **HOW TO PREPARE ESPRESSO COFFEE USING THE FILTER HOLDER FOR GROUND COFFEE** 1. After preheating the appliance as described in the above paragraph, insert the ground coffee filter with frother into the filter holder, making sure the tab is correctly inserted into the housing as shown in fig.

8. 2. To prepare a single coffee, fill the filter with a level measure of ground coffee, about 7 g (fig. 9). To prepare two coffees, use the filter and fill with two loosely filled measures of ground coffee (about 6+6 g). Fill the filter in small doses to prevent the ground coffee from overflowing. @@@@10). @@@@ To rotate firmly (fig. @@@@ To stop the delivery, turn the selector to the position. 6.

To detach the filter holder, turn the handle from right to left. @@@@12). @@@@17) and wait until the "OK" light comes on (fig. @@@@3. In the meantime, fill a container with approximately 100 gr. of milk for each cappuccino to be prepared. The milk must be cold from the refrigerator (not warm!). @@@@ At this point, the milk will begin to increase in volume and to appear frothy. 6. Once the desired temperature has been reached (the ideal temperature is 60°C), stop the delivery of steam by turning the steam knob in a clockwise direction and at the same time positioning the selector knob at "O" (fig.

13). 7. Pour the frothed milk into the cups containing the espresso coffee. Your cappuccino is now ready. Add sugar to taste and, if desired, sprinkle a little powdered chocolate on top of the froth.

Note: to prepare more than one cappuccino, first make all the coffees then at the end prepare the frothed milk for all the cappuccinos. **IMPORTANT:** always clean the milk frother and steam nozzle immediately after use. Proceed as follows: 1.



[You're reading an excerpt. Click here to read official DELONGHI EC 410 B user guide](http://yourpdfguides.com/dref/3389020)  
<http://yourpdfguides.com/dref/3389020>

By turning the steam knob (fig. 19), allow a little steam to come out for a few seconds.

Then close firmly by turning clockwise. 2. Hold the upper part tight with one hand and use your other hand to unscrew the cappuccino maker, rotating it in a clockwise direction, and remove it from the nozzle (fig. 20). 3. Remove the steam nozzle by sliding it off the delivery tube. 4. Wash the cappuccino maker and steam nozzle thoroughly with warm water. 5. Make sure the two holes indicated with an arrow in fig.

21 are not blocked. If necessary, clean with a pin. The ESE standard is a system accepted by the leading coffee pod manufacturers, and allows espresso coffee to be prepared simply and without any mess. 3. Attach the filter holder onto the machine, moving from left to right (fig 5). Note: to ensure effective closure and avoid leaks of water from the rim of the filter holder, you are recommended to grease the bottom of the lateral tabs from time to time with butter or oil (as shown in fig. 15). **IMPORTANT:** Should the coffee holder for pods be used after one for ground coffee, it's necessary to clear the ground coffee remained in the espresso boiler outlet (fig. 16). This cleaning operation is necessary in order to avoid water leakages from the coffee holder for pods while coffee is being prepared.

4. Proceed as in points 4, 5 and 6 of the previous paragraph (how to prepare espresso coffee using the filter holder for ground coffee). 5. To remove the pod, press the button on the filter holder and simply lift the pod out. 6. To turn the coffee machine off, turn the selector knob on the appliance to the Off position "O" (fig 13).

14 6. Replace the steam nozzle by inserting it into the steam delivery tube and rotating firmly (fig. 22). 7. Replace the milk frother by inserting it and rotating anticlockwise (fig.

23). **PRODUCING HOT WATER** 1. Turn on the coffee unit by turning the selector knob to the position (fig. 4). 2. Position a container under the cappuccino maker. 3. When the 'OK' pilot light comes on, position the selector knob at (fig. 7) and at the same time turn the steam knob in an anti-clockwise direction (fig. 19); hot water will come out from the cappuccino maker.

4. To stop the flow of hot water, turn the steam knob in a clockwise direction covered by the guarantee if the descaling process described above is not carried out regularly. **16 PROBLEM** Espresso coffee no longer comes out. **POSSIBLE CAUSES** · Lack of water in the tank. · The holes in the filter holder are blocked. · The outlet of the espresso boiler is blocked. · The tank is badly inserted and the valve at the bottom is not open. · The filter holder is badly inserted. · The gasket of the espresso boiler has lost elasticity. · The holes in the filter holder are blocked.

**SOLUTION** · Fill the water tank. · Clean the holes in the spouts. · Clean as indicated in the "Cleaning the espresso boiler outlet" section. · Press the tank lightly so as to open the valve at the bottom. Espresso coffee drips from the edges of the filter holder, instead of from its holes.

· Attach the filter holder correctly by rotating firmly as far as it will go. · Have the espresso boiler gasket replaced at a Service Centre · Clean the holes in the filter holder. The espresso coffee is cold. · The 'OK' pilot light was not on when the coffee delivery switch was pressed. · The preheating was not carried out.

· Wait until the OK pilot light comes on. · Carry out the preheating as indicated in the "Preheating the coffee unit" section. · Preheat the cups by rinsing them in hot water. · Fill the tank. @@ The pump is too noisy. · The water tank is empty. @@ · The quantity of ground coffee is scarce. · The coffee is not ground finely enough. · The ground coffee is too tightly pressed. · The quantity of ground coffee is too much.

@@ · Increase the quantity of coffee. @@ · Press the coffee less. · Decrease the quantity of ground coffee. · Clean the outlet as described in "Cleaning the espresso boiler outlet" section. @@ · Rinse the unit as described in the "descaling" section. The coffee cream is dark (the coffee comes out slowly from the spout). · The coffee is too finely ground. The coffee has an acidic taste. · The unit was not sufficiently rinsed after the descaling process procedure. · The milk is not cold enough.

· The cappuccino maker is dirty. The milk does not froth when making a cappuccino. · Always use milk at refrigerator temperature. · Carefully clean the pinholes in the milk frother 17.



[You're reading an excerpt. Click here to read official DELONGHI EC 410 B user guide](http://yourpdfguides.com/dref/3389020)

<http://yourpdfguides.com/dref/3389020>