



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DELONGHI EC 700. You'll find the answers to all your questions on the DELONGHI EC 700 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DELONGHI EC 700
User guide DELONGHI EC 700
Operating instructions DELONGHI EC 700
Instructions for use DELONGHI EC 700
Instruction manual DELONGHI EC 700

GB

Read this instruction booklet carefully before installing and using the appliance. This is the only way to ensure the best results and maximum safety for the user.

DESCRIPTION

(see page 3)

The terminology below will be used repeatedly on the following pages.

- 1 Cup warmer plate
- 2 Steam knob
- 3 Water level indicator
- 4 Power cable
- 5 Water tank
- 6 Cappuccino maker
- 7 Steam tube
- 8 ON/OFF button
- 9 Coffee/hot water button
- 10 Steam button
- 11 ON/OFF button indicator light
- 12 Preheating completed indicator light
- 13 Steam selected indicator light
- 14 Small filter for 1 cup ground coffee or pods (if present)
- 15 Large filter for 2 cups ground coffee
- 16 Coffee filter holder
- 17 Presser
- 18 Boiler outlet
- 19 Measure
- 20 Drip tray
- 21 Cup grid
- 22 Cup grid edge (certain models only)

SAFETY WARNINGS

- This appliance is designed to "make espresso coffee" and "heat drinks". Use with care to avoid scalds from the water and steam jets or through incorrect use.
- Never touch hot parts.
- After removing the packaging, make sure the product is complete. If in doubt, do not use the appliance and contact a professionally qualified person.
- The packing elements (plastic bags, polystyrene foam, etc.) should be kept out of reach of children as they are a safety hazard.
- This appliance is intended for domestic use only. Any

other use is considered improper and thus dangerous.

- The manufacturer cannot be held responsible for any damage caused through incorrect, wrong or unreasonable use.
- Never touch the appliance with wet or damp hands or feet.
- Never let children or unfit persons use the appliance without supervision.
- Never allow children to play with the appliance.
- Should the appliance break or not function correctly, turn it off and do not tamper with it. For all repairs, contact authorised service centres only and insist on the use of original spare parts. Failure to respect the above could reduce the safety of the appliance.
- The power cable for this appliance must not be replaced by the user as this operation requires the use of special tools. In the event of damage, contact an authorised service centre only to avoid all risks.

INSTALLATION

- Place the appliance on a work surface away from taps and sinks.
- Check that the voltage of the mains power supply corresponds to the value indicated on the appliance rating plate. Connect the appliance to an efficiently earthed electrical socket with a minimum rating of 10A only. The manufacturer declines all liability for any accidents caused by the absence of an efficient earth system.
- If the plug fitted to the appliance does not match the power socket, have the socket replaced with a suitable type by a qualified electrician.
- Never install the appliance in environments where the temperature may reach 0°C or lower (the appliance may be damaged if the water freezes).



[You're reading an excerpt. Click here to read official DELONGHI EC 700 user guide](#)

<http://yourpdfguides.com/dref/3394386>

Manual abstract:

This is the only way to ensure the best results and maximum safety for the user. The terminology below will be used repeatedly on the following pages. 1 Cup warmer plate 2 Steam knob 3 Water level indicator 4 Power cable 5 Water tank 6 Cappuccino maker 7 Steam tube 8 ON/OFF button 9 Coffee/hot water button 10 Steam button 11 ON/OFF button indicator light 12 Preheating completed indicator light 13 Steam selected indicator light 14 Small filter for 1 cup ground coffee or pods (if present) 15 Large filter for 2 cups ground coffee 16 Coffee filter holder 17 Presser 18 Boiler outlet 19 Measure 20 Drip tray 21 Cup grid 22 Cup grid edge (certain models only) The manufacturer cannot be held responsible for any damage caused through incorrect, wrong or unreasonable use. Never touch the appliance with wet or damp hands or feet. Never let children or unfit persons use the appliance without supervision. Never allow children to play with the appliance. Should the appliance break or not function correctly, turn it off and do not tamper with it. For all repairs, contact authorised service centres only and insist on the use of original spare parts. Failure to respect the above could reduce the safety of the appliance. The power cable for this appliance must not be replaced by the user as this operation requires the use of special tools.

Place the appliance on a work surface away from taps and sinks. The manufacturer declines all liability for any accidents caused by the absence of an efficient earth system. If the plug fitted to the appliance does not match the power socket, have the socket replaced with a suitable type by a qualified electrician. After removing the packaging, make sure the product is complete. This appliance is intended for domestic use only. Rinse and fill with clean cold water (fig 2). checking the water level is facilitated by a floating ball. Replace the tank in the housing, making sure the tubes are in the water. More simply, fill the tank by extracting it just enough to pour in the water directly from a jug. PREHEATING THE COFFEE UNIT To obtain espresso coffee at the right temperature, the coffee machine must be preheated.

You are therefore recommended to press the ON/OFF button (fig. 3) at least 15 minutes before preparing the coffee, making sure the filter holder is attached to the appliance (check that the steam knob is closed). To attach the filter holder, position it under the boiler outlet with the handle towards the left (fig. 4), push it upwards while at the same time rotating the handle towards the right. rotate firmly. Wait for 15 minutes, then make the coffee as described in the following chapter. Alternatively, you can preheat more rapidly by proceeding as follows: 1. press the ON/OFF button (fig. 3) and attach the filter holder to the appliance without adding ground coffee. Use the same cup as will be used to prepare the coffee in order to preheat it.

3. Wait for the OK indicator light to come on (fig. 5), then immediately press the coffee knob (fig. 6). Run the water off until the OK indicator light goes out, then interrupt delivery by pressing the coffee button again (fig. Empty the cup, detach the filter holder and empty out the hot water. (It is normal for a small and harmless puff of steam to be given off when removing the filter holder). After preheating the appliance as described above, place the ground coffee filter in the filter holder, making sure the projection is correctly inserted in the slot as shown in fig. 7. For appliances with two filters, use the smallest for one coffee and the largest for two coffees.

2. To make one coffee only, place one level measure of ground coffee, about 7 g, in the filter (fig. 8). To prepare two coffees, place two loosely filled measures of ground coffee (about 6+6 g) in the filter. Fill the filter a little at a time to prevent the ground coffee from overflowing.

IMPORTANT: to ensure correct operation, before placing the ground coffee in the filter holder, clean the filter of residues of ground coffee from the previous infusion. 3. Distribute the ground coffee evenly and press lightly with the presser (fig. 9). NB: Correct pressing of the ground coffee is essential to obtain a good espresso.

If pressing is excessive, coffee delivery will be slow and the froth will be dark. 4. Make sure the OK indicator light (fig. 6). 8. To turn the coffee machine off, press the ON/OFF button (fig. 3) (14) and wait for the steam indicator light to come on (fig. Dip the cappuccino maker into the recipient containing the milk (fig. 16).

Turn the steam knob at least a half turn anticlockwise (fig. 17). the cappuccino is ready. IMPORTANT: always clean the cappuccino maker after use. proceed as follows: 1. 17). This empties any milk left inside the steam tube. 2. Always follow the instructions on the pod pack to position the pod on the filter correctly.

Wash the cappuccino maker and steam nozzle thoroughly with warm water. 5. Make sure the two holes indicated by the arrows in fig. 20 are not blocked. If necessary, clean with a pin.

6. Replace the steam nozzle by inserting it onto the steam tube and rotating firmly towards the top of the tube. Wait until the OK indicator light comes on (fig. To interrupt delivery of hot water, close the steam knob by rotating clockwise and press the coffee button again (fig. CLEANING THE BOILER OUTLET About every 200 coffees, the espresso boiler outlet must be cleaned as follows: Make sure the appliance is not hot and that it is unplugged from the mains; Using a screwdriver, unscrew the screw fixing the espresso boiler outlet (fig.

26); Clean the boiler with a damp cloth (fig. 13); Clean the outlet thoroughly in hot water using a brush. Make sure the holes are not blocked. If necessary, clean with a pin (fig. Failure to clean as described above invalidates the guarantee. OTHER CLEANING OPERATIONS 1. Do not use solvents or abrasive cleaning products to clean the appliance. Clean the filter holder cup, filters, drip tray and water tank regularly. IMPORTANT: during cleaning, never immerse the coffee machine in water. Before cleaning the outside of the appliance, always turn off, unplug from the mains socket and allow to cool.

CLEANING THE FILTER HOLDER FOR GROUND COFFEE About every 300 coffees or when the coffee drips out of the filter holder or not at all, clean the ground coffee filter holder as follows: Remove the frother from the container by pushing it from the cap end. Rinse all components and clean the metal filter thoroughly in hot water using a brush (fig. 22). Make sure the holes in the metal filter are not blocked. If necessary, clean with a pin (see fig. Make sure to insert the pin on the plastic disk into the hole in the gasket indicated by the arrow in fig. 25), making sure the pin is inserted into the hole in the support (see arrow in fig. Finally, screw on the cap. Failure to clean as described above invalidates the guarantee.



You're reading an excerpt. [Click here to read official DELONGHI EC 700 user guide](http://yourpdfguides.com/dref/3394386)
<http://yourpdfguides.com/dref/3394386>

You must descale the coffee machine about every 200 coffees.

Fill the tank with one litre of water; 2. Pour the contents of the descaler bottle provided (250 ml) into the tank. For subsequent descaling operations, descaling solution can be purchased from authorised technical service centres. 3) and wait for the OK indicator light to come on. 4.

Make sure the filter holder is not attached and position a recipient under the outlet. 5. Press the coffee button, half empty the tank and every now and then rotate the steam knob to allow a little of the solution to run off. Leave the solution to work for about 15 minutes, then run off the rest of the water in the tank.

7.

@@@ Press the button again and repeat the last operation. @@@ At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin. Fill the tank with water Â· The espresso coffee drips from the edges of the filter holder rather than the holes Wait until the espresso OK indicator light comes on Â· The holes in the filter holder are blocked The espresso coffee is cold Â· The espresso OK indicator light was not on when the coffee switch was pressed. The coffee froth is too light (delivered from the spout too fast) The ground coffee is not pressed down firmly enough Â· There is not enough ground coffee Â· The ground coffee is too coarse Press the ground coffee down more firmly Â· increase the quantity of coffee Â· Use ground coffee for espresso coffee machines only Â· Use ground coffee for espresso coffee machines only Â· The coffee froth is too dark (delivered from the spout too slowly) The ground coffee is pressed down too.



[You're reading an excerpt. Click here to read official DELONGHI EC](http://yourpdfguides.com/dref/3394386)

[700 user guide](http://yourpdfguides.com/dref/3394386)

<http://yourpdfguides.com/dref/3394386>