



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DELONGHI ECAM 23.210. You'll find the answers to all your questions on the DELONGHI ECAM 23.210 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DELONGHI ECAM 23.210
User guide DELONGHI ECAM 23.210
Operating instructions DELONGHI ECAM 23.210
Instructions for use DELONGHI ECAM 23.210
Instruction manual DELONGHI ECAM 23.210

CONTENTS	
INTRODUCTION	7
Letters in brackets	7
Troubleshooting and repairs	7
SAFETY	7
Fundamental safety warnings	7
DESIGNATED USE	8
INSTRUCTIONS	8
DESCRIPTION	8
Description of the appliance	8
Description of the control panel	8
Description of the accessories	9
Description of lights	9
PRELIMINARY CHECKS	9
Checking the appliance	9
Connecting the appliance	9
Using the appliance for the first time	9
TURNING THE APPLIANCE ON	10
TURNING THE APPLIANCE OFF	10
MENU SETTINGS	10
Descale	10
Auto-off	11
Setting the temperature	11
Energy Saving	11
Setting water hardness	11
Install filter	11
Replacing the filter	11
Default values (reset)	11
Statistics function	11
MAKING COFFEE	12
Selecting the coffee taste	12
Selecting the quantity of coffee in the cup	12
Customising the "my coffee" quantity	12
Adjusting the coffee mill	12
Tips for a hotter coffee	13
Making coffee using coffee beans	13
Making coffee using pre-ground coffee	13
MAKING CAPPUCCINO	13
Cleaning the cappuccino maker after use	14
HEATING WATER	14
CLEANING	14
Cleaning the coffee maker	14
Cleaning the coffee grounds container	15
Cleaning the drip tray and condensate tray	15
Cleaning the inside of the coffee maker	15
Cleaning the water tank	15
Cleaning the coffee spouts	15
Cleaning the pre-ground coffee funnel	15
Cleaning the infuser	15
DESCALE	16
SETTING WATER HARDNESS	17
Measuring water hardness	17
Set water hardness	17
WATER SOFTENER FILTER	17
Installing the filter	17
Replacing the filter	18
Removing the filter	18
TECHNICAL SPECIFICATION	18
DISPOSAL	18
EXPLANATION OF LIGHTS	19
TROUBLESHOOTING	21



[You're reading an excerpt. Click here to read official DELONGHI ECAM 23.210 user guide](http://yourpdfguides.com/dref/3949920)
<http://yourpdfguides.com/dref/3949920>

Manual abstract:

Never pull the power cable as you could damage it · To disconnect the appliance completely, place the main switch at the back of the appliance in the 0 position (fig 6) · If the appliance is faulty, do not attempt to repair Turn it off, unplug from the mains socket and contact Customer Services · If the plug or power cable is damaged, it must be replaced by De'Longhi Customer Services only to avoid all risk Important! Keep all packaging (plastic bags, polystyrene foam) away from children Important! The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety Children must be supervised to ensure they do not play with the appliance Danger: Risk of burns! @@ This is indicated in brackets in the description. @@@@B6 aroma selection button: to select the coffee taste B7 button: to make 1 cup of coffee with the settings displayed B8 button: to make 2 cups of coffee with the settings displayed B9 button: to deliver steam to make hot drinks with milk (When you access the MENU: "OK" button to confirm the selection made) InstRUCtIons Read these instructions carefully before using the appliance - Failure to follow these instructions may result in burns or damage to the appliance The manufacturer is not liable for damage deriving from failure to respect these instructions Please note: Keep these instructions If the appliance is passed to other persons, they must also be provided with these instructions 8 Description of the accessories (page 2 - C) C1 Measure C2 Cleaning brush C3 Descaler bottle C4 Water softener filter (certain models only) Description of lights Light flashing: the machine is heating up or a rinse cycle is underway The appliance is delivering two cups of coffee PReImInARy CheCks Checking the appliance After removing the packaging, make sure the product is complete and undamaged and that all accessories are present Do not use the appliance if it is visibly damaged Contact De'Longhi Customer Services Installing the appliance Important! When installing the appliance, respect the following safety warnings: · The appliance gives off heat. After positioning the appliance on the worktop, leave a space of at least 3 cm between the surfaces of the appliance and the side and rear walls and at least 15 cm above the coffee maker · Water penetrating the coffee maker could cause damage Do not place the appliance near taps or sinks · The appliance could be damaged if the water it contains freezes Do not install the appliance in a room where the temperature could drop below freezing point · Arrange the power cable in such a way that it cannot be damaged by sharp edges or contact with hot surfaces (eg electric hot plates) Connecting the appliance Important! Check that the mains power supply voltage corresponds to the value indicated on the rating plate on the bottom of the appliance Connect the appliance to an efficiently earthed and correctly installed socket with a minimum current rating of 10A only If the power socket does not match the plug on the appliance, have the socket replaced with a suitable type by a qualified professional Using the appliance for the first time · 9 E E E E E E "Energy Saving" mode is active Light on steadily: the "steam" function has been selected; Light flashing: you must turn the steam knob An alarm is displayed on the control panel (see the section: "Explanation of lights") Light flashing: the water softener filter must be replaced Light on steadily: the grounds container is missing and must be inserted in the appliance; Light flashing: the grounds container is full and must be emptied Light on steadily: the water tank is missing; Light flashing: there is not enough water in the tank Light flashing: the appliance must be descaled (see the section "Descaling") Indicates the button to press to exit the programming menu or selected function Indicates the button to press to confirm the function selected in the programming menu Please note! @@@@ Danger of burns. @@@@ Danger of burns Stop steam delivery before removing the container with the frothed milk to avoid burns caused by splashes of boiling milk 8 Add the milk froth to the coffee prepared previously The cappuccino is ready Sweeten to taste and, if desired, sprinkle the froth with a little cocoa powder Cleaning the cappuccino maker after use Clean the cappuccino maker each time you use it to avoid the build-up of milk residues or blockages Important! Danger of burns When cleaning the cappuccino maker, a little hot water comes out Avoid contact with splashes of water 1 Discharge a little water for a few seconds by rotating the steam knob to the I position Then turn the steam knob to the 0 position to stop the flow of hot water 2 Wait a few minutes for the cappuccino maker to cool down Turn the cappuccino maker 14 CleAnInG Cleaning the coffee maker The following parts of the machine must be cleaned regularly: - coffee grounds container (A13), - drip tray (A17) and condensate tray (A14), - water tank (A9), - coffee spouts (A12), - pre-ground coffee funnel (A6), - inside of the machine, accessible after opening the infuser door (A10), - infuser (A11) · Important! Do not use solvents, abrasive detergents or · alcohol to clean the coffee maker With De'Longhi superautomatic coffee makers, you need not use chemical products to clean the machine The descaler recommended by De'Longhi is made from natural and completely biodegradable substances None of the components can be washed in a dishwasher Do not use metal objects to remove encrustations or coffee deposits as they could scratch metal or plastic surfaces tainer (fig 23); 2 Empty the drip tray and grounds container and wash them; 3 Check the condensate tray and empty if necessary 4 Replace the drip tray and grounds container Cleaning the inside of the coffee maker Danger of electric shock! @@1 Check regularly (about once a week) that the inside performs a series of rinses and pauses to remove limescale deposits from inside the machine After about 30 minutes, the water tank is empty The OK and lights come on and the light flashes 11 Empty the container used to collect the descaler solution and replace it under the cappuccino maker 12 Remove the water tank, empty, rinse under running water, fill with clean water and replace The light goes off 13 Hot water comes out of the cappuccino maker 14 When the water tank is completely empty, is displayed 15 Turn the knob to the 0 position, insert the filter (if present), fill the water tank and the appliance is ready for use Level 1 Level 2 Level 3 Level 4 set water hardness 1 Press the P button to enter the menu 2 Turn the selector knob until the light is selected 3 Confirm the selection by pressing the button 4 Turn the selection knob and set the level shown by the indicator paper (see previous paragraph) LEVEL 1 LEVEL 2 LEVEL 3 LEVEL 4 5 Press the button to confirm the setting 6 Press the button to exit the menu The machine is now reprogrammed with the new water hardness setting settInG WAtER hARDness WAtER soFteneR FilteR The light is displayed after a period of time established according to the water hardness set The machine is factory set for a hardness value of 4 The machine can also be programmed according to the hardness of the mains water in the various regions so that the machine needs to be descaled less often measuring water hardness 1 Remove the "TOTAL HARDNESS TEST" indicator paper attached to this manual from its pack 2 Immerse the paper completely in a glass of water for one second 3 Remove the paper from the water and shake lightly After about a minute, 1, 2, 3, or 4 red squares form, depending on the hardness of the water Each square corresponds to one level Certain models are fitted with a water softener filter If this is not the case with your model, you are recommended to purchase one from De'Longhi Customer Services To use the filter correctly, follow the instructions below Installing the filter 1 Remove the filter from the packaging 2 Turn the date indicator disk (see fig 30) until the next 2 months of use are displayed Please note: The filter lasts about two months if the appliance is used normally If the coffee maker is left unused with the filter installed, it will last a maximum of three weeks 3 Remove the tank from the appliance and fill with water 4 Insert the filter in the water tank and immerse it completely, sloping it to enable the air 17 bubbles to escape (fig 31) 5 Insert the filter in the filter housing (fig 32A) and press as far as it will go 6 Close the tank with the lid (fig 32B), then replace the tank in the machine When you install the filter, you must notify the appliance of its presence 7 Press the P button to enter the menu; 8 Turn the selection knob until the and lights come on 9 Press the ok button 10 Press the button to confirm the selection 11 Place a container (min capacity: 100 ml) under the cappuccino maker 12 Turn the steam knob and press the button 13 At the end of delivery, the light flashes Close the knob and the appliance returns automatically to the "ready for coffee" state The new filter is active and you can now use the coffee maker Replacing the filter When the light flashes, after two months (see date indicator) or when the appliance has not been used for 3 weeks, you should replace the filter: 1 Remove the exhausted filter; 2 Remove the new filter from the packaging 3 Turn the date indicator disk (see fig 30) until the next 2 months of use are displayed (the filter lasts about two months); 4 Refill the tank; 5 Insert the filter in the water tank and immerse it completely, sloping it to enable the air bubbles to escape (fig 31); 6 Place the filter in the filter housing (fig 32A) and press as far as it will go Close the tank with the lid (fig 32B), then replace the tank in the machine; 7 Place a

container (min capacity: 100 ml) under the cappuccino maker 8 Press the P button to enter the menu; 9 Turn the selection knob until the and lights come on 10 Press the button The ok light flashes 11 Press the button to confirm the selection 18 12 Turn the steam knob and press the button 13 At the end of delivery, the light flashes Close the knob and the appliance returns automatically to the "ready for coffee" state The new filter is now active and you can use the coffee maker Removing the filter If you want to continue using the appliance without a filter, you must remove it and notify the appliance of its removal as follows: 1 Extract the tank and exhausted filter; 2 Press the P button to enter the menu; 3 Turn the selection knob (fig 8) until the and lights come on; 4 Press the button The ok light flashes; 5 Press the button to confirm use of the appliance without the filter; 6 Press the button to exit the menu teChnICAL sPeCIFICAtIon Voltage: 220-240 V~ 50/60 Hz max 10A Absorbed power: 1450W Pressure: 15 bars Water tank capacity: 18 L max Size LxHxD: 238x340x430 mm Cable length: 115 m Weight: 91 kg Coffee beans container capacity: 150 g max The appliance complies with the following EC directives: Stand-by Directive no.



[You're reading an excerpt. Click here to read official DELONGHI ECAM 23.210 user guide](http://yourpdfguides.com/dref/3949920)
<http://yourpdfguides.com/dref/3949920>

