



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DELONGHI ECO 310.BK. You'll find the answers to all your questions on the DELONGHI ECO 310.BK in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual DELONGHI ECO 310.BK**  
**User guide DELONGHI ECO 310.BK**  
**Operating instructions DELONGHI ECO 310.BK**  
**Instructions for use DELONGHI ECO 310.BK**  
**Instruction manual DELONGHI ECO 310.BK**

### INTRODUCTION

Thank you for having chosen our coffee machine. We hope you have fun with your new appliance. Take a few minutes to read these instructions. This is the only way to avoid danger and damage to the machine.

**Symbols used in these instructions**  
The important recommendations have these symbols. These recommendations must be followed.

**Danger!** Failure to comply can be or is the cause of injury due to life-threatening electric shocks.

**Attention!** Failure to comply can be or is cause of injury or damage to the appliance.

**Scalding hazard!** Failure to comply can be or is the cause of scalding or burns.

**Nota Bene:** This symbol highlights recommendations and important information for the user.

### SAFETY

#### Fundamental recommendations regarding safety

**Danger!** As the appliance operates using electric current, electric shocks can not be excluded. Therefore, follow the safety recommendations given:

- Do not touch the appliance when you have wet hands or feet.
  - Do not touch the plug with wet hands.
  - Make sure that the socket used can always be easily reached, so that the plug can be removed when required.
  - Remove the plug from the socket by acting directly on the plug itself. Do not pull the cable as damage could be caused.
  - Remove the plug from the socket to disconnect the appliance completely.
  - Do not attempt to repair the appliance if it should breakdown.
- Switch the appliance off, remove the plug from the socket and contact the After-Sales Service.
- if the plug or power supply cable are damaged, have them replaced exclusively by the De'Longhi After-Sales Service, in order to prevent risks.

**Attention:** Keep the packaging material (plastic bags, expanded polystyrene) out of the reach of children.

**Attention:** The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

**Scalding hazard!** This appliance produces hot water and steam may form when it is operating. Pay attention not to come into contact with hot water sprays or steam. Do not touch the cup warmer plate when the appliance is on; it is hot.

**Use in compliance with destination.**  
This appliance is manufactured for the preparation of coffee and hot beverages.

The appliance is designed and produced for domestic use only. It is not suitable for use in:  
- staff kitchens in shops, offices and other workplaces.  
- farm houses  
- hotels, motels or other holiday accommodation  
- guest houses

Any other use must be considered improper and therefore dangerous. The manufacturer is not liable for damage deriving from the improper use of the appliance.

**Instructions for use**  
Read these instructions carefully before using the appliances.

Failure to comply with these instructions can lead to injury and damage to the machine. The manufacturer is not liable for damage deriving from the failure to comply with the user instructions.

**Nota Bene:** Keep these instructions carefully. If the appliance should be transferred to other persons, these instructions must accompany it.

### DESCRIPTION

- Control panel
- Steam knob
- Water tank
- Water tank lid
- Power supply cable
- Steam or hot water tube
- Cup tray
- Drip tray
- Cappuccino maker
- Nozzle
- Boiler outlet
- Coffee tamper
- Measure for ground coffee

12



[You're reading an excerpt. Click here to read official DELONGHI ECO 310.BK user guide](http://yourpdfguides.com/dref/3394315)  
<http://yourpdfguides.com/dref/3394315>

**Manual abstract:**

We hope you have fun with your new appliance. Take a few minutes to read these instructions. This is the only way to avoid danger and damage to the machine. Symbols used in these instructions The important recommendations have these symbols. These recommendations must be followed. Danger! Failure to comply can be or is the cause of injury due to life-threatening electric shocks. Attention! Failure to comply can be or is cause of injury or damage to the appliance. Scalding hazard! Failure to comply can be or is the cause of scalding or burns. Nota Bene: This symbol highlights recommendations and important information for the user. Attention: The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance. Scalding hazard! This appliance produces hot water and steam may form when it is operating. Pay attention not to come into contact with hot water sprays or steam. Do not touch the cup warmer plate when the appliance is on; it is hot. use in compliance with destination.

This appliance is manufactured for the preparation of coffee and to heat beverages. The appliance is designed and produced for domestic use only. It is not suitable for use in: - staff kitchens in shops, offices and other workplaces. @@@@The manufacturer is not liable for damage deriving from the failure to comply with the user instructions. Nota Bene: Keep these instructions carefully.

If the appliance should be transferred to other persons, these instructions must accompany it. Safety fundamental recommendations regarding safety Danger! As the appliance operates using electric current, electric shocks can not be excluded. Therefore, follow the safety recommendations given: · Do not touch the appliance when you have wet hands or feet. · Do not touch the plug with wet hands. · Make sure that the socket used can always be easily reached, so that the plug can be removed when required. · Remove the plug from the socket by acting directly on the plug itself. Do not pull the cable as damage could be caused. · Remove the plug from the socket to disconnect the appliance completely. · Do not attempt to repair the appliance if it should breakdown. Switch the appliance off, remove the plug from the socket and contact the After-Sales Service.

· If the plug or power supply cable are damaged, have them replaced exclusively by the De'Longhi After-Sales Service, in order to prevent risks. Attention: Keep the packaging material (plastic bags, expanded polystyrene) out of the reach of children. deScrlptlon 1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 12. 13.

12 Control panel Steam knob Water tank Water tank lid Power supply cable Steam or hot water tube Cup tray Drip tray Cappuccino maker Nozzle Boiler outlet Coffee tamper Measure for ground coffee 14. 15. 16. 17. 18. 19. 20. 21. 22. 23. Filter-holder Large filter 2 doses 7 Small 1 dose filter or for pods Steam function selection button Coffee or hot water tube On/off button On indicator light OK indicator light Steam function selected indicator light Cup warmer plate tank itself. 3. Even easier, do not remove the tank, just fill it by pouring in water from a jug. Attention: do not operate the appliance without water in the tank and always fill it when the water is a few centimetres from the bottom. Nota Bene: it is normal to find water in the compartment under the tank; dry using a clean sponge.

prellmInary operatlonS check after transport After the packaging has been removed, check the integrity of the appliance and the presence of all accessories.

Do not use the appliance in the presence of obvious damage. Contact the De'Longhi After-Sales Service. Installing the appliance The following safety measures must be complied with when installing the appliance: · The appliance could be damaged by the penetration of water. Do not position the appliance near to water taps or sinks. · The appliance could be damaged if the water it contains freezes. Do not install the appliance in a room where the temperature can fall below freezing point. · Position the power supply cable in a way that it cannot be damaged by sharp edges or by contact with hot surfaces (e.g. electric plates).

connecting the appliance Attention! Make sure that the electric mains voltage corresponds with that indicated on the data plate on the base of the appliance. · Only connect the appliance to correctly installed socket with minimum rating of 10A and efficient earthing. In the case of incompatibility between the socket and the plug on the appliance, have the plug replaced by a qualified technician. The power supply cable on this appliance must never be replaced by the user as special tools are needed for this operation. Contact an After-Sales Centre authorised by the manufacture if the cable is damaged or must be replaced, in order to avoid all risks.

HoW to prepare eSpreSSo coffee pre-heating the coffee machine It is advised to pre-heat the coffee machine as follows in order to obtain an espresso coffee at the right temperature: 1. Press the ON/OFF button (the relative indicator light switches on) (fig. 4) and attach the empty filterholder to the machine (fig. 5). 2. Place a cup under the filter-holder. Use the same cup in which the coffee is to be served so that it can be pre-heated. 3. Wait until the OK light comes on (fig. 6) and then press the coffee button straight away (fig. 7). Allow the water to run until the OK light switches off and then stop the water by pressing the coffee button again (fig. 7). 4. @@@@@8.

@@2. @@(fig. 9). @@@@@3. @@10). 13 filling the water tank 1. Open the water tank lid (fig. 1) and then lift the tank to remove it (fig. 2). 2. Fill the tank with fresh water but do not pass MAX. (fig. 3). @@@@@5) to prevent water from escaping. Position the cup or cups under the filter-holder spouts (fig.

11). @@12). Make sure that the OK light (fig. @@7). @@7).

(It is recommended not to run the coffee for more than 45 seconds). Turn the grip from right to left to release the filterholder. Scalding hazard! @@14). @@4. Attach the filter-holder to the machine, turning it fully home (fig. 5). 5. @@@@2. Press the steam button (fig. 15).

3. @@The milk must be at refrigerator temperature (not hot!). When choosing the container considers that the volume of the milk will increase by 2 or 3 times. Nota Bene: it is recommended to use semiskimmed milk at refrigerator temperature (+/5°C). 4. Position the container with the milk under the cappuccino maker. 5. Wait for the indicator light relative to the steam button to switch on (fig. 16). This indicates that the boiler has reached the ideal temperature for the production of steam 6.

Open the steam tap for a few seconds to remove any water present in the circuit.



[You're reading an excerpt. Click here to read official DELONGHI](#)

[ECO 310.BK user guide](#)

<http://yourpdfguides.com/dref/3394315>

