



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DELONGHI ESAM 4000. B. You'll find the answers to all your questions on the DELONGHI ESAM 4000. B in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DELONGHI ESAM 4000. B
User guide DELONGHI ESAM 4000. B
Operating instructions DELONGHI ESAM 4000. B
Instructions for use DELONGHI ESAM 4000. B
Instruction manual DELONGHI ESAM 4000. B

21

1	Description of the appliance	21
2	Safety warning	23
3	Installation	23
4	Preparing the coffee maker	24
4.1	Filling the water tank	24
4.2	Filling the container with coffee beans	24
4.3	Using the coffee maker for the first time	24
5	Preparing the coffee (using coffee beans)	25
6	Adjusting the coffee grinder	27
7	Preparing espresso coffee with ground coffee (instead of beans)	28
8	Hot water delivery	28
9	Preparing cappuccinos (using steam)	29
10	Cleaning and maintenance	30
10.1	Cleaning the coffee maker	30
10.2	Cleaning the infuser	31
10.3	Descaling	32
10.4	Softening the water hardness	33
11	Meaning of the normal operation indicator lights	34
12	Meaning of the alarm indicator lights and what to do when they are on	35
13	Problems that can be resolved before calling the service centre	36

GB

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.
 At the end of its working life, the product must not be disposed of as urban waste.
 It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.
 Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.



OPERATING INSTRUCTIONS



[You're reading an excerpt. Click here to read official DELONGHI ESAM 4000. B user guide](http://yourpdfguides.com/dref/3388286)
<http://yourpdfguides.com/dref/3388286>

Manual abstract:

.....
.....
.....

.....
.....
..21 GB ..
.....

.....
.....
.....

.....
.....
23

.....
.....
.....

.....
.....
... ..23 Preparing the coffee maker .

.....
.....
.....

.....
.....
...24 4.1 Filling the water tank

.....
.....
.....

.....
.....
...24 ..
.....

.....
.....
...24 ...

.....
.....
.....

...24
.....
.....
.....

... .. @@.

.. ..

.. ..

.

... ..

.. ..

.. ..

. ... @@... ..

... ..28 Hot water delivery .

.. ..

.. ..

.

... ..

.. ..

.. ..

.

... ..28 .

.. ..

.. ..

.

... ..

.. ..

... @@..

.

... ..

.. ..

.. ..

.

... ..30 10.

1 Cleaning the coffee maker 10.2 Cleaning the infuser

.. ..

.

... ..

.. ..

.. ..

... ..30 .

... ..

.. ..

.. ..

.

... ..

.. ..

.. ..

...31 10.3 Descaling

... ..

.. ..

.. ..

.

... ..

.. ..

.. ..

.

32 10.4 Setting the water hardness

.. ..

. . . .
..
.
...33 .
.

.
...34 .

... ..35 11 Meaning of the normal operation indicator lights 12 Meaning of the alarm indicator lights and what to do when they are on 13 Problems that can be resolved before calling the service centre ..

... ..
36 IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC. At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources.

As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin. OPERATING INSTRUCTIONS 22 1. DESCRIPTION OF THE APPLIANCE (SEE PAGE 3) A. Cup warmer tray B. Steam knob C. Steam spout D. Milk frother E. Water tank (removable) F. Cup support tray G. Drip tray (removable) H.

Service door I. Coffee spout, adjustable in height J. Control panel K. Bean container lid L. Centre lid for the ground coffee M. Infuser N. Power cable O. Milk frother (removable) P. Milk frother nozzle (removable) Q. Measure for pre-ground coffee R.

Removable container for the coffee grounds S. Grinding coarseness adjustment knob T. Container for the coffee beans U. Compartment for the measure V. Funnel for pre-ground coffee Z.

Mobile drawer 1 2 3 4 5 6 12 11 10 Control panel 1) On/off button 2) One cup button with temperature OK light 3) Two cup button with temperature OK light 4) Steam button with temperature light 9 8 7 8) Scale alarm light 9) Generic alarm indicator light 10) Grounds container full or absent indicator light 11) No water or water tank absent indicator light 12) Steam knob 5) Coffee quantity selector knob (short, normal or long) 6) Grinding quantity selector knob (for weak, normal or strong coffee) 7) Ground coffee button and light (disables the coffee grinder) OPERATING INSTRUCTIONS 23 2 SAFETY WARNINGS CAREFULLY READ AND KEEP THESE INSTRUCTIONS! · This machine is designed to "make espresso coffee" and to "heat drinks": be careful to avoid scalding from the water and steam jets or by using the machine incorrectly. · This appliance is for household use only. All other use is considered improper and consequently dangerous. · The manufacturer is not liable for damage caused by improper, incorrect or unreasonable use of the appliance. · During operation, do not touch the hot surfaces of the appliance.

Use the knobs or handles. · Do not touch the appliance with damp hands or feet. · Do not allow children or unfit persons to use the appliance unsupervised. · Do not allow children to play with the appliance. · In the event of breakdown or faulty operation, turn the appliance off and do not tamper with it. For repairs, contact a technical service centre authorised by the manufacturer only. Request that only original spare parts be used. Failure to respect the above may compromise the safety of the appliance. 3 INSTALLATION · After unpacking, make sure the appliance is complete and undamaged. If in doubt, do not use it.

Contact professionally qualified personnel. · Packing elements (plastic bags, polystyrene etc) must not be left within reach of children as they may represent a hazard. · Place the appliance on a work surface far away from water taps, basins and sources of heat. · After having positioned the appliance on the work bench, make sure that there is a free space of around 5 cm between the surfaces of the appliance and the side and rear walls and a free space of at least 20 cm above the coffee maker. · Never install the machine in environments where the temperature may reach 0°C or lower (the appliance may be damaged if the water freezes). · Check that the voltage of the mains power supply corresponds to the value indicated on the appliance's rating plate. Only connect the appliance to a power outlet with a minimum rating of 10A that is properly earthed. The manufacturer declines all liability for any accidents caused if the system is not correctly earthed. · If the power outlet does not match the plug on the appliance, have the outlet replaced with a suitable type by qualified personnel. · The power cable for this appliance must not be replaced by the user, in that this operation requires the use of special tools.

In the event of damage, only contact a service centre authorised by the manufacturer so as to avoid any risks. · The water hardness should be set as soon as possible, following the procedure described in chapter 10.4. GB OPERATING INSTRUCTIONS 24 To correctly learn how to use the machine, when starting it for the first time, carefully follow the step-by-step instructions described in the following paragraphs. 4 PREPARING THE COFFEE MAKER 4.

1 FILLING THE WATER TANK · Remove the water tank (Fig.1), rinse it and fill it with fresh water, without exceeding the MAX line. When removing the tank, the milk frother must always be positioned towards the centre of the machine, otherwise the tank cannot be removed. · Replace the tank, pushing it all the way in. 4.

2 FILLING THE CONTAINER WITH COFFEE BEANS · Open the lid on the coffee bean container (Fig.2). · Fill the container with coffee beans. · Close the lid. WARNING: To avoid malfunctions, never introduce ground coffee, freeze-dried coffee or caramelised beans, or other objects that may damage the machine. Fig.2 4.3 USING THE COFFEE MAKER FOR THE FIRST TIME 1. Check that the water tank is full and that power cable is plugged into the power outlet. 2.

Move the milk frother towards the outside and place a cup underneath (Fig.3). Then turn the machine on by pressing the button (Fig.4). 3. IMMEDIATELY AFTER, WITHIN A MAXIMUM OF 30 SECONDS, turn the steam knob anticlockwise until it stops (Fig.5) (it is normal for the machine to make some noise). 4. After few seconds, a little water will come out of the milk frother. When there is around 30cc in the cup, turn the steam knob half a turn clockwise (Fig. 6) until it stops, so as to stop the water coming out. 5. Wait for the lights to stop flashing and turn on steady. (When the lights are flashing it means that the machine is pre-heating, while when they are on steady it means that the machine has reached the ideal temperature for making coffee - par.

[You're reading an excerpt. Click here to read official DELONGHI](#)



[ESAM 4000. B user guide](http://yourpdfguides.com/dref/3388286)
<http://yourpdfguides.com/dref/3388286>

11 - points 1 and 2).

A few moments before the lights stop flashing the machine automatically performs a rinse cycle: a little hot water will come out of the delivery spouts and will be collected in the drip tray underneath. Tip: for a hotter, short coffee (less than 60 cc), first fill the cup with the hot rinsing water. Then leave it inside for a few seconds (before emptying it) so as to pre-heat the cup. 6. At this point, the machine is ready for use.

Fig.1 Fig.3 Fig.4 OPERATING INSTRUCTIONS 25 5 PREPARING THE COFFEE (USING COFFEE BEANS) 1) Before delivering the coffee, always make sure that the green and lights are on steady, that the water tank and the coffee bean container are full. 2) Adjust the right-hand knob (Fig. 7) to set the desired taste of the coffee. Turning the knob clockwise increases the quantity of coffee beans that the machine will grind, and thus makes the taste of the coffee stronger. When using the machine for the first time, the correct position of the knob can be found by trial and error. Make sure not to turn it too far clockwise, otherwise the coffee will be delivered too slowly (in drops), above all when preparing two cups of coffee. 3) Adjust the left-hand knob (Fig.

8) to set the quantity of coffee required. Turning the knob clockwise makes a longer coffee. When using the machine for the first time, the correct position of the knob can be found by trial and error. 4) Place one cup under the spouts to make 1 coffee (Fig. 9) or 2 cups for 2 coffees (Fig. 10). For a creamy coffee, lower the spouts to bring them as close to the cups as possible (Fig. 11). 5) Press the button (Fig. 12) to make one cup of coffee or the button (Fig. 13) to make 2 coffees. At this point the machine grinds the beans, runs a short pre-infusion cycle, a pause and then completes the delivery. Once the desired quantity has been reached, the machine automatically stops delivering the coffee and discharges the grounds into the special container. 6) After a few seconds, when both the green and indicator lights are on again, another coffee can be made. 7) To switch the machine off, press the button.

(Before switching off, the machine automatically runs a rinse cycle: a little hot water will come out of the spouts and will be collected in the drip tray underneath - be careful, to avoid being scalded). If the machine is not switched off using the button, it will switch itself off and run a brief rinse cycle 3 hours after the last operation GB Fig.5 Fig.6 NOTE 1: : If the coffee is delivered a drop at a time or not at all, turn the grinding coarseness regulator (fig. 17) one click clockwise (see para.

6). Turn a click at a time until the coffee is delivered satisfactorily. NOTE 2: If the coffee is delivered too fast and is not creamy enough, turn the right-hand knob (fig. 7) clockwise. Proceed by trial and error to find the correct position of the knob. Make sure not to turn the knob too far clockwise, otherwise the delivery may become too slow (in drops), above all when making two cups of coffee. If, after several coffees, the cream is still not satisfactory, also turn the grinding adjustment knob (Fig. 17) one click clockwise (see par. 6). NOTE 3: Tips on making hotter coffee: 1)) If, when the machine has just been turned on, a short cup of coffee is required (less than 60cc), use the hot rinsing water to pre-heat the cups (see the suggestion in par.

4.3, point 5). 1) If, when the machine has just been turned on, a short cup of coffee is required (less than 60cc), use the hot rinsing water to pre-heat the cups (see the suggestion in par. 4.3, point 5). If, on the other hand, more than 2/3 minutes have elapsed since the last coffee was made, before preparing another coffee the infuser must be pre-heated, pressing the button (Fig. 14). Fig.7 Fig.8 OPERATING INSTRUCTIONS 26 Then let the water flow out into the drip tray underneath, or alternatively use this water to fill (and then empty) the cup to be used for the coffee, so as to pre-heat it.

2) Unless preheated, do not use cups that are too thick, as they will absorb too much heat. 3) Use cups that have been previously heated by rinsing them with hot water or alternatively by leaving them for at least 20 minutes on the cup warmer tray on top of the machine with the appliance on. NOTE 4: while the machine is making the coffee, the delivery can be stopped at any time by pressing the creamier appearance. Turn clockwise for coarser ground coffee and consequently faster delivery (not a drop at a time). Fig.

15 NOTE 1: The machine has been tested in the factory using coffee and therefore it is completely normal to find some traces of coffee in the grinder. The machine is in any case guaranteed to be new. Fig.17 Fig.16 OPERATING INSTRUCTIONS 28 7 PREPARING ESPRESSO COFFEE WITH GROUND COFFEE (INSTEAD OF BEANS) 1.

Press the button to select the ground coffee function (Fig. 18). The light inside the button switches on to indicate that the function has been selected and the coffee grinder has been disabled. 2. Lift the lid in the centre, insert the pre-ground coffee measure in the funnel (see fig. 19) and proceed as described in paragraph 5. NB: You can make just one coffee at a time by pressing the button. NOTE 1: Never add the ground coffee when the machine is off, to prevent it from spilling inside the machine. NOTE 2: Never add more than 1 measure, otherwise either the machine will not make the coffee and the pre-ground coffee will be lost inside the machine, dirtying it, or the coffee will be run off in drips. Fig.

18 NOTE 3: When dosing the quantity of coffee to be added, only use the measure supplied. NOTE 4: Only use ground coffee for espresso coffee makers: do not use coffee beans, freeze-dried coffee or other materials that may damage the machine. NOTE 5: If you add more than one measure of pre-ground coffee and the funnel blocks, use a knife to push the coffee down (Fig. 20) and then remove and clean the infuser and the machine, as described in paragraph 10.2 "Cleaning the infuser". 3. Once the coffee has been delivered, to make coffee using the beans again, deactivate the ground coffee function by pressing the button again (the light goes off and the coffee grinder is enabled for operation again). 8 HOT WATER DELIVERY Always make sure that the green and lights are on steady. Turn the milk frother towards the outside of the machine (Fig. 3).

Position a container underneath the milk frother (Fig. 3). Turn the steam knob half a turn in anticlockwise until it stops (Fig. 5): hot water will come out of the milk frother and start to fill the container underneath. To stop the flow of hot water, turn the knob all the way clockwise (Fig. 6) and return the milk frother to the original position towards the centre of the machine. (It is recommended to deliver hot water for no more than 2 minutes). . . . Fig.19 Fig.20 OPERATING INSTRUCTIONS 29 9 PREPARING CAPPUCCINOS (USING STEAM) · Fill a container with around 100 grams of milk for each cappuccino being prepared.



[You're reading an excerpt. Click here to read official DELONGHI ESAM 4000. B user guide](http://yourpdfguides.com/dref/3388286)
<http://yourpdfguides.com/dref/3388286>

When choosing the size of the container, remember that the volume will increase by 2 or 3 times. It is recommended to use partially skimmed milk at fridge temperature. · Move the milk frother towards the outside (Fig. 3). · Prepare the espresso coffee as described in the previous paragraph, using sufficiently large cups. · Then press the steam button (Fig. 21). The light (Fig. 22) starts flashing to indicate that the machine is heating up. · When the light remains on steady and stops flashing, the temperature of the machine has reached the ideal value for making the steam (par.

11 - point 6). · Immediately after, within a maximum of two minutes (otherwise the machine automatically returns to the coffee function), dip the milk frother into the container of milk (Fig. 23), making sure not to immerse the line in relief on the milk frother (indicated by the arrow in Fig. 24) and turn the steam knob half a turn anticlockwise until it stops (Fig. 5). (Be careful, to avoid being scalded). The steam released will make the milk froth and increase in volume. To make creamier foam, dip the milk frother into the milk and rotate the container with slow movements from the bottom to the top (you are recommended to limit steam delivery to no more than two minutes at a time). @@6) and then press the steam button (Fig. 21) to deactivate the steam function . @@@@21) to deactivate the function, when pressing the (Fig. 12) or button (Fig. @@@@NOTE 2: The milk frother must always be cleaned after use. @@@@Turn the knob clockwise as far as it will go. @@25).

@@26). Carefully wash the milk frother and the steam nozzle in warm water. Check that the two holes indicated by the arrows in Fig. 27 are not clogged. If necessary, clean them using a needle or pin.

@@@@@@A soft damp cloth will suffice. @@@@12 - point3). · The water tank should be cleaned regularly. @@@@To clean them, scrape the dry coffee residues with a needle (Fig. @@@@4) (do not unplug it) and wait for all the indicator lights to go off; · open the service door (Fig. 15); · remove the drip tray and the grounds container (Fig. 16) and clean them; · press the two red release buttons on the infuser sideways and towards the centre (Fig. 29) and pull it out; **WARNING: THE INFUSER CAN ONLY BE REMOVED WHEN THE MACHINE IS OFF. ATTEMPTING TO REMOVE THE INFUSER WITH THE MACHINE ON WILL RISK CAUSING DAMAGE.E.**

· wash the infuser under running water, without using detergents. Never wash the infuser in the dishwasher; · carefully clean the inside of the machine. To remove the coffee stuck to the parts inside the machine, scrape it with a plastic or wooden fork (Fig. 30) and then pick up all the residues using a vacuum cleaner (Fig. 31); · Replace the infuser by sliding it onto the supports and the pin at the bottom; then push the PUSH symbol fully in until hearing the click. GB Fig.29 Fig.30 Infuser Push the PUSH symbol fully in until hearing the click. Fig.31 After having heard the click, check that the red buttons have opened back out.

Support Pin Bottom pipe on the infuser. The pin must be inserted into the bottom pipe on the infuser. OPERATING INSTRUCTIONS 32 Check that the two red buttons have opened back out, otherwise the door cannot close. The two red buttons have opened out CORRECTLY The two red buttons have not opened out CORRECT INCORRECT NOTE 1: If the infuser is not inserted correctly until hearing the click and the two red buttons have not opened out properly, the service door will not close and the machine will not operate (when switching on the machine the light starts flashing (chap. 12 point 9)).

NOTE 2: if it is hard to insert the infuser, (before inserting it) squeeze it into size by pressing it vigorously from above and below at the same time, as shown in Figure 32 NOTE 3: if it is still hard to insert the infuser, leave it out of the machine, close the service door, unplug from the mains then plug in again. Wait for all the lights to go off, then open the door and replace the infuser. · replace the drip tray, complete with the grounds container; · close the service door.

10.3 DESCALING Due to the continuous heating of the water used to make the coffee, over time it is normal for the tubing inside the machine to fill with lime scale.

When the light starts flashing(chap. 12-point 5), it is time to descale the machine. NOTE: when the light switches on, the coffee maker can still be used to prepare coffee. Proceed as follows: · Empty the tank and pour in the contents of one bottle (125 ml) of DURGOL descaler plus one liter of water. For subsequent descaling operations, descaling solution can be purchased from authorised technical service centres. NB: Make sure splashes of descaler do not fall onto surfaces sensitive to acid such as marble, limestone and glaze. · place a container with a minimum capacity of 1.5 litres under the milk frother (Fig. 3); · turn the machine on by pressing the button (Fig. 4).

· wait for the green and indicator lights to come on steady. · press and hold the button for at least 5 seconds (Fig.14). The light inside the button switches on (chap. 11 - point 8) to indicate the start of the descaling program (the and lights remain off to indicate that it is not possible to make coffee). · turn the steam knob half a turn anticlockwise (Fig.5). The descaling solution will come out of the milk frother and start to fill the container underneath. · the descaling program automatically performs a series of deliveries and pauses, so as to remove the lime scale deposits from inside the coffee maker. Fig.

32 OPERATING INSTRUCTIONS 33 · after around 30 minutes, when the light comes on (chap. 12 point 1), turn the steam knob half a turn clockwise (Fig.6) until it stops. The machine must be rinsed so as to eliminate the residues of descaling solution from inside the machine. Proceed as follows: · remove the water tank, rinse it and fill it with clean water.

· reposition the tank. · empty the collection container (located under the milk frother) that is full of liquid, and then replace it under the milk frother. · turn the steam knob half a turn anticlockwise (Fig. 5). Hot water will come out of the milk frother and fill the container underneath.

· when the tank is empty, the light goes off and the light comes on (chap. 12 - point 1). · turn the steam knob all the way clockwise (Fig. 6) and fill the water tank with clean water again. · the program of descaling is hour terminated and the machine is ready per do again the coffee. NOTE: if the descaling procedure is stopped before completion, the alarm (chap. 12 - point 5) is not deactivated and the procedure must be started again from the beginning.

IMPORTANT: THE GUARANTEE IS NOT VALID IF THE ABOVE DESCALING OPERATION IS NOT PERFORMED REGULARLY. 10.4 SETTING THE WATER HARDNESS The light (chap.

12 - point 5) switches on after a preset period of operation, set in the factory, considering the maximum quantity of lime scale that may be contained in the mains water.



[You're reading an excerpt. Click here to read official DELONGHI](http://yourpdfguides.com/dref/3388286)

[ESAM 4000. B user guide](http://yourpdfguides.com/dref/3388286)

<http://yourpdfguides.com/dref/3388286>

If necessary, this period of operation can be extended, thus making the descaling operation less frequent, by programming the machine based on the actual lime content in the water used. Proceed as follows: · after having removed the "Total hardness test" strip (enclosed on page 2) from its packaging, dip it fully in the water for a few seconds, then pull it out and wait around 30 seconds (until it changes colour and a number of red dots are formed); · check that the machine is off (all the indicator lights are off); · press the button (Fig. 14) and hold it for at least 5 seconds. The four lights , , and come on. · press the button (Fig.18) repeatedly until the number of lights that are on coincides with the number of red squares on the test strip (for example, if there are 3 red squares on the test strip, press the button until 3 indicator lights come on together, , and). · press the button (Fig. 14) to save the data. The coffee maker is now programmed to provide the descaling warning when effectively necessary, based on the actual hardness of the water.

. GB OPERATING INSTRUCTIONS 34 11 MEANING OF THE NORMAL OPERATION INDICATOR LIGHTS LIGHT 1 DESCRIPTION The , lights flash MEANING indicator The machine is not ready to make coffee (the ideal water temperature has not yet been reached). Wait for the indicator lights to come on steady before making the coffee. 2 3 4 5 6 7 The , indicator The machine is at the right temperature and lights are on steady. ready to make coffee The steady The steady The flashes The light is on The machine is delivering one cup of coffee.

light is on The machine is delivering two cups of coffee. steam light The machine is heating to the ideal temperature to produce steam. Wait for the light to come on steady before turning the steam knob. light is on steady The machine is ready to deliver steam and the steam knob can be turned. light is on The machine is ready for delivery using ground coffee (see chap.

7). light is on The automatic descaling program is in progress (see par. 10.3) The steady The steady 8 OPERATING INSTRUCTIONS 35 12 MEANING OF THE ALARM INDICATOR LIGHTS AND WHAT TO DO WHEN THEY ARE ON LIGHTS 1 DESCRIPTION The light is on steady GB MEANING ACTION The water tank is empty or is Fill the water tank as described in par. 5, note 6 and insert it fully. positioned incorrectly. The tank is dirty or lined with lime Rinse or descale the tank. scale. 2 The light flashes The machine cannot make the Turn the steam knob anticlockwise (Fig. 5) as described in par.

5 note 10. coffee and is noisy. The coffee comes out too slowly. Turn the grinding adjustment knob (Fig. 17) one click clockwise (par. 6). 3 The steady light is on The coffee grounds container is full Empty the grounds container and clean it as described in par. 5 - note 7, then insert it fully. or not in place. The grounds container has not Open the access door and replace the grounds container.

been replaced after cleaning. The light flashes 4 The ground coffee has not been Add the ground coffee as described in par. 7. poured into the funnel with the function selected. Fill the container with beans, as descriNo more coffee beans bed in par.

4.2 If the coffee grinder is very noisy, it Contact an authorised Dè Longhi servimeans that a small stone in the coffee ce centre. beans has blocked the coffee grinder. 5 The flashes light This indicates the presence of lime The descaling procedure, described in par. 10.

3, needs to be performed as scale in the machine. soon as possible. After cleaning, the infuser has pro- Leave the service door closed and the bably been left out of the coffee infuser out of the coffee maker. Press the 1CUP and 2CUPS buttons together maker. until the four lights go off. Only when all four lights are off can the door be opened and the infuser inserted (to insert the infuser see par. 10.2) 6 The machine makes a strange noise and the four lights , , and flash alternately. 7 The and lights flash alternately The machine has just been switched on and the infuser is not inserted correctly, consequently the door is not closed properly. Press the infuser where marked PUSH until hearing the click.

Check that the two red buttons open out correctly (par. 10.2). Close the service door and press the button. 8 The , and lights are on and flashing The The machine has been switched on Turn the steam knob clockwise all the with the steam knob in the open way round (Fig. 6). position. light is flashing The service door is open. 9 If the service door cannot be closed, check that the infuser is inserted correctly (par. 10.

2 - note 1) OPERATING INSTRUCTIONS 36 LIGHTS DESCRIPTION The light is on steady and the green lights are flashing. MEANING ACTION After cleaning, the infuser has pro- Insert the infuser, see par. 10.2 bably been left out of the coffee maker The inside of the machine is very Thoroughly clean the inside of the machine, as described in par. 10.

2 dirty. The ground coffee funnel is clog- Empty the funnel with the help of a knife, as described in par. 7 note 5 ged. (Fig.20).

10 11 The light is flashing 1 3 PROBLEMS THAT CAN BE RESOLVED BEFORE CALLING THE SERVICE CENTRE If the machine is not working and an alarm light is on, the causes of the malfunction can be identified and resolved by referring to chap. 12. If, on the other hand, no alarm light is on, run the following checks before calling the service centre. PROBLEM · The coffee does not come out of one of the spouts. @@5 note 3). @@@@7) a little fee during the infusion process. clockwise (see chap. @@17) one click anticlockwise (see chap. 6). · The coffee comes out too slowly · The ground coffee is not correct Use another brand of coffee blend.

The coffee is ground too fine. Turn the grinding adjustment knob (Fig. 17) one click clockwise (see chap. 6). · The machine uses too much cof- Turn the right-hand knob (Fig. 7) a little antifee during the infusion process clockwise. The coffee is ground too coarse The machine uses too little coffee during infusion. Turn the grinding adjustment knob (Fig. 17) one click anticlockwise (see chap. 6).

Turn the right-hand knob (Fig. 7) a little clockwise. · The coffee comes out too quickly. · OPERATING INSTRUCTIONS 37 PROBLEM · The coffee does not come out of one of the spouts. CAUSE · The outlet is blocked SOLUTION Scrape the remains of dry coffee accumulated with a needle (Fig. 28). GB · Turning the steam knob, no · The holes in the spouts are clogged. steam comes out of the milk frother. · Pressing the and buttons, the machine does not deliver coffee, but only water. Clean the holes in the milk frother and the steam nozzle (see chap.

9 - Fig.27). · Ground coffee may be blocked in the funnel.



[You're reading an excerpt. Click here to read official DELONGHI](http://yourpdfguides.com/dref/3388286)

[ESAM 4000. B user guide](http://yourpdfguides.com/dref/3388286)

<http://yourpdfguides.com/dref/3388286>

Remove the ground coffee inside the funnel, using a knife (see chap. 7 note 5). Then clean the infuser and the inside of the machine (see the description in par. 10.2) · Pressing the button, the machine does not switch on. · The infuser cannot be removed for cleaning. · The machine is not plugged in.

Check that the power cable is plugged into the power outlet · The machine is on. The infuser Turn the machine off (see par. 10.2). can only be removed if the
WARNING: the infuser can only be removed when the machine is off. machine is off Attempting to remove the infuser with the machine on will risk causing damage. · Too much ground coffee has Remove the infuser and thoroughly · Ground coffee is used clean the inside of the machine, as been added. (rather than beans) and the described in par. 10.2.

Repeat the machine does not deliver operation using a maximum of 1 level the coffee. measure of ground coffee · The button has not been pressed and the machine has used both the ground coffee added and the coffee ground by the grinder. Thoroughly clean the inside of the machine, as described in par. 10.2.

Repeat the operation by first pressing the button, as indicated in chapter 7. · Ground coffee has been added Remove the infuser and thoroughly clean the inside of the machine, as when the machine is off. described in par. 10.2.

Repeat the operation, however switching on the machine first. · The coffee does not come out of the spouts, but rather around the service door. · The holes in the spouts are clog- Scrape the holes with a needle (see par. 10.1, Fig. 28). ged with dry coffee. · The mobile drawer inside the Thoroughly clean the mobile ser vice door is blocked and drawer, above all near the hinges, so that they swing smoothly. cannot swing. OPERATING INSTRUCTIONS 38 OPERATING INSTRUCTIONS .



[You're reading an excerpt. Click here to read official DELONGHI ESAM 4000. B user guide](http://yourpdfguides.com/dref/3388286)
<http://yourpdfguides.com/dref/3388286>