



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DELONGHI ESAM 5500.T PERFECTA. You'll find the answers to all your questions on the DELONGHI ESAM 5500.T PERFECTA in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual DELONGHI ESAM 5500.T PERFECTA**  
**User guide DELONGHI ESAM 5500.T PERFECTA**  
**Operating instructions DELONGHI ESAM 5500.T PERFECTA**  
**Instructions for use DELONGHI ESAM 5500.T PERFECTA**  
**Instruction manual DELONGHI ESAM 5500.T PERFECTA**

## INDEX

<b>INTRODUCTION</b> .....	27
Symbols used in these instructions.....	27
Letters in brackets .....	27
Troubleshooting and repairs .....	27
<b>SAFETY</b> .....	27
Fundamental safety warnings.....	27
Designated use.....	28
Instructions .....	28
<b>DESCRIPTION</b> .....	28
Description of appliance.....	28
Description of milk container .....	28
Description of control panel .....	28
Explanation of indicator lights .....	29
<b>PRELIMINARY CHECKS</b> .....	29
Controls after transport .....	29
Installing the appliance .....	29
Connecting the appliance .....	29
Using the appliance for the first time.....	30
<b>TURNING THE APPLIANCE ON</b> .....	30
<b>TURNING THE APPLIANCE OFF</b> .....	30
<b>CHANGING THE MENU SETTINGS</b> .....	31
Setting the clock .....	31
Setting the language .....	31
Setting automatic start up time.....	31
Descaling .....	31
Setting the temperature .....	31
Auto-Off .....	31
Setting water hardness .....	32
Resetting factory default values (reset) .....	32
Installing the filter .....	32
Replacing the filter ("Reset water filter") .....	32
Removing the filter .....	32
Statistics function .....	32
<b>MAKING COFFEE</b> .....	33
Selecting the coffee taste .....	33
Selecting the quantity of coffee in the cup .....	33
Customising the "my coffee" quantity .....	33
Regulating the coffee mill .....	33
Making coffee (using coffee beans) .....	34
Making coffee using pre-ground coffee .....	34

<b>MAKING MILKY DRINKS</b> .....	34
Filling and attaching the milk container .....	34
Cleaning the milk container after use .....	35
Programming the quantity of coffee and milk in the cup for cappuccino or frothed milk.....	35
Making cappuccino .....	35
Making frothed milk .....	35
Making caffelatte .....	36
Making hot milk .....	36
<b>HEATING WATER</b> .....	36
Preparation .....	36
Changing the quantity .....	36
<b>CLEANING AND MAINTENANCE</b> .....	36
Emptying the drip tray .....	36
Cleaning the coffee maker .....	37
Cleaning the water tank .....	37
Cleaning the drip tray .....	37
Cleaning the coffee grounds container .....	37
Cleaning the spouts .....	37
Cleaning the coffee feed funnel .....	37
Cleaning the inside of the machine .....	37
Cleaning the infuser .....	37
Cleaning the milk container .....	38
<b>DESCALING</b> .....	38
<b>SETTING WATER HARDNESS</b> .....	39
Measuring water hardness .....	39
Setting water hardness .....	39
<b>DISPLAYED MESSAGES</b> .....	40
<b>TROUBLESHOOTING</b> .....	42
<b>TECHNICAL SPECIFICATION</b> .....	44
<b>DISPOSAL</b> .....	44



[You're reading an excerpt. Click here to read official DELONGHI ESAM 5500.T PERFECTA user guide](http://yourpdfguides.com/dref/3388201)  
<http://yourpdfguides.com/dref/3388201>

### Manual abstract:

Take a few minutes to read these instructions. @@@@ · Never touch the plug with damp hands. · Make sure the socket used is freely accessible at all times, enabling the appliance to be unplugged when necessary. · Unplug directly from the plug only. Never pull the power cable as you could damage it. · To disconnect the appliance completely you must unplug it from the mains socket. · If the appliance is faulty, do not attempt to repair. Turn it off, unplug from the mains socket and contact the Technical Assistance service. · If the plug or power cable is damaged, it must be replaced by the Technical Assistance service only to avoid all risk. GB Symbols used in these instructions Important warnings are identified by these symbols.

These warnings must absolutely be respected. Failure to observe the instructions could result in electric shock, serious injury, burns, fire or damage to the appliance. Danger! Failure to observe the warning could result in possibly life threatening injury from electric shock. Important! Failure to observe the warning could result in injury or damage to the appliance. Danger of burns! Failure to observe the warning could result in scalds or burns.

NB: This symbol identifies important advice or information for the user. Danger! Keep all packaging (plastic bags, polystyrene foam) away from children. Letters in brackets The letters in brackets correspond to the legend in the Description of the appliance on page 3. Troubleshooting and repairs In the event of problems, first try and resolve them following the information given in the section "Displayed messages" on page 41 and "Troubleshooting" on page 43. If this does not resolve the problem or you require further information, you should consult the technical assistance service by calling the number given on the "Customer Service" sheet.

If your country is not among those listed on the sheet, call the number given in the guarantee. If repairs are required, contact the Technical Assistance service only. 27 Danger! Do not allow the appliance to be used by persons (including children) with psychological, physical or sensory impairments or with inadequate experience or knowledge, unless closely supervised and instructed by someone responsible for their safety. Children must be supervised to ensure they do not play with the appliance. Important: Risk of burns! This appliance produces hot water and steam may form while it is in operation. Avoid contact with splashes of water or hot steam. When the appliance is in operation, do not touch the cup warmer shelf (A6) as it becomes hot. Designated use This appliance is designed and made to prepare coffee and heat drinks. All other use is considered improper. This appliance is not suitable for commercial use.

The manufacturer is not liable for damage deriving from improper use of the appliance. DESCRIPTION Description of the appliance (pag. 3 A1. A2. A3. A4. A5. A6. A7. A8.

A9. A10. A11. A12. A13.

A14. A15. A) Grinding coarseness regulator knob Bean container lid Container for coffee beans Ground coffee feed funnel Compartment for measure Cup warmer shelf Water tank Infuser Coffee grounds container Cup tray Drip tray Service door Removable drawer Coffee spout (adjustable height) Hot water and steam nozzle Instructions Read these instructions carefully before using the appliance. - Keep these instructions If the appliance is passed to other persons, they must also be provided with these instructions. - Failure to respect these instructions may result in burns or damage to the appliance.

The manufacturer is not liable for damage deriving from failure to respect these instructions. Description of milk container (pag. 3 B1. B2. B3. B4. B5. B6. B7. B8.

B) Milk frother pointer Milk container handle CLEAN button Milk intake tube Frothed milk spout Milk frother Hot water spout Measure Description of control panel (pag. 3 - C) A number of buttons on the panel have a dual function. This is indicated in brackets in the description. C1. Display: guides the user in using the appliance. C2. button: to prepare 1 cup of coffee with the settings displayed C3. button: to prepare 2 cups of coffee with the settings displayed. C4. button: to run off hot water to make hot drinks.

(When you access the MENU, pressing the "OK" button confirms the selection made). C5. Indicator lights: indicate the current settings, alarm messages or need for maintenance. C6. CAPPUCCINO button to prepare cappuccino or frothed milk.

28 C7. Selection knob: turn clockwise or anticlockwise until the light corresponding to the quantity of coffee comes on customised "my coffee" espresso coffee normal coffee long coffee extra long coffee (When you access the MENU: turn to select). Aroma selection button : press until the light corresponding to the type of coffee you want to make comes on. pre-ground coffee extra-mild taste mild taste standard taste strong taste extra-strong taste PRELIMINARY CHECKS Controls after transport After removing the packaging, make sure the product is complete and undamaged and that all accessories are present. Do not use the appliance if it is visibly damaged.

Contact the Technical Assistance service. GB Installing the appliance Important! When you install the appliance, you should respect the following safety warnings: · The appliance gives off heat. Leave a free space of at least 3 cm around the sides and back of the appliance and at least 15 cm at the top, otherwise the heat could be trapped and damage the machine. · Water penetrating the appliance could cause damage. Do not place the appliance near taps or sinks. · The appliance could be damaged if the water it contains freezes. Do not install the appliance in a room where the temperature could drop below freezing point. · Arrange the power cable in such a way that it cannot be damaged by sharp edges or contact with hot surfaces (e.g. electric hot plates).

C8. C9. Rinse button : performs a brief rinse to heat the infuser. (When you access the MENU: press the "ESC" button to exit from the selected function and go back to the main menu). C10. P button to access the menu: C11. button: turns the appliance on and off Connecting the appliance Important! Check that the mains power supply voltage corresponds to the value indicated on the rating plate on the bottom of the appliance. Connect the appliance to an efficiently earthed and correctly installed socket with a minimum current rating of 10A only. If the power socket does not match the plug on the appliance, have the socket replaced with a suitable type by a qualified professional. Explanation of indicator lights Indicates the need to descale the appliance.

The grounds container is full and must be emptied. The water tank is empty and must be filled with fresh water. The Auto-Start function is active. The filter is exhausted and must be replaced. An alarm is displayed.

Indicates the button to press to confirm the choice in the menu.



[You're reading an excerpt. Click here to read official DELONGHI ESAM 5500.T PERFECTA user guide](http://yourpdfguides.com/dref/3388201)  
<http://yourpdfguides.com/dref/3388201>

Indicates the button to press to exit the menu or selected function. 29 Using the appliance for the first time NB! Coffee has been used to factory test the appliance and it is therefore completely normal for there to be traces of coffee in the mill. The machine is, however, guaranteed to be new. You should customise water hardness as soon as possible following the instructions in the section "Setting water hardness" on page 49.

Some models are fitted with a water softener filter which reduces the build up of limescale in the appliance. To install, see the instructions in the section "Installing the filter" on page 42. **TURNING THE APPLIANCE ON** Each time the appliance is turned on, it performs an automatic preheat and rinse cycle which cannot be interrupted. The appliance is ready for use only after completion of this cycle. **Danger of burns!** During rinsing, a little hot water is run off from the coffee spouts. Avoid contact with splashes of water. To turn the appliance on, press the button (fig. 4). The message "Heating Up..

Please Wait" is displayed. After heating, the message "RINSING" is displayed. As well as heating the boiler, the appliance also heats the internal circuits by circulating hot water. The appliance is at temperature when the message "READY Standard Taste" is displayed. . . . 1. Connect the appliance to the mains supply. You must first select the language (the languages scroll through at intervals of about two seconds): 2. When English aptton to confirm (or the button to cancel the operation); 6. Press the button to exit the menu.

Setting water hardness 1. Press the P button to enter the menu; 2. Turn the selection knob until "Water Hardness" is displayed; 3. Press the button; 4. Turn the selection knob until the water hardness measured using the indicator strip is displayed (see paragraph "Measuring water hardness" - page 39); 5. Press the button to confirm (or the button to cancel the operation); 6. Press the button to exit the menu. 7. Press the button to exit the menu. Resetting factory default values (reset) This function resets the entire menu with the default values (except the language, which remains as set).

1. Press the P button to enter the menu; 2. Turn the selection knob until "Default Values" is displayed; 3. Press the button; 4. The message "Confirm?" is displayed. 5. Press the button to confirm and exit (or the button to cancel the operation); Removing the filter If you want to use the appliance without a filter, you must remove it and notify the appliance of its removal as follows: 1. Press the P button to enter the menu; 2. Turn the selection knob until "Install Filter" is displayed; 3. Press the button; 4.

The message "Confirm?" is displayed. 5. Press the button; 6. When the asterisk has disappeared from the top right of the display, press to exit the menu. **Important!** If this is not done, the appliance could become clogged with limescale. Installing the filter Certain models are provided with a water softener filter (alternatively it can be purchased separately from an authorised technical assistance centre). To install the filter, proceed as follows: 1. Insert the filter in the water tank as far as it will go (see figure alongside). When you install the filter, you must notify the appliance of its presence. 2.

Press the P button to enter the menu; 3. Turn the selection knob until "Install Filter" is displayed; 4. Press the button; 5. The message "Confirm?" is displayed. 6.

Press the button to confirm (an asterisk appears at the top right of the display); 7. Press the button to exit the menu. **Important!** If this is not done, the appliance could become clogged with limescale. Statistics function 1. Press the P button to enter the menu; 2.

Turn the selection knob until "Statistics" is displayed; 3. Press the button; 4. Turn the selection knob to verify: - how many coffees have been made; - how many cappuccinos have been made; - how many times the machine has been descaled; - the total number of litres of water run off; - how many times the water filter has been replaced. 5. Press the button twice to exit the menu. Replacing the filter ("Reset water filter") When the red light comes on, the filter must be replaced: 1. Extract the exhausted filter and replace with a new one; 2. Press the P button to enter the menu; 3. Turn the selection knob until "Reset Water Filter" is displayed; 4. Press the button; 5.

The message "Confirm?" is now displayed. 6. Press the button to confirm (or the button to cancel the operation); 32 **MAKING COFFEE** Selecting the coffee taste The appliance is preset to make coffee with a standard taste. You can also choose one of these tastes: Extra-mild taste Mild taste Standard taste Strong taste Extra-strong taste To change the flavour, press the button (fig. 5) repeatedly until the required taste is displayed. Regulating the coffee mill The coffee mill is preset in the factory to prepare coffee correctly and should not require regulating initially. However, if after making the first few coffees you find that run-off is either too fast or too slow (drips), this can be corrected by adjusting the grinding coarseness regulator knob (fig. 7). For slower run-off and creamier coffee, turn one click towards the "1" (finer ground coffee). For faster run-off (not in drips, turn one click towards the "7" (coarser ground coffee). These adjustments will only be evident after at least 2 cups of coffee have been run off. GB Selecting the quantity of coffee in the cup To select the quantity of coffee, turn the selection knob until the light corresponding to the required quantity of coffee comes on: NORMAL 60ml ESPRESSO 40ml MY COFFEE 30ml LONG 90ml EXTRA LONG 120ml NB! The grinding coarseness regulator must only be turned when the coffee mill is in operation. Customising the "MY COFFEE" quantity The appliance is factory preset to automatically deliver 30 ml. 1. Place a cup under the coffee spouts (fig.

9). 2. Turn the selection knob (C7) until the light comes on. 3. Press the 1 cup button for at least eight seconds (fig.

6). The message "1 MY COFFEE Programme Quantity" is displayed and coffee run-off begins; 4. As soon as the coffee in the cup reaches the required level, press the 1 cup button again. The quantity set has now been programmed. 33 Preparing coffee using coffee beans **Important!** Do not use caramelised or candied coffee beans as they could stick to the coffee mill and make it unusable. 1. Fill the container (A3) with coffee beans (fig. 8). 2. Place under the coffee spouts: - 1 cup, if you want to make 1 coffee (fig.

9); - 2 cups, if you want 2 coffees. 3. Lower the spouts as near as possible to the cup. This makes a creamier coffee (fig. 10). 4. Press the corresponding coffee button (1 cup or 2 cups) (fig. 6 and 11).



[You're reading an excerpt. Click here to read official DELONGHI](http://yourpdfguides.com/dref/3388201)

[ESAM 5500.T PERFECTA user guide](http://yourpdfguides.com/dref/3388201)

<http://yourpdfguides.com/dref/3388201>

#### 5. Preparation begins.

A progress bar appears on the display and gradually advances as the procedure progresses (fig. 12). Once the coffee has been made, the appliance is ready to use again. NB! While the machine is making coffee, run-off can be interrupted at any moment by pressing one of the coffee buttons ( or ). As soon as run-off is finished, to increase the quantity of coffee in the cup, just hold down one of the coffee buttons ( or ) until the required amount is reached (this must be done within three seconds after completion of run-off).

If the coffee drips out, or runs out too fast with little cream or too cold, read the tips in the "Troubleshooting" section on page 43. · Never use more than one level measure or it could dirty the inside of the machine or block the funnel. 2. Put one level measure of pre-ground coffee into the funnel (fig. 14). 3. Place a cup under the coffee spouts. 4. Press the 1 cup coffee button (fig. 6). MAKING MILKY DRINKS Filling and attaching the milk container 1. Turn the lid of the milk container clockwise until it becomes noticeably difficult to turn, then remove the lid. 2. Fill the milk container with a sufficient quantity of milk, not exceeding the MAX level marked on the handle (fig. 15).

NB! You should ideally use skimmed or semi-skimmed milk at refrigerator temperature (about 5°C). 3. Make sure the milk intake tube (B4) is correctly inserted in the bottom of the milk container lid (fig. 16). 4. Replace the milk container lid and turn anticlockwise as far as it will go. 5. Remove the hot water spout from the nozzle (fig. 17). 6.

Attach the container to the nozzle, pushing as far as it will go (fig. 18). 7. Place a sufficiently large cup under the coffee spouts (A14) and the frothed milk spout (fig. 19).

If necessary, move the frothed milk spout slightly outwards (B5 - fig. 19). · · · Making coffee using pre-ground coffee NB! If you use pre-ground coffee, you can only make one cup of coffee at a time. 1. Press the button repeatedly (fig. 13) until "READY PRE-GROUND" is displayed. Important! Never add pre-ground coffee when the machine is off or it could spread through the inside of the machine and dirty it. This could damage the appliance. · 34 Cleaning the milk container after use Clean the internal tubes of the milk container each time you use it to avoid the build-up of milk residues or blockages. Important! Danger of burns When cleaning the internal tubes of the milk container, a little hot water leaks out of the frothed milk tube (B5). Avoid contact with splashes of water. 1 Place a cup or other recipient under the frothed milk spout (B5 - fig. 19); 2. Press the "CLEAN" button (B3 - fig. 20) and hold it down for at least eight seconds.

The message "Cleaning" is displayed. 3. Remove the milk container and clean the nozzle with a sponge (fig. 21). Making cappuccino 1. @ @2. @ @ @ @ Moving it towards the word CAPPUCCINO obtains a less dense froth. @ @ Press the cappuccino button (fig. 22). The message "Cappuccino" is displayed. @ @ @ @ If you want to stop preparation, press the CAPPUCCINO button twice. @ @ To modify these quantities, proceed as follows: 1. Place a cup under the coffee spouts and the frothed milk spout (fig. 19). 2.

Press the CAPPUCCINO button for at least eight seconds (fig. 22). @ @ 3. Release the button. The appliance starts running off milk. 4. @ @ 5. @ @ 6. @ @ Coffee run-off stops and "READY" is displayed. @ @ @ @ 2. @ @ 3. Press the CAPPUCCINO button (fig. 22) twice. The message "Milk Frothing" is displayed. NB! @ @ @ @ 2.

Set the frothed milk regulator (B1) to CAFFELATTE. 3. Press the CAPPUCCINO button (fig. 22). The message "Cappuccino" is displayed. NB! @ @ To modify these quantities, proceed as follows: 1. Position a container under the spouts. 2. Press and hold the button down for 8 seconds. The message "Hot Water Programme Quantity" is displayed.

@ @ @ @ @ 2. Set the frothed milk regulator (B1) to CAFFELATTE 3. Press the CAPPUCCINO button (fig. 22) twice. The message "Milk Frothing" is displayed.

NB! @ @ @ @ Never immerse the coffee maker in water. Important! Danger of burns. Allow the machine to cool down before cleaning. Important! Do not use solvents, abrasive detergents or alcohol to clean the coffee maker. None of the components can be washed in a dishwasher.

Do not use metal objects to remove encrustations or coffee deposits as they could scratch metal or plastic surfaces. HEATING WATER Preparation Important! Danger of burns. Never leave the machine unsupervised while running off hot water. As shown below, stop run-off of hot water when the cup is full. The hot water spout becomes hot while water is running off and must be handled by the handle only. 1. Make sure the hot water spout (B7) is attached correctly (fig. 3). 2. Place a container under the spout (as close as possible to avoid splashes).

3 Press the button (fig. 1). The message "Hot Water..." is displayed. Water runs out of the spout. NB! Stop the flow of hot water by pressing button. · · · Emptying the drip tray Important! If the drip tray (A11) is not emptied regularly, the water could overflow from the edge and seep inside or around the machine. This could damage the machine, the surface it rests on or the surrounding area.

The drip tray has a water level indicator in the form of a red float which rises up as the level of water in the drip tray rises. Empty the drip tray before the red float protrudes from the tray (fig. 23). the Important: You should not run off hot water for more than two minutes at a time. 36 To remove the tray: 1.

Open the service door (fig. 24); 2. Remove the drip tray and the grounds container (Fig. 25); 3. Empty the drip tray and grounds container (A9); 4. Remove the drip tray complete with grounds container (A9); 5. Close the service door. Cleaning the spouts 1. Clean the nozzle (A15), ideally each time the coffee maker is used, with a sponge or cloth (fig. 21). 2. Check regularly (about once a month) that the holes in the coffee spout (A14) are not blocked. If necessary, remove coffee deposits with a toothpick (fig. 26), sponge or stiff bristled kitchen brush. GB Cleaning the coffee maker The following parts of the machine must be cleaned regularly: - water tank (A7), - drip tray (A11), - coffee grounds container (A9), - coffee spouts (A14) and hot water nozzle (A15), - pre-ground coffee feed funnel (A4), - inside the machine, accessible after opening the service door (A12), - infuser (A8), - milk container (B) Cleaning the coffee feed funnel · Check regularly (about once a month) that the pre-ground coffee feed funnel is not blocked.

If necessary, remove coffee deposits with a kitchen knife. Cleaning the inside of the machine 1. Check regularly (about once a week) that the inside of the machine is not blocked. If necessary, remove coffee deposits with a toothpick, sponge or stiff bristled kitchen brush. 2. Remove the residues with a vacuum cleaner (fig. 27).



[You're reading an excerpt. Click here to read official DELONGHI ESAM 5500.T PERFECTA user guide](http://yourpdfguides.com/dref/3388201)  
<http://yourpdfguides.com/dref/3388201>

27). *Cleaning the water tank* 1. Clean the water tank (A7) regularly (about once a month) with a damp cloth and a little mild washing up liquid. 2. Clean to remove all washing up liquid residues, then rinse the water tank thoroughly. *Cleaning the infuser* The infuser must be cleaned at least once a month. *Important!* The infuser (A8) may not be removed when the appliance is on. Do not attempt to use force to remove the infuser as this could damage the machine. 1.

Turn the machine off. 2. Open the service door (fig. 24); 3. Remove the drip tray and grounds container (fig. 25); 4. Press the two red release buttons inwards and at the same time extract the infuser (fig. 28). *Important!* Do not use washing up liquid to clean the infuser (A8). The detergent would remove the lubricant applied to the inside of the piston, causing the infuser to seize up and become unusable. 5. Soak the infuser in water for about 15 minutes, then rinse. 6. After cleaning, replace the infuser (A8) by sli37 *Cleaning the drip tray* · Clean the drip tray (A11) each time you empty it using a damp cloth and a little mild washing up liquid. *Cleaning the coffee grounds container* 1.

*Clean the grounds container (A9) each time you empty it using a damp cloth and a little mild washing up liquid.* 2. Try removing the toughest coffee encrustations with a toothpick. If this is not sufficient, soften the encrustations by soaking the grounds container in water for a few minutes. ding it onto the internal support and pin at the bottom, then push the PUSH symbol fully in until it clicks into place. Support 2. Remove the milk spout and intake tube. 3. Remove the pointer by pulling it outwards. 4.

Wash all the components thoroughly with hot water and mild washing-up liquid. Make sure there are no milk residues left inside the holes and the groove on the fine end of the pointer. 5. Check that the intake tube and spout are not Hole clogged with Hole milk residues. 6.

Replace the pointer, milk spout and intake tube. 7. Replace the milk container lid. Pin DESCALING NB! If you encounter difficulty inserting the infuser, before inserting it you must adapt it to the right dimension by pressing it forcefully from the bottom and top as shown in the figure. 7. Once inserted, make sure the two red buttons have snapped out. 8. Replace the drip tray (A11) and grounds container (A9). 9. Close the service door (A12). Descal the machine when the red light and the message "DESCALE" flash on the display. *Important!* Descaler contains acids which may irritate the skin and eyes. It is vital to respect the manufacturer's safety warnings given on the descaler pack and the warnings relating to the procedure to follow in the event of contact with the skin and eyes. NB! Failure to descale the appliance as described above invalidates the guarantee. 1.

Turn the machine on. 2. Press the P button to enter the menu; 3. Turn the selection knob until "Descaling" is displayed; 4. Select by pressing the button. The message "Descaling Confirm?" is displayed. Press to activate the function. 5. If the message "INSERT WATER SPOUT" is displayed, insert it (fig. 3).

6. The message "Insert Descaler. Confirm?" is displayed. 7. Empty the water tank (A7). 8. Pour the descaler diluted with water (respecting the proportions indicated on the descaler bottle) into the water tank. Always use descaler recommended by De'Longhi (contact an authorised technical assistance centre). 9. Place an empty container with a minimum capacity of 1.

5 litres under the hot water spout (B7) (fig. 3). *Cleaning the milk container* *Important!* Always clean the tubes inside the milk container (B) when you prepare milk. If there is still milk in the container, do not leave it out of the refrigerator for longer than strictly necessary. Clean the container each time you prepare milk as described in the section "Cleaning the milk container after use". 1. Turn the lid of the milk container clockwise then remove it. spout milk intake tube Groove Pointer 38 *Important!* Danger of burns Hot water containing acid runs out of the hot water spout. Avoid contact with splashes of water. 10.

Press the button to confirm that you have added the solution and begin the descaling procedure. 11. The message "Descaling Underway" is displayed. After about 30 minutes, the message "Rinsing FILL TANK!" is displayed. 12. Remove the water tank, empty, rinse with running water, fill with clean water and replace. 13. Empty the container used to collect the descaler solution and replace it under the hot water spout. 14. Press the button to start rinsing.

Hot water runs out of the spout and the message "Rinsing..." is displayed. 15.

When the water tank is completely empty, the message "Rinsing Complete... Confirm?" is displayed. 16.

Press the button, fill the water tank and the appliance is ready for use. After about a minute, 1, 2, 3, or 4 red squares form, depending on the hardness of the water. Each square corresponds to one level. Setting water hardness 1. Press the P button to enter the menu. 2. Turn the selection knob to select "Water Hardness". 3. Confirm the selection by pressing the button. 4.

Turn the selection knob and set the level shown by the indicator paper (see previous paragraph). 5. Press the button to confirm the setting. 6. Press the button to exit the menu. The machine is now reprogrammed with the new water hardness setting. GB SETTING WATER HARDNESS The DESCAL message is displayed after a period of time established according to water hardness. The machine is factory set for a hardness value of 1. The machine can also be programmed according to the hardness of the mains water in the various regions, varying the frequency with which the message is displayed. Measuring water hardness 1.

Remove the "TOTAL HARDNESS TEST" indicator paper from its pack. 2. Immerse the paper completely in a glass of water for one second. 3. Remove the paper from the water and shake lightly.

Level 1 Level 2 Level 3 Level 4 39 DISPLAYED MESSAGES DISPLAYED MESSAGE FILL TANK! · POSSIBLE CAUSE The water tank is empty or positioned incorrectly. · REMEDY Fill the tank with water and/or insert it correctly, pushing it as far as it will go until it clicks into place. GROUND TOO FINE ADJUST MILL! Insert water spout and press ok · The grinding is too fine and the coffee runs off too slowly. The machine is not able to make coffee. · Turn the grinding adjustment knob one click towards the 7.

Insert the hot water spout, press the button and run off water from the spout for a few seconds · INSERT WATER SPOUT! · The water spout is not inserted or is inserted incorrectly. The grounds container (A9) is full. · Insert the hot water spout. EMPTY GROUNDS CONTAINER · Empty the grounds container and clean, then replace. *Important:* when removing the drip tray, the grounds container MUST be emptied, even if it is not completely full.



[You're reading an excerpt. Click here to read official DELONGHI ESAM 5500.T PERFECTA user guide](http://yourpdfguides.com/dref/3388201)  
<http://yourpdfguides.com/dref/3388201>

If this is not done, when you make the next coffees, the grounds container may fill up more than expected and clog the machine. **INSERT GROUNDS CONTAINER INSERT MILK CONTAINER!** · After cleaning, the grounds container has not been replaced. The milk container is not inserted. The "pre-ground coffee" function has been selected without placing any preground coffee in the funnel. · Open the service door and insert the grounds container.

Insert milk container. · **ADD PRE-GROUND COFFEE!** · Add the pre-ground coffee to the funnel or select the "coffee beans" function. **40 DISPLAYED MESSAGE DESCALE!** · **POSSIBLE CAUSE** This indicates the presence of limescale in the machine. · **REMEDY** The descaling procedure described in the "Descaling" section needs to be performed as soon as possible. Empty the funnel with the help of a knife, as described in the section "Cleaning the funnel to add coffee".. Select a milder taste or reduce the quantity of ground coffee, then run-off the coffee again. **GB LESS COFFEE!** · The ground coffee funnel is clogged. · Too many coffee beans or too much ground coffee has been added. · **FILL BEANS CONTAINER!** · The coffee beans have run out.

The infuser has not been replaced after cleaning. · Fill bean container **INSERT INFUSER ASSEMBLY!** · Insert the infuser as described in the paragraph "Cleaning the infuser". Close the service door. **CLOSE DOOR!** · The service door is open · **GENERAL ALARM!** · The inside of the appliance is very dirty. · Clean the inside of the appliance thoroughly, as described in the section "Cleaning and maintenance".

If the message is still displayed after cleaning, contact a service centre. **41 TROUBLESHOOTING** Below is a list of some of the possible malfunctions. If the problem cannot be resolved as described, contact a Technical Assistance centre. **PROBLEM** The coffee is not hot · **POSSIBLE CAUSE** The cups have not been preheated. · **REMEDY** Heat the cups by rinsing them in hot water or leaving them to rest for at least 20 minutes on the cup warmer tray.

Before making coffee, heat the infuser by pressing the button (fig. 29). · The infuser has cooled down because 2/3 minutes have elapsed since the last coffee was made. · The coffee is not creamy enough · The coffee is ground too coarsely. · La miscela del caffè non è adatta. · Turn the grinding adjustment knob one click anticlockwise towards the 1 while the coffee mill is in operation (fig. 7). Use a type of coffee for espresso coffee makers. The coffee runs out too slowly or in drips. · The coffee is ground too finely.

· Turn the grinding adjustment knob one click clockwise towards the 7 while the coffee mill is in operation (fig. 7). @ @ 7). @ @ · **POSSIBLE CAUSE** The spouts are blocked. @ @ @ @ The mobile drawer (A13) inside the service door is blocked and cannot swing. · · · If necessary, remove coffee deposits with a toothpick, sponge or stiff bristled kitchen brush (fig. 26). Thoroughly clean the mobile drawer (A13), particularly near the hinges. Water comes out of the spouts instead of coffee. · The ground coffee may be blocked in the funnel (A4).

· Clean the funnel (A4) with a wooden or plastic fork, clean the inside of the machine. The milk does not come out of the milk spout (B5). · The intake tube is not inserted or is inserted incorrectly. · Insert the intake tube (B4) in the rubber washer in the milk container lid (fig. 16).

The milk is not well frothed. · The milk container lid is dirty. · Clean the milk container lid as described in the section "Cleaning the milk container". You should ideally use skimmed milk at refrigerator temperature (about 5°C). If the result is not as you wished, try changing brand of milk.

Move the pointer slightly towards the word "CAFFELATTE" (see section "Making cappuccino"). The milk contains bubbles or squirts out of the milk spout. ·

The milk is not cold enough or is not semi-skimmed. · The milk frother pointer is incorrectly adjusted. · · **43 TECHNICAL SPECIFICATION** Voltage: 220-240 V~ 50/60 Hz max. 10A Absorbed power: 1350W Pressure: 15 bar Water tank capacity: 1,7 litres Size: LxHxP: 272x374x441 mm Weight: 11,4 Kg

The appliance complies with the following EC directives: Low Voltage Directive 2006/95/EC. Directive EMC 89/336/EEC and subsequent amendments 92/31/EEC and 93/68/EEC. **DISPOSAL** Important information for correct disposal of the product in accordance with EC Directive 2002/96/EC. At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin. · Materials and accessories coming into contact with food conform to EEC directive 1935/2004. **ELECTRICAL CONNECTION (UK ONLY)** A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below. **WARNING:** Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard. With alternative plugs not incorporating a fuse, the circuit must be protected by a 15 Amp fuse. If the plug is a moulded-on type, the fuse cover must be refitted when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer.

The colour of the correct replacement fuse cover is that as marked on the base of the plug. If your appliance is not fitted with a plug, please follow the instructions provided below: B) **WARNING - THIS APPLIANCE MUST BE EARTHED IMPORTANT** The wires in the mains lead are coloured in accordance with the following code: E Green and yellow: Blue: Brown: Earth Neutral Live L N As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The green and yellow wire must be connected to the terminal in the plug marked with the letter E or the earth symbol or coloured green or green and yellow.



[You're reading an excerpt. Click here to read official DELONGHI](http://yourpdfguides.com/dref/3388201)

[ESAM 5500.T PERFECTA user guide](http://yourpdfguides.com/dref/3388201)

<http://yourpdfguides.com/dref/3388201>