



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DELONGHI ESAM 6600. You'll find the answers to all your questions on the DELONGHI ESAM 6600 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DELONGHI ESAM 6600
User guide DELONGHI ESAM 6600
Operating instructions DELONGHI ESAM 6600
Instructions for use DELONGHI ESAM 6600
Instruction manual DELONGHI ESAM 6600

INDEX

1	DESCRIPTION OF THE APPLIANCE (see page 3)	24
2	SAFETY WARNINGS	24
3	INSTALLATION	25
4	USING FOR THE FIRST TIME	25
5	TURNING ON AND PREHEATING	26
6	PREPARING COFFEE (USING COFFEE BEANS) AND USEFUL TIPS	26
7	CHANGING THE QUANTITY OF COFFEE IN THE CUP	28
8	REGULATING THE COFFEE MILL	28
9	PREPARING ESPRESSO COFFEE WITH PRE-GROUND COFFEE (INSTEAD OF BEANS)	28
10	RUNNING OFF HOT WATER	29
11	CHANGING THE QUANTITY OF HOT WATER	29
12	PREPARING CAPPUCCINOS (FROTHED MILK AND COFFEE)	29
13	PREPARING MILK WITH COFFEE OR CAFFELATTE	30
14	PREPARING FROTHED AND HOT MILK (WITHOUT COFFEE)	30
15	CHANGING THE QUANTITY OF COFFEE AND MILK FOR CAPPUCCINO/ MILK WITH COFFEE/CAFFELATTE	30
16	CLEANING AND MAINTENANCE	31
16.1	CLEANING THE COFFEE MAKER	31
16.2	CLEANING THE INFUSER	32
16.3	CLEANING THE MILK CONTAINER	32
17	CHANGING AND SETTING THE MENU PARAMETERS	33
17.1	SETTING THE CLOCK	33
17.2	SETTING AUTO-START TIME	33
17.3	DESCALING	33
17.4	CHANGING COFFEE TEMPERATURE	34
17.5	CHANGING THE LENGTH OF TIME THE APPLIANCE REMAINS ON	34
17.6	SETTING WATER HARDNESS	35
17.7	RESETTING FACTORY DEFAULT SETTINGS	35
17.8	WASHING PROCESS	35
17.9	BEEP ON/OFF	35
18	CHANGING THE LANGUAGE	35
19	MEANING OF MESSAGES AND WHAT TO DO	36
20	PROBLEMS THAT CAN BE RESOLVED BEFORE CALLING THE SERVICE CENTRE	37
	ELECTRICAL CONNECTION (UK ONLY)	38

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.



Collection

23



[You're reading an excerpt. Click here to read official DELONGHI ESAM 6600 user guide](http://yourpdfguides.com/dref/3394017)
<http://yourpdfguides.com/dref/3394017>

Manual abstract:

.....
.....
.....
.....

.24 SAFETY WARNINGS

.....
.....

.....
.....
.....
.....

.....
.....
.....

24 INSTALLATION

.....
.....
.....
.....

.....
.....
.....
.....

.. .25 USING FOR THE FIRST TIME

.....
.....
.....

.....
.....
.....
.....

... .25 TURNING ON AND PREHEATING

.....
.....
.....

.....
.....
.....
.....

26 PREPARING COFFEE (USING COFFEE BEANS) AND USEFUL TIPS

.....
.....

..... .26 CHANGING THE QUANTITY OF COFFEE IN THE CUP . .

.....
.....
.....
.....

..... .28 REGULATING THE COFFEE MILL . . .

.....
.....
.....

.....
.....
.....
.....

... @@

..28 RUNNING OFF HOT WATER ...

.....
.....
.....
.....
.....

... .29 CHANGING THE QUANTITY OF HOT WATER .

.....
.....
.....
.....
.....

29 PREPARING CAPPUCCINOS (FROTHED MILK AND COFFEE)

.....
.....
.....

..29 PREPARING MILK WITH COFFEE OR CAFFELATTE

.....
.....
.....

... .30 PREPARING FROTHED AND HOT MILK (WITHOUT COFFEE) .

.....
.....
.....
.....
.....
.....
.....

... @@

.....
.....
.....
.....

30 CLEANING AND MAINTENANCE

.....
.....
.....
.....
.....

.....31 16.1 CLEANING THE COFFEE MAKER ...

.....
.....
.....
.....
.....

.....
.....31 16.

2 CLEANING THE INFUSER.....

.....
.....
.....
.....
.....
.....
.....32 16.

3 CLEANING THE MILK CONTAINER.....

.....
.....
.....
.....
.....

.32 CHANGING AND SETTING THE MENU PARAMETERS.....

.....
.....
.....
.....33 17.

1 SETTING THE CLOCK.....

.....
.....
.....
.....
.....
.....

.33 17.2 SETTING AUTO-START TIME.....

.....
.....
.....
.....
.....
.....33 17.

3 DESCALING.....

.....
.....
.....
.....
.....
.....

.33 17.4 CHANGING COFFEE TEMPERATURE...

.....
.....
.....
.....
.....

.34 17.5 CHANGING THE LENGTH OF TIME THE APPLIANCE REMAINS ON

.....

.....

... .34 17.6 SETTING WATER HARDNESS

.....

.....

.....

.....

.....

.....

.....

.35 17.7 RESETTING FACTORY DEFAULT SETTINGS

.....

.....

.....

.....

.....35 17.8 WASHING PROCESS

.....

.....

.....

.....

.....

.....

.....

.....35 17.

9 BEEP ON/OFF

.....

.....

.....

.....

.....

.....

.....

.....

.....

35 CHANGING THE LANGUAGE

.....

.....

.....

.....

.....

.....

.....

35 MEANING OF MESSAGES AND WHAT TO DO

.....

.....

.....

.....

.....36 PROBLEMS THAT CAN BE RESOLVED BEFORE CALLING THE SERVICE CENTRE

.....

.....

37 ELECTRICAL CONNECTION (UK ONLY)

.....

.....
.....
.....

.....

@@At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin. Collection 23 1

DESCRIPTION OF THE APPLIANCE (SEE PAGE 3) A.

B. C. D. E. F.

G. H. I. J. K. L. M. N. O. P.

Q. R. S. T. U. V. W. X. Grinding coarseness regulator Coffee beans container Bean container lid Central lid for ground coffee Compartment for measure Cup warmer tray Ground coffee funnel Milk container lid/milk frother Frothed milk spout Milk intake tube Nozzle Water tank (removable) Milk container Power cable Cup tray Measure for pre-ground coffee Drip tray (removable) Hot water spout Service door Coffee grounds container (removable) Coffee spout (adjustable in height) Mobile drawer Infuser Control panel Control Panel A number of buttons on the panel have a double function. This is indicated in brackets in the description.

ON/OFF button Display One short coffee button Two short coffees button One long coffee button Two long coffees button One caffelatte button (or hot milk if pressed twice consecutively) 8. One milk with coffee button (or frothed milk if pressed twice consecutively) 9. One cappuccino button (or frothed milk if pressed twice consecutively) 10. Button to select coffee taste or preparation with pre-ground coffee. (OK button to confirm changes to menu settings).

11. Hot water button. (SET button to change menu settings) 12. Rinse button. (button to change menu settings) 13.

P button to enter the appliance menu. (ESC button to exit menu). 1. 2. 3. 4. 5. 6. 7. 2 SAFETY WARNINGS READ THESE INSTRUCTIONS CAREFULLY AND KEEP FOR FUTURE CONSULTATION! · This appliance is designed to "make espresso coffee" and "heat drinks".

Use with care to avoid scalds from the water and steam jets or through incorrect use. · This appliance is intended for domestic use only. Any other use is considered improper and thus dangerous. · The manufacturer cannot be held responsible for any damage caused through incorrect, wrong or unreasonable use. · When using the appliance, do not touch the hot surfaces. Use the knobs or handles. · Never touch the appliance with wet or damp hands or feet. · The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. · In the event of failure or malfunction, unplug the appliance from the mains and do not tamper with it in any way.

If it requires repair, contact an authorised service centre only and ask for original spare parts to be used. Failure to respect the above could reduce the safety of the appliance. · If the power cable is damaged, it must be replaced by the manufacturer or an authorised technical service centre in order to avoid all risk.

Materials and accessories coming into contact with food conform to EC regulation 1935/2004. 24 Collection 3 INSTALLATION · · · · · After unpacking, make sure the appliance is complete and undamaged.

If in doubt, do not use it. Contact professionally qualified personnel. The packing elements (plastic bags, polystyrene foam, etc.) should be kept out of the reach of children as they are a safety hazard. Place the appliance on a work surface far away from water taps, basins and sources of heat.

After positioning the appliance on the work top, leave a space of at least 5 cm between the surfaces of the appliance and the side and rear walls and at least 20 cm above the coffee maker. Never install the appliance in environments where the temperature may reach 0 or lower (the appliance may be damaged if the water freezes). Make sure the mains voltage corresponds to the voltage indicated on the appliance rating plate.



[You're reading an excerpt. Click here to read official DELONGHI](http://yourpdfguides.com/dref/3394017)

[ESAM 6600 user guide](http://yourpdfguides.com/dref/3394017)

<http://yourpdfguides.com/dref/3394017>

Connect the appliance to an efficiently earthed socket with a minimum current rating of 10A only. The manufacturer may not be considered liable for possible incidents caused by the failure to adequately earth the mains. If the power socket does not match the plug on the appliance, have the socket replaced with a suitable type by a qualified professional. The power cable on this appliance must not be replaced by the user as this operation requires the use of special tools. If the cable is damaged or requires replacing, contact an authorised service centre only to avoid all risks. You should personalise water hardness as soon as possible following the instructions in section 17.6.

Coffee has been used to factory test the appliance and it is therefore completely normal for there to be traces of coffee in the grinder. It is, however, guaranteed to be new. . . . To correctly learn how to use the appliance, when starting it for the first time, carefully follow the step-by-step instructions described in the following paragraphs. 4 USING FOR THE FIRST TIME 1. The first time you use the appliance, select the language. To set English, plug the appliance into the mains socket and wait for the following message to be displayed: PRESS OK TO INSTALL ENGLISH While the message is displayed, press the OK button (fig. 1) for at least three seconds until you hear a BEEP (fig. 1) and the display shows: ENGLISH INSTALLED The appliance then displays the setting message in English. If you select the wrong language by mistake, follow the instructions in section 18 to choose the right one. 2. After 5 seconds, the appliance displays: FILL TANK To refill the tank, remove (fig. 2), rinse and fill it with fresh water. Never exceed the MAX line. Put the tank back and push as far as it will go. The appliance now displays: PRESS OK 3. Place a cup under the hot water spout (fig. 3). 4. Press the OK button (fig. 1) and a little water is run off from the spout. 5. The appliance displays: TURNING OFF PLEASE WAIT and it goes off. Collection 25 6. Fill the container with coffee beans (fig. 5) taking care not to exceed the "MAX" line.. IMPORTANT: to prevent malfunction, never fill with ground coffee, freeze dried coffee, caramelised beans or anything else which could damage the appliance. 5 TURNING ON AND PREHEATING 1. Press the button (fig. 6).

The appliance displays: HEATING UP PLEASE WAIT to indicate preheating is underway. 2. Once preheating is completed, the appliance displays RINSING PLEASE WAIT and performs an automatic rinse cycle (a little hot water is run off from the spouts and is collected in the drip tray below). Tip: if you want short coffee (less than 60 cc), to make it hotter, fill the cup with this hot rinsing water first. Leave it for a few seconds then empty it to preheat the cup. 8. The appliance now displays the ready message: READY STANDARD TASTE 6 PREPARING COFFEE (USING COFFEE BEANS) AND USEFUL TIPS 1. The appliance is preset to make coffee with a normal taste. You can also choose coffee with an extra-light, light, strong or extra-strong taste. To choose the required taste, press the /OK button (fig. 1). The selected coffee taste will be displayed. 2. Place 1 cup under the spouts to make 1 coffee (fig. 7) or 2 cups for 2 coffees (fig. 8). For a creamier coffee, lower the spouts to bring them as close to the cups as possible (Fig. 9). 3. Press one of the coffee buttons (fig. 10): the button to make a short coffee or the button for a long coffee.; To make 2 coffees, press the two short coffees button or the two long coffees button. To change the quantity of coffee delivered automatically into the cup, follow the instructions in section 7. (The appliance now grinds the beans and starts re-resolved by following the instructions indicated in paragraphs 19 and 20. If this is not the case, or for further explanations, contact the customer service by calling the number listed on the sheet enclosed on page pag. 2. If your country is not listed on the sheet, call the number indicated on the warranty. Collection 27 7 CHANGING THE QUANTITY OF COFFEE IN THE CUP The appliance is factory preset to automatically deliver the following quantities of coffee: - two short coffees (when the button is pressed); - long coffee (when the button is pressed); - two short coffees (when the button is pressed); - two long coffees (when the button is pressed); . To change these quantities, proceed as follows: - press the button corresponding to the quantity you want to change (or or or) for at least 8 seconds then release until the message "PROGRAM QUANTITY" is displayed and coffee is delivered; - when the coffee in the cup reaches the required level, press the same button again to memorise the new amount. The appliance emits a double "beep" of confirmation.

The appliance is now re-programmed with the new settings and displays: READY. 8 REGULATING THE COFFEE MILL The coffee grinder is preset in the factory to prepare coffee correctly and should not require regulating initially. However, after making the first coffees, if you find that coffee delivery is either too fast or too slow (in drips), the grinding coarseness regulator can be adjusted (fig. 11). Turning it 1 click (1 line) towards the number 7 speeds up coffee delivery (without drips). Turning 1 click towards the number 1 slows down delivery giving a creamier appearance to the coffee. These adjustments will only be evident after at least 2 cups of coffee have been run off. The grinding coarseness regulator must only be turned when the coffee mill is on. Turn one click towards the number 1 to obtain slower delivery and a creamier appearance (finer ground coffee). Turn one click towards the number 7 for faster delivery (not a drop at a time) (coarser ground coffee).

9 PREPARING ESPRESSO COFFEE WITH PRE-GROUND COFFEE (INSTEAD OF BEANS) · Select the ground coffee function by pressing the /OK button (fig. 16) repeatedly until READY - PRE-GROUND COFFEE · flashes on the display. This disables the coffee mill function. Lift the lid in the centre, place one level measure of ground coffee in the funnel (see fig. 15) and proceed as described in section 6.

NB: NB: You can make one coffee at a time by pressing the or button. After using the appliance with pre-ground coffee, to go back to making coffee using beans, deactivate the ground coffee function by repressing the button to prepare the grinder for operation again. NOTE 1: Never add the ground coffee when the appliance is off to avoid it from being dispersed inside the appliance. NOTE 2: Never add more than one level measure, otherwise either the appliance will not make the coffee and the ground coffee will be lost inside the appliance, dirtying it, or the coffee will run off in drips. 28 Collection NOTE 3: When dosing the quantity of coffee to be added, use the measure supplied only.

NOTE 4: Use ground coffee for espresso coffee makers only.



[You're reading an excerpt. Click here to read official DELONGHI](http://yourpdfguides.com/dref/3394017)

[ESAM 6600 user guide](http://yourpdfguides.com/dref/3394017)

<http://yourpdfguides.com/dref/3394017>

Do not use coffee beans, freeze-dried coffee or other materials that could damage the appliance. NOTE 5: If you add more than one measure of ground coffee and the funnel blocks, use a knife to push the coffee down (fig. 16), then remove and clean the infuser and appliance as described in section 16.2 "Cleaning the infuser". 10 PRODUCING HOT WATER · Always make sure the appliance is ready.. · Make sure the hot water spout is attached to the nozzle (fig. 4); · Position a container under the spout (fig. 3).

· Press the button (fig. 17). The appliance displays: HOT WATER and hot water is run off from the water spout into the container below (you should not run off hot water for more than two minutes at a time). To stop the flow, press the . button. Once the set quantity of hot water has been reached, run-off stops automatically. 11 CHANGING THE QUANTITY OF HOT WATER The appliance is factory preset to automatically deliver 250 ml of hot water. To change these quantities, proceed as follows: · Make sure the water spout is in place (fig. 4). · Position a container under the spout (fig.

3). · Press the button (fig. 17) for at least 8 seconds until you hear a "BEEP" then release the button. , The appliance displays: HOT WATER PROGRAM QUANTITY · and hot water is run off from the water spout. When the hot water in the cup reaches the required level, press the amount.

The appliance emits a double "BEEP" . (You should not run off hot water for more than two minutes at a time). button to memorise the new 12 PREPARING CAPPUCCINOS (FROTHED MILK AND COFFEE) · · · Select the taste of the coffee you want to use to make the cappuccino by pressing the OK button (fig. 1). Remove the lid of the milk container.

Fill the container with about 100 grams of milk for each cappuccino to be prepared (fig. 18). Never exceed the MAX level (corresponding to about 800 ml) marked on the container. You should preferably use skimmed or semi-skimmed milk at refrigerator temperature (about 5° C). Make sure the intake tube is correctly inserted in the bottom of the milk container lid (fig. 19), then replace the milk container lid and turn anticlockwise as far as it will go. Place the container pointer in position 1 (=CAPPUCCINO) (fig. 20). @@Remove the hot water spout (fig 21) and attach the milk container to the nozzle. You will hear a "BEEP" (fig.

22). Position the milk tube as shown in fig. 23 and then place a sufficiently large cup under the coffee and milk spouts (fig. 23). Press the CAPPUCCINO button (fig. 24). The button lights up and the appliance displays: · · · · CAPPUCCINO: CONTAINER POINTER IN position 1 Make sure the milk container lid pointer is turned to the same number as the number displayed. After a few seconds, the frothed milk is run off from the milk spout into the cup below. Run off of milk stops automatically and run off of coffee begins. Collection 29 NOTE 1: While preparing the cappuccino, frothed milk or coffee run off can be interrupted by pressing the CAPPUCCINO button.

NOTE 2: If you run out of milk while delivering frothed milk, remove the container and refill it. Then put it back in place and press the CAPPUCCINO button to request a cappuccino again. NOTE 3: To ensure the milk frother is absolutely clean and hygienic, after making cappuccinos, clean the channels inside the milk container lid: · Place a recipient under the milk spout; · Press the CLEAN button on the milk container lid and hold down for at least 8 seconds (fig. 25).

The appliance displays: CLEANING After cleaning is complete, remove the milk container and place in the refrigerator.

You should not leave the milk outside the refrigerator for more than 15 minutes. @@@@26). @@Press the LATTE MACCHIATO button (fig. 27). @@28).

@@@@@PROGRAM. QUANTITY · · Then release the button. The appliance starts running off milk. @@Milk delivery stops and the quantity is memorised. (The appliance emits a "BEEP"). @@PROGRAM. @@Coffee delivery stops and the quantity is memorised. @@@@A soft damp cloth will suffice. No component may be washed in a dishwasher. @@The water tank should also be cleaned regularly.

@@@@@29). Clean the nozzle after every use with a sponge as shown in fig. 30. @@@@13); · remove the drip tray and the grounds container (Fig.

@31) and pull it out; · IMPORTANT: THE INFUSER CAN ONLY BE REMOVED IF THE APPLIANCE IS OFF. ATTEMPTING TO REMOVE THE INFUSER WITH THE APPLIANCE ON MAY CAUSE SERIOUS DAMAGE. · wash the infuser under running water, without using detergents. Never wash the infuser in the dishwasher; · carefully clean the inside of the appliance. To remove the coffee stuck to the parts inside the appliance, scrape it with a plastic or wooden fork and then pick up all the residues using a vacuum cleaner (Fig. 32); · replace the infuser by sliding it onto the supports and pin at the bottom, then push the PUSH symbol fully in until it clicks into place.

Infuser Push the PUSH symbol fully in until it clicks into place. After having heard the click, check that the red buttons have snapped out. Support Pin Bottom pipe on the infuser. The pin must be inserted into the bottom pipe on the infuser. Collection 31 Check that the two red buttons have snapped out, otherwise the door cannot be closed.

· The two red buttons have snapped out CORRECTLY The two red buttons have not snapped out CORRECT · · INCORRECT replace the drip tray, complete with the grounds container; close the service door. NOTE 1: If the infuser is not inserted correctly until it clicks into place and the two red buttons have not snapped out, the service door cannot be closed. NOTE 2: if it is hard to insert the infuser, before inserting it, squeeze to size by pressing it vigorously from above and below at the same time, as shown in Figure. NOTE 3: If it is still hard to insert the infuser, leave it out of the appliance, close the service door, unplug from the mains, then plug in again.

Wait for all the lights to go off after the self-diagnosis, then open the door and replace the infuser. 16.3 Cleaning the milk container Proceed as follows: · Remove the milk spout (1) and intake tube (2). · Remove the pointer (3) by pulling it outwards (see figure) · Wash all the components thoroughly with hot water and washing-up liquid. Make sure there are no milk residues inside the two holes in the lid of the milk container indicated by the arrows in the figure or in the groove (4) in the pointer. · Replace the pointer, intake tube and milk spout, after making sure they are not clogged with milk residues. 4 3 1 2 17 CHANGING AND SETTING THE MENU PARAMETERS After pressing the button when the appliance is ready, you can use the internal menu to modify the following parameters and functions: · · · · Clock Auto-start time Auto-start Descaling process Coffee temperature · · · · Length of time the appliance remains on (turn off after) Water hardness Factory default values Washing process Beep ON/OFF Note: the last line of the display is the guide to the function buttons 32 Collection 17.



[You're reading an excerpt. Click here to read official DELONGHI ESAM 6600 user guide](http://yourpdfguides.com/dref/3394017)
<http://yourpdfguides.com/dref/3394017>

1 Setting the clock To set the clock, proceed as follows: · Press the P button, then press the button (corresponding to the repeatedly until the menu arrow is on: symbol flashing on the display) CLOCK 00:00 Press the button (corresponding to the SET symbol flashing on the display) to set the time on the clock.(If you hold the button down, the time is changed rapidly). · Press the OK button to confirm the value; · Press the P button (corresponding to the ESC symbol flashing on the display) to exit programming mode or to change other parameters.

Note: to display the time with the appliance off, press any button.The time will be displayed for five minutes. 17.2 Setting auto-start time This enables the time the appliance will come on automatically and be ready for use to be programmed. · Make sure the clock on the appliance is set as described above. · Press the P button then press button (corresponding to the symbol flashing on the display) repeatedly until the menu arrow is on: · START TIME 00:00 · · Press the button (corresponding to the SET symbol flashing on the display) to set the automatic start up time.(If you hold the button down, the time is changed rapidly).

Press the OK button to confirm the value; Press SET button again and the appliance displays the message: AUTO-START NO Press the · button (corresponding to the SET symbol flashing on the display) to modify the function (the appliance displays:"AUTO-START Yes"); Press the OK button to activate auto-start; Press the P button (corresponding to the ESC symbol flashing on the display) to exit programming mode or to change other parameters.

NOTE: when auto-start time is set, the symbol appears alongside the time on the display. 17.

3 Descale Over time, the continuous heating up of the water used to make the coffee leads to lime scale building up in the inner circuits of the appliance. When the message: DESCALE flashes on the display, you should perform the descale cycle. Proceed as follows: · make sure the appliance is ready. · press the P button (the light over the button comes on) then press the appliance displays: button repeatedly until the DESCALE No · Press the display: button (corresponding to the SET symbol flashing on the display) and the appliance will DESCALE YES · · Press the OK button to start the descale programme.

Empty the tank and pour in the contents of one bottle (125 ml) of DURGOL descaler plus one litre of water.

For subsequent descaling, use descaler of the same type and brand as supplied (available from technical service centres authorised by the manufacturer). attach the water spout to the nozzle; place a container with a minimum capacity of 1.5 litres under the hot water spout (Fig. 3); 33 · · Collection · press the

OK button. Descaler runs off from the hot water spout into the container below.

The appliance displays: APPLIANCE IN DESCALE · · the descale programme automatically performs a series of run offs and pauses to remove lime scale deposits from inside the coffee maker. After about 30 minutes, the appliance displays: RINSING FILL TANK The appliance must now be rinsed through to eliminate residues of descaling solution from inside the appliance. Proceed as follows: · empty the water tank, rinse and fill with clean water. · Reposition the tank. · Empty the full container and then put it back under the hot water spout. · Press the OK button. Hot water is run off from the spout into the container below and the appliance displays: RINSING · When the water tank is empty, the appliance displays the message: RINSING COMPLETE PRESS OK · · Press the OK button and refill the water tank with clean water. The descale programme is now terminated and the appliance is ready to make coffee again. NOTE: if the descaling cycle is interrupted before completion, the appliance continues to display the descale message and the programme must be started again from the beginning. Empty the water tank, rinse, fill with clean water and run off a cup of hot water.

IMPORTANT FAILURE TO DESCALE THE APPLIANCE REGULARLY INVALIDATES THE GUARANTEE. 17.4 Changing coffee temperature To change the temperature of the coffee, proceed as follows: · Press the P button, then press the button (corresponding to the repeatedly until the menu arrow is on: symbol flashing on the display) HIGH TEMPERATURE · Press the button (corresponding to the SET symbol flashing on the display) until the appliance displays the required coffee temperature. Note: to obtain hotter coffee, see also section 6, note 3, page 28. Press the OK button to confirm the temperature selected; Press the P button (corresponding to the ESC symbol flashing on the display) to exit programming mode or to change other parameters. · · 17.5

Changing the length of time the appliance remains on The appliance is factory preset to go off automatically one hour after the last coffee has been made. The number of hours the appliance remains on (max. 3) can be increased as follows: · Press the P button, then press the button (corresponding to the symbol flashing on the display) repeatedly until the menu arrow is on: OFF AFTER 1 HOUR · · Press the button (corresponding to the SET symbol flashing on the display) to change the number of hours the appliance remains on. Press the OK button to confirm the value; Press the P button (corresponding to the ESC symbol flashing on the display) to exit programming mode or to change other parameters.

34 Collection 17.6 Setting water hardness The descale message is displayed after the appliance has been operated for a factory set period of time calculated on the basis of the maximum quantity of lime scale which may be contained in the water used. If necessary, this period of operation can be extended, making descaling less frequent, by programming the appliance based on the actual lime content in the water used. Proceed as follows: · remove the "Total Hardness Test" strip (enclosed on page 2) from its packaging then dip it fully in the water for a few seconds and remove. After about a minute, 1, 2, 3 or 4 red squares develop.

· Press the P button, then press the button (corresponding to the flashing symbol on the display) repeatedly until the menu arrow is on: WATER HARDNESS 4 · Press the button (corresponding to the SET symbol flashing on the display) repeatedly until the number coincides with the number of red squares on the test strip (for example, if there are 3 red squares on the test strip, press the button until WATER HARDNESS 3 is displayed). Press the OK button to confirm the value. The coffee maker is now programmed to provide the descaling warning when necessary, based on the actual hardness of the water.



[You're reading an excerpt. Click here to read official DELONGHI](http://yourpdfguides.com/dref/3394017)

[ESAM 6600 user guide](http://yourpdfguides.com/dref/3394017)

<http://yourpdfguides.com/dref/3394017>

Press the P button (corresponding to the ESC symbol flashing on the display) to exit programming mode or to change other parameters. · · 17.7 Resetting factory default settings (reset) If you change the original values, the factory default values can be reset as follows: · Press the P button, then press the button (corresponding to the symbol flashing on the display) repeatedly until the menu arrow is on: RESET TO DEFAULT NO · · · · Press the button (corresponding to the SET symbol flashing on the display) and the appliance displays RESET TO DEFAULT YES; Press the OK button to reset the factory default values; Press the P button (corresponding to the ESC symbol flashing on the display) to exit programming mode or to change other parameters. The appliance is now reset to the factory default settings and the READY message is displayed. 17.8 Washing process This function can be used by technical service personnel only. 17.9 Beep ON/OFF (activates and deactivates the beep) · Press the P button, then press the button (corresponding to the repeatedly until the menu arrow is on: symbol flashing on the display) beep on · · · · Press the button (corresponding to the SET symbol flashing on the display) and the appliance will display " "; Press the OK button to turn the beep off; Press the P button (corresponding to the ESC symbol flashing on the display) to exit programming mode or to change other parameters. The appliance is now set not to emit any Beep and displays the message READY. 18 CHANGING THE LANGUAGE To change the language, press the OK button for at least 5 seconds until the appliance displays the installation message in various languages. Select the required language and press OK for 3 seconds (as described in paragraph 4.1).

Collection 35 19 MEANING OF MESSAGE DISPLAYED AND WHAT TO DO MESSAGE · MEANING The water tank is empty or is positioned · incorrectly. The tank is dirty or encrusted with lime · scale. The coffee runs off too slowly. · WHAT TO DO Fill the water tank as described in paragraph 4.2 and insert it fully. Rinse or descale the tank. FILL TANK · GROUND TOO FINE ADJUST MILL AND INSERT WATER SPOUT AND PRESS OK EMPTY GROUNDS CONTAINER INSERT GROUNDS CONTAINER ADD PRE-GROUND COFFEE FILL BEANS CONTAINER DESCALE · Turn the grinding regulator (fig. 11) one click towards the number 7 (see section 8). Insert the hot water spout, press the button and run off water from the spout for a few Empty the grounds container and clean as described in section 6, note 7, then replace. Open the service door and insert the grounds container. · The appliance cannot make coffee · The grounds container is full or missing. · After cleaning, the grounds container · has not been replaced. · With the function selected, the pre- · ground coffee has not been poured into the funnel. The coffee beans have run out. · If the coffee grinder is very noisy, this · means a small stone in the coffee beans has blocked the mill. This indicates the presence of lime scale · in the appliance. Add the ground coffee as described in paragraph 9. · Fill bean container Contact an authorised De' Longhi service centre. · The descaling procedure, described in paragraph 17.3, needs to be performed as soon as possible. Leave the service door closed and the infuser out of the appliance, then follow the instructions displayed. If the service door cannot be closed, check that the infuser is inserted correctly (paragraph 16.2 - note 1) Insert the hot water spout (fig. 4) · PRESS +SET · After cleaning, the infuser has probably · been left out of the coffee maker. CLOSE DOOR INSERT WATER SPOUT INSERT INFUSER ASSEMBLY The service door is open · · The button has been pressed and · the hot water spout has not been inserted. After cleaning, the infuser has probably · been left out of the coffee maker. The ground coffee funnel is clogged. · Too many coffee beans or too much ground coffee has been added. · Insert the infuser, see paragraph 16.2 · LESS COFFEE Empty the funnel with the help of a knife, as described in paragraph 9 note 5 (Fig.

16). Select a milder taste or reduce the quantity of ground coffee, then run off the coffee again. Clean the inside of the appliance thoroughly, as described in paragraph 16.2 If the message is still displayed after cleaning, contact a service centre. · The inside of the appliance is very dirty. · GENERIC ALARM 36 Collection 20 PROBLEMS TO BE RESOLVED BEFORE CALLING THE SERVICE CENTRE If the appliance is not working and an alarm light is on, the causes of the malfunction can be identified and resolved by referring to section 19. If, on the other hand, no alarm light is on, run the following checks before calling the service centre. PROBLEM The coffee is not hot CAUSE · The cups have not been preheated. SOLUTION · Heat the cups by rinsing them in hot water or leaving them to rest for at least 20 minutes on the cup warmer tray on the lid (see section 6, note 3). · Heat the infuser by pressing the button (fig. 12) before making the coffee (see section 6, note 3). · The infuser is too cold The coffee is not creamy enough · The coffee is ground too coarsely · Wrong type of coffee · Turn the grinding adjustment knob one click towards the number 1 (see section 8). @@The coffee runs out too quickly. The coffee does not come out of one of the spouts. @@When the button is pressed, the appliance does not come on. @@@@29). · The ground coffee may be blocked in · Remove the ground coffee inside the funnel using a knife the funnel. (see note 5, section 9). Then clean the infuser and the inside of the appliance (see description in paragraph 16.2) · The appliance is not plugged in. · Check that the power cable is plugged into the mains socket · The appliance is on. The infuser can · Turn the appliance off and remove the infuser (see paraonly be removed if the appliance is off graph 16.2). IMPORTANT: the infuser can only be removed if the appliance is off. Attempting to remove the infuser with the appliance on will risk causing damage. Pre-ground coffee is being used (not beans) and the appliance does not deliver coffee. · Too much ground coffee has been · Remove the infuser and thoroughly clean the inside of the added. appliance, as described in paragraph 16.2. Repeat the ope · The button has not been presration using a maximum of 1 measure of ground coffee.

sed and the appliance has used both · Thoroughly clean the inside of the appliance, as described the ground coffee added and the cofin paragraph 16.



[You're reading an excerpt. Click here to read official DELONGHI](http://yourpdfguides.com/dref/3394017)

[ESAM 6600 user guide](http://yourpdfguides.com/dref/3394017)

<http://yourpdfguides.com/dref/3394017>

2. Repeat the operation, first pressing the fee ground by the grinder. button as described in section 9. · Ground coffee has been added when · Remove the infuser and thoroughly clean the inside of the the appliance is off. appliance, as described in paragraph 16.2. Repeat the operation, but switch the appliance on first. Collection 37 **PROBLEM CAUSE SOLUTION** The coffee does not come out of the spouts, but rather around the service door. The milk does not run out of the milk spout.

· The holes in the spouts are clogged · Scrape the holes with a needle (see paragraph 16.1, Fig. 29). with dry coffee. · The mobile drawer inside the service · Thoroughly clean the mobile drawer, particularly near the door is blocked and cannot swing.

hinges to ensure they are free to swing smoothly. · The intake tube is not inserted or is · Insert the intake tube in the rubber washer in the milk container lid (fig. 19). · The milk container lid is dirty.

· Clean the milk lid as described in paragraph 16.3. The milk is not well frothed. The milk contains bubbles or squirts out of the milk spout. · The milk is not cold enough or is not · You are recommended to use skimmed or semi-skimmed skimmed or semi-skimmed. milk at refrigerator temperature (about 5°C). If you are still not getting the required results, try changing brand of milk. **ELECTRICAL CONNECTION (UK ONLY) A** If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below. **WARNING:** Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard.

With alternative plugs not incorporating a fuse, the circuit must be protected by a 15 Amp fuse. If the plug is a moulded-on type, the fuse cover must be re-fitted when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug. **WARNING - THIS APPLIANCE MUST BE EARTHED IMPORTANT** The wires in the mains lead are coloured in accordance with the following code: Green and yellow: Earth E Blue: Neutral L Brown: Live N As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The green and yellow wire must be connected to the terminal in the plug marked with the letter E or the earth symbol or coloured green or green and yellow. The blue wire must be connected to the terminal marked with the letter N or coloured black. The brown wire must be connected to the terminal marked with the letter L or coloured red. 38 Collection .



[You're reading an excerpt. Click here to read official DELONGHI ESAM 6600 user guide](http://yourpdfguides.com/dref/3394017)
<http://yourpdfguides.com/dref/3394017>