



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DELONGHI EW6507L. You'll find the answers to all your questions on the DELONGHI EW6507L in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DELONGHI EW6507L
User guide DELONGHI EW6507L
Operating instructions DELONGHI EW6507L
Instructions for use DELONGHI EW6507L
Instruction manual DELONGHI EW6507L



ELECTRIC OIL FILLED RADIATORS
INSTRUCTIONS FOR USE
SAVE THESE INSTRUCTIONS

LOS RADIADORES ELÉCTRICOS DE ACEITE
INSTRUCCIONES PARA EL USO
REPASE Y GUARDE ESTAS INSTRUCCIONES

LES RADIATEURS À BAIN D'HUILE
MODE D'EMPLOI
CONSERVEZ CE MODE D'EMPLOI

RADIATORI AD OLIO
ISTRUZIONI PER L'USO
CONSERVARE LE PRESENTI ISTRUZIONI

TYPE / MODELE / MODELO / MODELLO:
EW0507-EW0507W-2507L-EW6507L-9707T-TRH0715

Register this product on-line and receive a free trial issue of Cook's Illustrated. Visit www.prodregister.com/delonghi. Visit www.delonghi.com for a list of service centers near you. (U.S. Only)

Enregistrez ce produit en ligne et recevez un numéro gratuit de Cook's Illustrated. Visitez www.prodregister.com/delonghi. Visitez www.delonghi.com pour y voir une liste des centres de réparation proches de chez vous. (É.-U. uniquement)

Registre este producto en línea y reciba un ejemplar gratis de Cook's Illustrated. Visite www.prodregister.com/delonghi. Visite www.delonghi.com para ver la lista de centros de servicios cercanos a usted. (Solamente en los Estados Unidos)

Registra questo prodotto "on-line" per ricevere una copia omaggio della rivista. Visita www.prodregister.com/delonghi. Visita per una lista dei centri di servizio a te più vicini. (Solo negli Stati Uniti)



[You're reading an excerpt. Click here to read official DELONGHI EW6507L user guide](http://yourpdfguides.com/dref/3674811)
<http://yourpdfguides.com/dref/3674811>

Manual abstract:

When using electrical appliances, basic precautions should always be followed to reduce risk of fire, electric shock, and injury to persons, including the following: 1. Read all instructions before using this heater. 2. If your radiator is equipped with a polythene tape used as carry handle, remove it before connecting appliance to the outlet. 3. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handle when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0,9 m) from the front and top of the heater and keep them away from the sides and rear. 4.

Extreme caution is necessary when any heater is used by or near children and whenever the heater is left operating and unattended. 5. Always unplug heater when not in use. 6. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. If heater has leaked any oil, discontinue using the heater and contact the service center as indicated in the instruction leaflet. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container. Do not cover cord with throw rugs, runners, or the like.

@@ 11. @@@@ 14. @@Do not use on soft surfaces, like a bed, where openings may become blocked. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored. 16. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. 17. To prevent overload and blown fuses, be sure that no other appliance is plugged into the same outlet (receptacle) or into another outlet (receptacle) wired into the same circuit. A plug or cord which becomes hot to the touch or becomes distorted in shape may be a result of a worn electrical outlet.

Worn outlets or receptacles should be replaced prior to further use of the heater. Plugging heater into a worn outlet/receptacle/ may result in overheating of the power cord or fire. 19. Do not use an extension cord because it may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be No. 14 AWG minimum size and rated not less than 1875 watts, and has to be used only for supplying power to this heater. 20. Be sure that the plug is fully inserted into an appropriate outlet. Please remember that outlets also deteriorate due to aging and continuous use: check periodically if signs of overheating or deformations are evidenced by the plug. Do not use the outlet and CALL your electrician.

21. Check that neither the appliance nor the power cable have been damaged in any way during transportation. 22. Make sure that no pieces of polystyrene or other packaging material have been left between one element of the appliance and another. It may be necessary to pass over the appliance with a vacuum cleaner.

23. When switching on the appliance for the first time, allow it to run at full power for about two hours to get rid of the unpleasant smell. Make sure that the room in which the appliance is located is well ventilated during this operation. It is normal for the appliance to emit small cracking sounds when you turn it on for the first time. FITTING THE WHEELS Remove the feet and the wheels from the polystyrene packing.

Turn the radiator upsidedown on a rug or a soft surface in order to prevent damaging the paint finish. - Fit the wheels to the spindles on the feet and push firmly until they click into position. pull each wheel to check that it is correctly inserted. - The feet with the casters must be fitted with two arc-shaped brackets and fit them using the threaded bar and wing nut provided, only between the 1st and 2nd element and the second to last (see fig. MODELS WITH "EASY WHEEL"SYSTEM Turn the radiator upside-down on a rug or a soft surface in order to prevent damaging the paint finish. Turn the radiator back to its upright position. CAUTION Always operate the heater in upright position only (wheels on the bottom, controls on top). Any other position could create hazardous situation! WATTS ECONOMIZER For more economical use, the Min. or Med. Watt switches may be used individually, after unit has reached the operating temperature.

With pilot lights ON, the heater is ON! LOCATION Place heater on the floor beneath the coldest window in the room, or any other location. Your heater will reduce the effect of cold drafts. The heater should not be placed immediately below a power outlet. Do not use this radiator in rooms with a floor area of less than 43 square feet (4 sq. @@@@ (For timer instructions, see paragraph 5. @@ 4. @@@@ (When unplugged, the timer stops and must be later re-set. @@There is only one way it can be plugged into a power supply. This is a safety feature.

@@@@@@IMPORTANT: There are 96 tabs around the dial. @@@@ if a tab is in the outward position, the heater will be off during that period. Please note that when you first use your heater all the tabs are out. You must push in the tabs that correspond to the period when you want the heater to be on. (If you want to bypass the timer you must push all 96 tabs inward.

) Timer operation A) Plug in the heater. B) Turn timer dial clockwise to set clock with the current time of day (see CLOCK SETTING). c) Push tabs inwards for the period you want the heater to operate. For example, in the shown illustration, the heater will operate from 14. E) Once you have set the tabs for the desired heating periods, your heater will cycle on and off according to these settings.

F) As long as you keep the heater plugged in, the timer will maintain the proper time. A safety device A safety device switches the heater off in the event of overheating. MAINTENANCE AND SERVICE Always unplug the heater from the power outlet and allow the radiator to cool. Wipe radiator with a soft damp cloth; do not use detergents and abrasives. Should the radiator not be in use over a certain length of time, roll the cable around the holder and store it in a dry place (see fig. on front page). This appliance has been built to last for many years of trouble-free service. In case of malfunction or doubt, do not try to repair the heater by yourself: this might increase the risk of fire and electric shock. We warrant each appliance to be free from defects in material and workmanship. Our obligation under this warranty is limited to repair at our factory or authorized service center of any defective parts or part thereof, other than parts damaged in transit.

In the event of a products replacement or return, the unit must be returned transportation prepaid. The repaired or new model will be returned at the company expense. This warranty shall apply only if the appliance is used in accordance with the factory directions, which accompany it, and on an Alternating current (AC) circuit.



[You're reading an excerpt. Click here to read official DELONGHI EW6507L user guide](http://yourpdfguides.com/dref/3674811)
<http://yourpdfguides.com/dref/3674811>

How long does the coverage last? This warranty runs for one year (1) from the purchase date found on your receipt and applies only to the original purchaser for use. What is not covered by the warranty? The warranty does not cover defects or damage of the appliance, which result from repairs or alterations to the appliance outside our factory or authorized service centers, nor shall it apply to any appliance, which has been subject to abuse, misuse, negligence or accidents. Also, consequential and incidental damage resulting from the use of this product or arising out of any breach of contract or breach of this warranty are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damage, so the above limitation may not apply to you. How do you get service? Residents: Please contact our toll free hotline at 1-800-322-3848 or log onto our website at www. For all accessories, spare parts or replacement parts, please contact our parts division at 1-800865-6330. @@@@Some states do not allow limitations on how long an implied warranty lasts, so the above exclusions may not apply to you.

De'Longhi does not authorize any other person or company to assume for it any liability in connection with the sale or use of its appliance. How does state law apply? This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. No lo use en zonas donde se use o almacene gasolina, pintura o líquidos inflamables. Sounds are normal during the heater's first operation. The appliance is located is well ventilated during this operation.

It is normal for the appliance to emit small cracking sounds when you turn it on for the first time. .



[You're reading an excerpt. Click here to read official DELONGHI EW6507L user guide](http://yourpdfguides.com/dref/3674811)
<http://yourpdfguides.com/dref/3674811>