




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DELONGHI HWB5050T. You'll find the answers to all your questions on the DELONGHI HWB5050T in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DELONGHI HWB5050T
User guide DELONGHI HWB5050T
Operating instructions DELONGHI HWB5050T
Instructions for use DELONGHI HWB5050T
Instruction manual DELONGHI HWB5050T

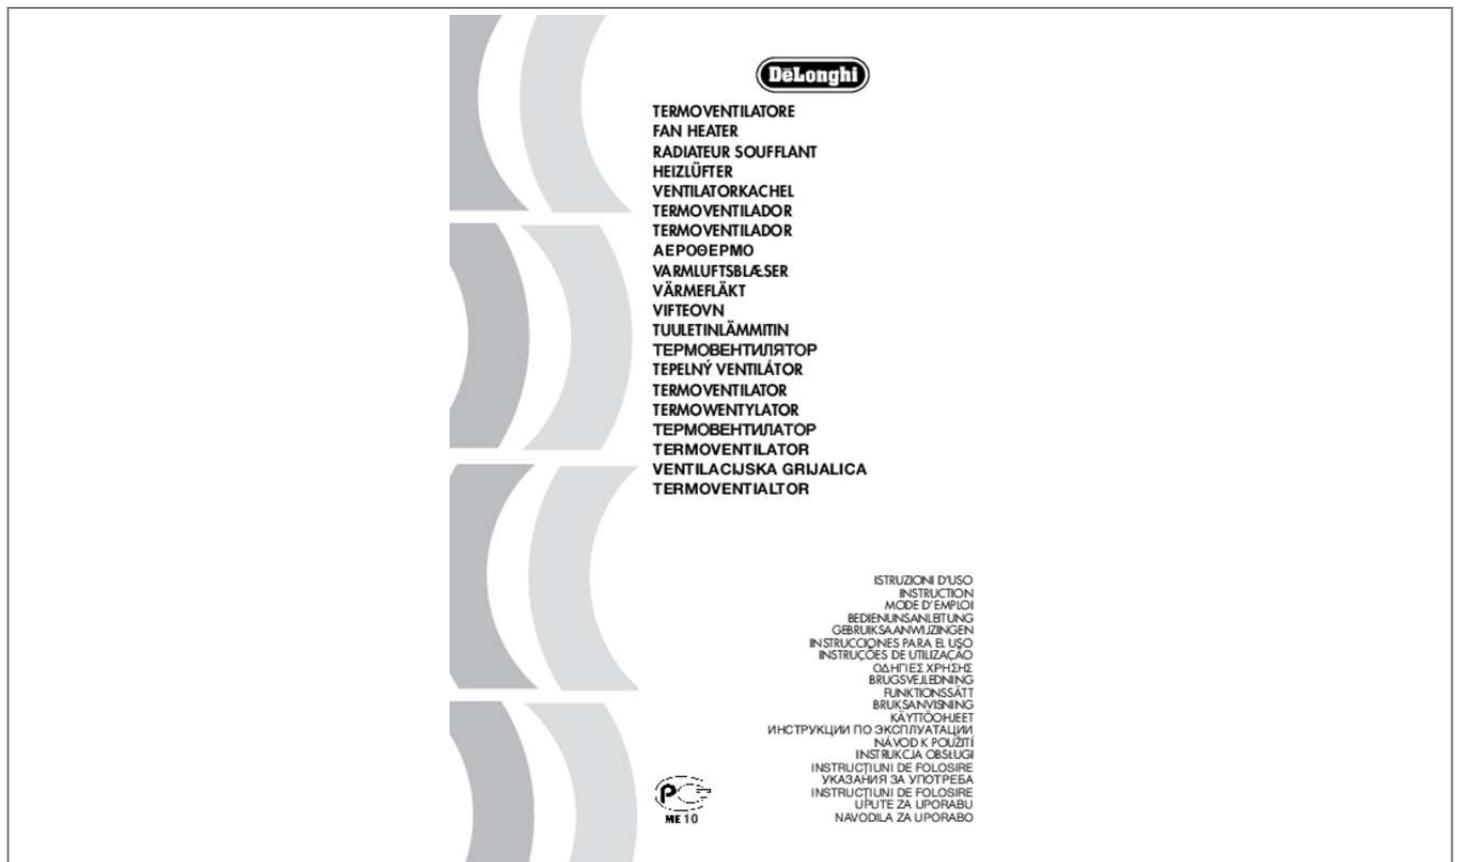

[You're reading an excerpt. Click here to read official DELONGHI HWB5050T user guide](http://yourpdfguides.com/dref/5473231)
<http://yourpdfguides.com/dref/5473231>

Manual abstract:

If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below. **WARNING:** Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard. With alternative plugs not incorporating a fuse, the circuit must be re-fitted when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug. If your appliance is not fitted with a plug, please follow the instructions provided below: **B) IMPORTANT** The wires in the mains lead are coloured in accordance with the following code: Blue: Neutral Brown: Live As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red. **7 GB ELECTRICAL CONNECTION** - Before plugging into the mains, make sure the voltage of your mains supply corresponds to the V value indicated on the appliance and that the socket and power line are appropriate for the load required. **INSTALLATION** The appliance must always be used in the vertical. Models with towel dryer rail (Model A) These models can only be used fixed to the wall.

@@ 6. @@ Remove the bracket on the back panel by pulling downwards. 2. Choose where you want to install the appliance, making sure that: a. The plug and socket are easy to reach after installation.

b. Neither power cables or tubes can be damaged. c. @@ Note the minimum distances specified in figure 6. 3.

Before drilling the wall, mark the exact points as shown in fig. For brick walls, use a 6 mm concrete bit. Drill the holes and insert the anchors supplied. (For plasterboard or false walls, you should locate the wooden uprights and use 6 mm wood screws directly into the wood or use specific anchors. For any other type of wall, seek the advice of a specialist). 5. Fix the bracket with the two screws provided (fig. 2). Attach the appliance to the top and bottom hooks of the bracket, then push it gently downwards. 2.

Models with pedestal (Model B) Models with pedestal (H) can be used either as portable appliances with the pedestal attached or wall-mounted without the pedestal. To remove the pedestal (H), press the two tabs on the back of the base and at the same time push the heater forwards and lift the appliance up. The two tabs are identified with the word "PUSH" (fig. 4/5). If you wish to wall-mount the appliance, follow the description for models with towel dryer rail.

OPERATION AND USE 1. Make sure the appliance is off before plugging into the mains 2. Turn the appliance on by placing the thermostat (E) in the maximum position and the function selector (C) in one of the following positions: /1/2. - Summer mode (fan only): turn the function selector (C) to the position. - Min power operation: turn the function selector (C) to position 1.

The red light comes on. - Max power operation: turn the function selector (C) to the "2" position. - To turn the appliance off: turn the function selector to the "□" position. Adjusting the thermostat (E) When the room has reached the required temperature, turn the thermostat slowly anticlockwise until the light goes out and no further. The thermostat will automatically maintain the temperature set and keep it constant.

Frost prevention mode With the thermostat dial at minimum and the function selector on "2", the appliance maintains room temperature at about 5°C, preventing freezing with minimal energy consumption. @@ if it is 10. @@@@ Each tooth corresponds to a period of 15 min. @@@@ Lift the rail (F) up slowly until you hear a click. @@ Now you can hang towels or underwear on the rail to dry.

@@ 1). @@ **MAINTENANCE** - Always unplug from the mains socket before cleaning. @@ If installed in the bathroom, respect the distances shown in fig. 6.

@@@@ - The use of extension leads is not recommended. @@@@ - If the power cable is damaged, it must be replaced by the manufacturer, an authorised service centre or a qualified electrician in order to eliminate all risk. The heater is fitted with a safety device which switches it off in the event of accidental overheating (eg. Obstruction of air intake and outlet grilles, motor turning slowly or not at all). To reset, unplug the appliance from the mains socket for a few minutes, remove the cause of overheating then plug in again. Important: never overload the towel dryer rail as it could be hazardous.

Important: never under any circumstances cover the appliance during operation as this would lead to dangerous overheating of the appliance itself.

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC. At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. @@@@ Vänd dig till en elektriker för att få dessa anslutna till elnätet. Den kan överlämnas till lokala myndigheters avfallssorteringscentraler eller till en återförsäljare som ger denna service. Sett för veggmontering omfattar: 1 konsoll 2 skruer 2 expansionspluggar (0,6 x 30) Gjør som følger for installeringen: 1. For å slå av apparatet helt, må du, i tillegg til å slå av bryterne, også ta ut støpselet av stikkontakten, for å unngå at programmereren går til ingen nytte. - Ikke dekk til apparatet når det er i bruk, for å unngå fare for brann.



[You're reading an excerpt. Click here to read official DELONGHI](http://yourpdfguides.com/dref/5473231)

[HWB5050T user guide](http://yourpdfguides.com/dref/5473231)

<http://yourpdfguides.com/dref/5473231>