



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DELONGHI PAC A110. You'll find the answers to all your questions on the DELONGHI PAC A110 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DELONGHI PAC A110
User guide DELONGHI PAC A110
Operating instructions DELONGHI PAC A110
Instructions for use DELONGHI PAC A110
Instruction manual DELONGHI PAC A110

Important safeguards

EN

- Use the appliance as described in this instruction manual only. As with all electrical equipment, whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be used when operating and installing the appliance.
- This appliance is designed for home air conditioning and must not be used for other purposes.
- It is dangerous to modify or alter the characteristics of the appliance in any way.
- The appliance must be installed in conformity with national legislation regulating electrical equipment and installations.
- If the appliance requires repair, contact the manufacturer's Customer Services only. Repairs carried out by unauthorised personnel may be dangerous.
- This appliance must be used exclusively by adults.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children must be supervised to ensure they do not play with the appliance.
- The appliance must be connected to an efficient earth system. Have your electricity installation checked by a qualified electrician.
- Do not use extension cables.
- Before cleaning or maintenance, always unplug the appliance from the mains socket.
- Never unplug the appliance by pulling on the power cable.
- Do not install the appliance in rooms containing gas, oil or sulphur. Do not install near sources of heat.
- Keep the appliance at least 50 cm away from flammable substances (alcohol etc) or pressurised containers (e.g. aerosol cans).
- Do not rest heavy or hot objects on top of the appliance.
- Clean the air filter at least once a week.
- Avoid using heating appliances near the air conditioner.
- The appliance must always remain upright or laid on one side during transportation. Before moving the appliance, empty the internal circuit completely of water. After moving the appliance, wait at least 1 hour before starting it.
- When putting the appliance away, do not cover with plastic bags.
- The materials used for packaging can be recycled. You are therefore recommended to dispose of them in special differentiated waste collection containers.
- At the end of its working life, consign the appliance to a specialist collection centre.
- If the power cable is damaged, it must be replaced by the manufacturer or the manufacturer's Customer Services in order to avoid all risk.

SPECIFIC WARNINGS FOR APPLIANCES WITH R410A* REFRIGERANT GAS

R410A refrigerant gas conforms to EC regulations on the environment. Avoid perforating the refrigerant circuit of the appliance.

ENVIRONMENTAL INFORMATION: This unit contains fluorinated greenhouse gases covered by the Kyoto Protocol. Maintenance and disposal must be carried out by qualified personnel only (R410A, GWP=1975).

* Verify the type of refrigerant gas used in your appliance on the rating plate.

17



[You're reading an excerpt. Click here to read official DELONGHI PAC A110 user guide](#)

<http://yourpdfguides.com/dref/3673273>

Manual abstract:

As with all electrical equipment, whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be used when operating and installing the appliance. · This appliance is designed for home air conditioning and must not be used for other purposes. · It is dangerous to modify or alter the characteristics of the appliance in any way. · The appliance must be installed in conformity with national legislation regulating electrical equipment and installations. @@Repairs carried out by unauthorised personnel may be dangerous. · This appliance must be used exclusively by adults. @@Children must be supervised to ensure they do not play with the appliance. · The appliance must be connected to an efficient earth system. Have your electricity installation checked by a qualified electrician. · Do not use extension cables.

@@ · Never unplug the appliance by pulling on the power cable. @@Do not install near sources of heat. @@aerosol cans). · Do not rest heavy or hot objects on top of the appliance. · Clean the air filter at least once a week.

· Avoid using heating appliances near the air conditioner. · The appliance must always remain upright or laid on one side during transportation. Before moving the appliance, empty the internal circuit completely of water. After moving the appliance, wait at least 1 hour before starting it. · When putting the appliance away, do not cover with plastic bags.

· The materials used for packaging can be recycled. You are therefore recommended to dispose of them in special differentiated waste collection containers. · At the end of its working life, consign the appliance to a specialist collection centre. @@@@Avoid perforating the refrigerant circuit of the appliance.

@@@@@@@@@The power cable must be replaced by a qualified professional only. The instructions below will enable you to prepare your air conditioner for operation as efficiently as possible. Before use, make sure the air intake and outlet grilles are unobstructed. AIR CONDITIONING WITHOUT INSTALLATION Just a few simple steps and your air conditioner will ensure your comfort: · Screw one of the hose adapters 13 to one end of the air exhaust hose. 12 · Fit the other adapter 13 to the air exhaust hose housing 7 at the back of the appliance (see fig.

A). · Screw the end of the hose without adapter to the adapter previously mounted on the appliance (see fig. A). Vertically sliding window · Fit the bar grille 15 to the bar 17 and fix with the four screws provided 18 (fig. B). B · Open the window. · Place the bar 17 in the window and extend it for the width of the window (fig. C). · Once the bar has been extended, fix it by screwing up the remaining two screws supplied. · Lower the window (fig.

@@G 19 as · Place the air conditioner near the window. @@E). Make sure the air exhaust hose is not blocked. @@@@H). · Fit the flange accessory provided 11 in the hole.

@@A). @@@@134 mm) in an outside wall or through a window pane. Respect the height and sizes of the hole as shown in fig. I. as shown in fig. @@@@@Press the button (A). @@Room temperature will be displayed and fan speed will be at minimum. @@@@@Room temperature is displayed. · Select the target temperature by pressing the button (F) or button (C) until the required value is displayed. During selection, the temperature flashes. After 10 seconds, room temperature is displayed again. · Select the required fan speed by pressing the button. There are 3 speeds available: High speed: to achieve the target temperature as rapidly as possible Medium speed: reduces noise levels but still maintains a good level of comfort Low speed: for silent operation °C °C The most suitable temperature for the room during the summer varies from 24 to 27°C. You are recommended, however, not to set a temperature much below the outdoor temperature. 22 Operation EN DEHUMIDIFYING MODE Ideal to reduce room humidity (spring and autumn, damp rooms, rainy periods, etc).

For this mode, the appliance should be prepared in the same way as for air conditioning, with the air exhaust hose attached to enable the moisture to be discharged outside. To set this function correctly: · Press the MODE button a number of times until the dehumidifying symbol appears. °C NOTE: In this mode, with room temperature above 25 degree C, the fan speed is adjustable. @@@@ · Select the required fan speed by pressing the button. @@This avoids wasting electricity by optimising operating periods. @@It will be in STANDBY. · Press the timer button (D). The timer symbol Q comes on. @@They increase or decrease the time in steps of an hour. The appliance can be set to come on within the next 24 hours.

@@@@@To cancel the timer programme, press the timer button (D) again. Pressing the ON/OFF button (A) cancels the timer programme and the air conditioner comes on immediately in the selected mode. How to programme delay OFF · Delay OFF can be programmed in any operating mode - air conditioning/fan/dehumidifying. · Press the timer button (D). The timer on symbol Q comes on.

· Use the (F) or (C) buttons to set the number of hours delay before the appliance goes off. They increase or decrease the time in steps of an hour. The appliance can be set to go off within the next 24 hours. Five seconds after the timer has been set, the operating mode is displayed and the timer symbol remains on. At the set time, the air conditioner goes off and remains in standby.

To cancel the timer programme, press the timer button (D) again. The timer symbol goes off. °C 24 Using the remote control unit EN MODELS WITH REMOTE CONTROL · Point the remote control at the receiver on the air conditioner. The remote control must be no more than 5 metres away from the appliance (without obstacles between the remote control and the receiver). @@@@@IF THE APPLIANCE DISPLAYS... @@@@The appliance should be disposed of by a specialist centre authorised by the manufacturer only. Important information for correct disposal of the product in accordance with EC Directive 2002/96/EC. At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin. 29 .



[You're reading an excerpt. Click here to read official DELONGHI](#)

[PAC A110 user guide](#)

<http://yourpdfguides.com/dref/3673273>