



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DELONGHI PMR 2005.CC. You'll find the answers to all your questions on the DELONGHI PMR 2005.CC in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DELONGHI PMR 2005.CC  
User guide DELONGHI PMR 2005.CC  
Operating instructions DELONGHI PMR 2005.CC  
Instructions for use DELONGHI PMR 2005.CC  
Instruction manual DELONGHI PMR 2005.CC

Read this manual thoroughly before installing and using the appliance.

This is the only way to ensure best results and maximum safety for the user.

#### DESCRIPTION

(see figure on page 3).  
The terminology below will be used repeatedly on the following pages.

- 1 Filter holder for ground coffee
- 2 Large filter for 2 cups coffee
- 3 Small filter for 1 cup coffee
- 4 Steam knob
- 5 Presser
- 6 Cup tray
- 7 Power cable
- 8 Temperature OK light (coffee/hot water or steam)
- 9 light (appliance on)
- 10 Function selector knob
- 11 position to run off coffee/hot water
- 12 Off position
- 13 Steam position
- 14 Coffee measure
- 15 Boiler outlet
- 16 Steam/hot water tube
- 17 Cappuccino maker
- 18 Water tank
- 19 Water tank lid

#### SAFETY WARNINGS

- This appliance is designed to "make espresso coffee" and "heat drinks". Use with care to avoid scalds from the water and steam jets or through incorrect use.
- Never touch hot parts.
- After removing the packaging, make sure the product is complete. If in doubt, do not use the appliance and contact a professionally qualified person.
- The packing elements (plastic bags, polystyrene foam, etc.) should be kept out of the reach of children as they are a safety hazard.
- This appliance is intended for domestic use only. Any other use is considered improper and thus dangerous.
- The manufacturer cannot be held responsible for any damage caused through incorrect, wrong or unreasonable use.
- Never touch the appliance with wet or damp hands or feet.
- Never let children or unfit persons use the appliance without supervision.
- Never allow children to play with the appliance.
- In the event of malfunction or faulty operation, switch

off and do not attempt to repair.

GB

- If it requires repair, contact an authorised service centre only and ask for original spare parts to be used.
- Failure to respect the above could reduce the safety of the appliance.
- The power cable for this appliance must not be replaced by the user as this operation requires the use of special tools.
- If the cable is damaged or requires replacing, contact an authorised service centre only to avoid all risks.

#### INSTALLATION

- Place the appliance on a work surface away from taps and sinks.
  - Check that the voltage of the mains power supply corresponds to the value indicated on the appliance rating plate.
  - Connect the appliance to an efficiently earthed socket with a minimum current rating of 10 A only.
  - The manufacturer may not be considered liable for possible incidents caused by the failure to adequately earth the mains.
  - Never install the appliance in environments where the temperature may reach 0°C or lower (the appliance may be damaged if the water freezes).
  - The power cable can be positioned to the right or left according to the location of the nearest socket, resting it in the guides on the bottom of the appliance (fig. 1).
- When the power cable is in the required position, make sure it is correctly held in place by the clips on the bottom of the appliance (fig. 1).



[You're reading an excerpt. Click here to read official DELONGHI PMR 2005.CC user guide](http://yourpdfguides.com/dref/3394310)  
<http://yourpdfguides.com/dref/3394310>

**Manual abstract:**

This is the only way to ensure best results and maximum safety for the user. · DESCRIPTION (see figure on page 3). The terminology below will be used repeatedly on the following pages. 1 Filter holder for ground coffee 2 Large filter for 2 cups coffee 3 Small filter for 1 cup coffee 4 Steam knob 5 Presser 6 Cup tray 7 Power cable 8 Temperature OK light (coffee/hot water or steam) 9 light (appliance on) 10 Function selector knob 11 position to run off coffee/hot water 12 Off position 13 Steam position 14 Coffee measure 15 Boiler outlet 16 Steam/hot water tube 17 Cappuccino maker 18 Water tank 19 Water tank lid · · off and do not attempt to repair. If it requires repair, contact an authorised service centre only and ask for original spare parts to be used. Failure to respect the above could reduce the safety of the appliance. The power cable for this appliance must not be replaced by the user as this operation requires the use of special tools. If the cable is damaged or requires replacing, contact an authorised service centre only to avoid all risks. GB INSTALLATION · Place the appliance on a work surface away from taps and sinks. · Check that the voltage of the mains power supply corresponds to the value indicated on the appliance rating plate.

· Connect the appliance to an efficiently earthed socket with a minimum current rating of 10 A only. · The manufacturer may not be considered liable for possible incidents caused by the failure to adequately earth the mains. @@@@1). @@@@Use with care to avoid scalds from the water and steam jets or through incorrect use. · Never touch hot parts.

· After removing the packaging, make sure the product is complete. If in doubt, do not use the appliance and contact a professionally qualified person. · The packing elements (plastic bags, polystyrene foam, etc.) should be kept out of the reach of children as they are a safety hazard. · This appliance is intended for domestic use only.

Any other use is considered improper and thus dangerous. · The manufacturer cannot be held responsible for any damage caused through incorrect, wrong or unreasonable use. · Never touch the appliance with wet or damp hands or feet. · Never let children or unfit persons use the appliance without supervision. · Never allow children to play with the appliance. · In the event of malfunction or faulty operation, switch 11 HOW TO MAKE ESPRESSO COFFEE FILLING THE WATER TANK Remove the water tank lid (fig. 2) and then take out the tank by pulling upwards (fig. 3). Fill the tank with fresh clean water taking care not to exceed the MAX level (fig. 4).

Replace the tank, pressing lightly to open the valve located on the bottom of the tank. More simply, the tank can also be filled without removing it, pouring the water directly from a jug. IMPORTANT: It is normal for there to be water in the space under the tank. This should therefore be dried regularly with a clean sponge. NB: Never use the appliance without water in the tank and always remember to top up when the level drops to a couple of centimetres from the bottom. PREHEATING THE COFFEE UNIT To obtain espresso coffee at the right temperature, the coffee machine must be preheated. Turn the selector knob to the position (fig. 5) at least 15 to 30 minutes before making the coffee, making sure the filter holder is attached to the appliance (check that the steam knob is closed). To attach the filter holder, position it under the boiler outlet with the handle towards the left (see fig. 6), push it upwards and at the same time rotate the handle towards the right.

Rotate firmly. Wait for half an hour, then make the coffee as described in the following chapter. Alternatively, preheating can be achieved more rapidly proceeding as follows: 1. Turn the appliance on by rotating the selector knob to the position (fig. 5) and attach the filter holder to the appliance without adding ground coffee.

2. Place a cup under the filter holder. Use the same cup as will be used to prepare the coffee in order to preheat it. 3. Wait for the OK indicator light to come on (fig.

7), then immediately rotate the selector knob to the position (fig. 8), run the water off until the OK indicator light goes out, then interrupt delivery by rotating the selector knob to the position (fig. 5). 4. Empty the cup. Wait until the OK indicator light comes on again then repeat the same operation. HOW TO PREPARE ESPRESSO COFFEE USING THE FILTER HOLDER FOR GROUND COFFEE 1. After carrying out the preheating of the machine as described in the preceding section, in order to make just one cup of espresso coffee, insert the 1-cup filter (the smaller of the two provided) into the filter holder (Fig. 9) and fill it with one level measuring spoon of 12 ground coffee about 7 grams. @@@@11).

@@@@@@@ Rotate firmly (fig. 6) to avoid leaks of water. @@@12). 5. Make sure the OK light (fig. @@@8) until the required quantity is obtained. To interrupt, place the selector back in the position (fig. 5). 6. To remove the filter holder, rotate the handle from right to left.

@@@@@13). @@@14). @@@@@@9. 3. Insert a pod, centring it as far as possible on the filter (fig.

@@@@4. Attach the filter holder to the appliance. Always rotate as far as it will go (fig. 6). @@@2.

Rotate the selector knob to the position (fig. 16) and wait until the OK light comes on (fig. 7). @@@@The milk must be at refrigerator temperature (not hot!). @@@@17). 5. Immerse the cappuccino maker in the milk for about 5 mm and rotate the steam knob anticlockwise (fig. 18) (rotating the knob more or less varies the quantity of steam discharged by the cappuccino maker). The milk now starts to increase in volume and take on a creamy appearance. 6.

When the milk has doubled in volume, immerse the cappuccino maker deeply and continue heating the milk (fig. 19). When the required temperature is reached (the ideal is 60°C), interrupt steam delivery by rotating the steam knob clockwise and placing the selector in the "O" position (fig. 14). 7. Pour the frothed milk into the cups containing the espresso coffee prepared previously. The cappuccino is ready. Sweeten to taste and if desired, sprinkle the froth with a little cocoa powder. NB: to make coffee again after the milk has been frothed, cool down the boiler first or the coffee will be burnt. To cool, place a container under the boiler outlet, turn the selector to the position and run off the water until the OK light goes out.

Turn the selector back to the position and make the coffee as described above. IMPORTANT: always clean the cappuccino maker after use. Proceed as follows: 1. Discharge a little steam for a few seconds by rotating the steam knob (fig. 18).

2. Wait several minutes for the steam tube to cool down. Unscrew the cappuccino maker by rotating clockwise (fig. 20) and wash thoroughly with warm water.

3.

Make sure the three holes in the cappuccino maker shown in fig. 21 are not blocked. If necessary, clean with a pin.



[You're reading an excerpt. Click here to read official DELONGHI PMR 2005.CC user guide](http://yourpdfguides.com/dref/3394310)  
<http://yourpdfguides.com/dref/3394310>

4. Clean the steam tube, taking care to avoid burns. 5. Screw the cappuccino maker back in place. **HOT WATER PRODUCTION I.** Turn the appliance on by rotating the selector knob to the position (fig. 5).

2. Place a recipient under the cappuccino maker. 3. When the OK indicator light comes on, turn the selector knob to the position (fig. 8) and at the same time, rotate the steam knob anticlockwise (fig. 18). Hot water is delivered from the cappuccino maker. 4. To interrupt delivery of hot water, rotate the steam knob clockwise and position the selector knob to "O" (fig. 14).

**CLEANING AND MAINTENANCE OF THE FILTER** About every 300 coffees or when the coffee drips out of the filter holder or not at all, clean the ground coffee filter holder as follows: · Remove the filter from the filter holder. · Remove the filter cap (fig. 22) by unscrewing in the direction indicated by the arrow on the cap. · Remove the frother from the container by pushing it from the cap end. · Remove the gasket (fig.

25). · Rinse all components and clean the metal filter thoroughly in hot water using a brush (fig. 23). Make sure the holes in the metal filter are not blocked. If necessary, clean with a pin (see fig.

24). 13 · Replace the filter and gasket on the plastic disk as shown in fig. 25. Make sure to insert the pin on the plastic disk into the hole in the gasket indicated by the arrow in fig. 25. · Replace the resulting assembly in the steel filter container (fig. 26), making sure the pin is inserted into the hole in the support (see arrow in fig. 26). · Finally, screw on the cap (fig. 27).

Failure to clean as described above invalidates the guarantee. 8. Rotate the selector knob to the position (fig. 8) and run off the water until the tank is completely empty; 9 Rotate the selector knob to the position (fig. 5) and repeat operations 7 and 8 again. @@@@28). · Clean the outlet". @@ · Use ground coffee for espresso coffee machines only. @@ · Change the type of ground coffee. The coffee froth is too dark (delivered from the spout too slowly) · The ground coffee is pressed down too firmly.

· There is too much ground coffee. · The espresso boiler outlet is blocked. · The filter is blocked · The ground coffee is too fine. · The ground coffee is too fine or is damp. · Incorrect type of ground coffee.

No milk froth is formed when making cappuccino · Milk not cold enough. · Cappuccino maker dirty. · Always use semi-skimmed milk at refrigerator temperature. · Thoroughly clean the holes in the cappuccino maker in particular those indicated in figure 24. 15 .



[You're reading an excerpt. Click here to read official DELONGHI  
PMR 2005.CC user guide  
http://yourpdfguides.com/dref/3394310](http://yourpdfguides.com/dref/3394310)