



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DELONGHI XE 1274. You'll find the answers to all your questions on the DELONGHI XE 1274 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual DELONGHI XE 1274**  
**User guide DELONGHI XE 1274**  
**Operating instructions DELONGHI XE 1274**  
**Instructions for use DELONGHI XE 1274**  
**Instruction manual DELONGHI XE 1274**

G8

#### WARNINGS

- Read these instructions carefully.
- Before use, check that the main voltage corresponds to the voltage indicated on the rating plate under the handle of the appliance.
- Connect the appliance to an efficiently earthed socket with a minimum current rating of 10 A only. Double insulated appliances (see symbol  on rating plate) do not require earthing.
- When not in use or before cleaning or maintenance, always unplug the appliance from the mains socket.
- DO NOT wash the appliance with trichloroethylene or other solvents.
- DO NOT unplug the appliance by pulling the power cable or the appliance itself.
- DO NOT leave the appliance turned on when unattended. Keep away from children and unfit persons.
- DO NOT run the appliance over the power cable to avoid damaging the cable insulation.
- DO NOT vacuum up inflammable or corrosive liquids.
- DO NOT vacuum up matches, ash or cigarette ends when still lit.
- DO NOT use the appliance if it appears to be faulty. Do not use if the power cable or plug is damaged.
- Avoid closing the door on the cable or rubbing it over sharp edges. Keep away from hot surfaces.
- Protect the appliance from atmospheric agents (rain, frost, sun, etc.).
- Avoid vacuuming up hard or sharp objects as they could damage the dust bag or the appliance itself. Never use the appliance to vacuum up nails, pins, screws or metal objects.
- Before starting the appliance, make sure the filters are in position.
- The appliance is designed for domestic use only according to the instructions in this manual and only with the tools provided. The manufacturer declines all liability for damage deriving from improper use of the appliance.
- For all repairs and for replacement of the power cable if damaged contact your dealer or an authorised service centre to maintain the efficiency of your appliance and the validity of the guarantee. For the same reasons, you are always recommended to use original spare parts.
- Bear in mind that a considerable quantity of air is given off from the air outlet grill during use. This could be unpleasant if directed at people, particularly the face.

The manufacturer reserves the right to modify appliances and tools without warning. Original spare parts and tools should be used to maintain the efficiency of your appliance. Failure to do so invalidates the guarantee.

10



[You're reading an excerpt. Click here to read official DELONGHI XE 1274 user guide](http://yourpdfguides.com/dref/3393447)

<http://yourpdfguides.com/dref/3393447>

**Manual abstract:**

· Before use, check that the mains voltage corresponds to the voltage indicated on the rating plate under the handle of the appliance. · Connect the appliance to an efficiently earthed socket with a minimum current rating of 10 A only. Double insulated appliances (see symbol on rating plate) do not require earthing. · When not in use or before cleaning or maintenance, always unplug the appliance from the mains socket. · DO NOT wash the appliance with triethylene or other solvents. · DO NOT unplug the appliance by pulling the power cable or the appliance itself. · DO NOT leave the appliance turned on when unattended. Keep away from children and unfit persons. · DO NOT run the appliance over the power cable to avoid damaging the cable insulation. · DO NOT vacuum up inflammable or corrosive liquids.

· DO NOT vacuum up matches, ash or cigarette ends when still lit. · DO NOT use the appliance if it appears to be faulty. Do not use if the power cable or plug is damaged. · Avoid closing the door on the cable or rubbing it over sharp edges. Keep away from hot surfaces.

· Protect the appliance from atmospheric agents (rain, frost, sun, etc). @@@@The manufacturer declines all liability for damage deriving from improper use of the appliance. · For all repairs and for replacement of the power cable if damaged contact your dealer or an authorised service centre to maintain the efficiency of your appliance and the validity of the guarantee. For the same reasons, you are always recommended to use original spare parts. · Bear in mind that a considerable quantity of air is given off from the air outlet grill during use.

This could be unpleasant if directed at people, particularly the face. The manufacturer reserves the right to modify appliances and tools without warning. Original spare parts and tools should be used to maintain the efficiency of your appliance. Failure to do so invalidates the guarantee. 10 DESCRIPTION (SEE PAGE 3) 1) ON/OFF vacuum switch 2) Pump switch (for extraction washing) 3) Air outlet grill with microfilter 4) Handle 5) Motor head 6) Suction port + suction hose coupling 7) Detergent tube connection 8) Motor housing 9) Motor protection polyurethane filter 10) Diffuser cone 11) Suction conveyor 12) Bottom plate 13) Motor head clips 14) Tank 15) Liquid collection drum/unit with tool trolley 16) Castors 17) Telescopic tube or extension tubes (depending on model) 18) Hose 19) Handgrip with mechanical power regulator and detergent lever 20) Detergent tube 21) Detergent bottle 22) Crevice tool 23) Multipurpose nozzle 24) Two position carpet/floor brush (certain models only) 25) Large triangular brush 26) Rubber insert 27) Small triangular brush (certain models only) ASSEMBLY AND PREPARATIONS FOR USE Important: during assembly and preparation for use, make sure the appliance is UNPLUGGED from the mains. · Release the cover by pulling the clips outwards (fig.1). · Remove the diffuser cone, suction conveyor and, finally, the bottom plate (fig. 2). · Turn the appliance upside down and fix the four castors in place by pushing them into the holes in the bottom of the drum (fig. 3). · Make sure the polyurethane filter is in place on the motor housing (fig 4). · Insert the bottom plate 12, fixing it to the drum as shown in fig. 5. Insert the diffuser cone 10 and suction conveyor 11 (fig. 6). Dry vacuuming · To use the appliance as a dry vacuum cleaner, pour about two litres of water into the drum. The water should never reach above the bottom plate (12). The water filters the dust, preventing it from being dispersed in the atmosphere. · Fasten the head back on the drum.

· Attach the hose to the suction port (fig. 7). To remove, press the locking fins and pull (fig. 8). · Fit one end of the telescopic tube to the handgrip and the other to the most suitable tool for the operation to be performed.

· Plug the appliance into the mains socket and turn on by pressing the ON/OFF switch on the head. 11 Tools for dry vacuuming Telescopic tube (fig. 9) To elongate the tube to the required length, rotate the swivel joint in the direction shown by the symbol and pull out the tube. To fix the tube at the required length, rotate the swivel joint to the position. Multipurpose brush (fig. 10) Efficiently removes dust from floors (marble or tiled), rugs or carpets. When the pedal is pushed towards the "hard floors" symbol ( ), the bristles protrude to clean hard floors more efficiently. @@@@Crevice tool (fig. 11) Can be used to collect crumbs, dust and small debris. Perfect for hard-to-reach corners. Multipurpose nozzle (fig. 12) Use to clean sofas, upholstery, car interiors, curtains, etc. @@@@Fit directly onto the handgrip. Connect the delivery tube to the hose handgrip. @@@@The tank holds about 3 litres.

@@@14). @@@@15) and attach the clips to the telescopic tube (fig. 16). Large triangular nozzle (25) For washing floors (or rugs/carpets). Rubber insert for vacuuming hard floors (26) To use the large transparent nozzle on hard floors, fit the special insert (26). Slide it carefully onto the guides on the nozzle, making sure it does not come detached during use (fig. 17). Small triangular nozzle (27) Designed for extraction washing of upholstery, divans, vertical fabrics etc. Starting extraction cleaning Fit the required tool to the appliance, plug into the mains and turn on by pressing both the washing (2) and suction (1) switches. Subsequently, with the detergent lever released, pass a number of times over the surface 13 Important: make sure the fabrics and surfaces to be cleaned are suitable for and resistant to extraction washing.

If in doubt, try on a corner of the rug or surface to be cleaned and wait until completely dry to verify the result. The use of cleaning products other than those supplied absolves the manufacturer of all liability for possible damage to rugs, carpets, armchairs, upholstery etc. · Make sure the polyurethane filter is in place on the motor housing (fig. 4). · Insert the bottom plate 12, fixing it to the drum as shown in fig. 5. Insert the diffuser cone 10 and suction conveyor 11 (fig. 6). After using the appliance as a dry vacuum cleaner, you do not need to add water or empty the drum. · Put the motor unit back on the drum and connect the hose to the suction port of the appliance by rotating the hose coupling clockwise until it is firmly in place.

washed with vacuuming only. IMPORTANT: noise levels. After preparing the appliance, when you turn it on, the noise will be louder than usual for a few seconds. This is not caused by faulty operation, but by water entering into circulation for the first time. If the noise continues for more than 15 seconds, make sure the intake tube is fitted correctly onto the motor unit. When the water in the tank runs out, the noise will get louder again. Turn the appliance off and fill as described in the manual.



[You're reading an excerpt. Click here to read official DELONGHI XE 1274 user guide](http://yourpdfguides.com/dref/3393447)

*Mechanical regulation of suction power The hose handgrip incorporates a mechanical suction regulator. This enables suction power to be regulated rapidly and practically by simply moving the slide (fig. 18).*

*Check that the float in the motor housing is free to move by raising the head of the appliance and shaking (fig. 20). Cleaning the microfilter The microfilter in the air discharge grill retains dust, pollen etc. @@To replace, remove the grill by pulling upwards (fig. 21). @@22). @@23). To put the appliance away, place the tools on the tool-holder (fig. 24), wrap the cable around the handle and fix with the special clip. @@To guarantee hygiene, after wet vacuuming, rinse the tools by vacuuming up several litres of clean water.*

*This will clean the tools and the inside of the hose. To empty the drum, release the head of the appliance, then remove the conveyor, diffuser cone and bottom plate. Empty the drum (fig. 19). Replace the bottom plate, taking care to push it down until it rests firmly on the base of the drum (fig.*

*5). You should always empty the drum each time you use the appliance. After emptying and rinsing the drum, remove the polyurethane filter, wash with running water and leave to dry. To extend the working life of the filter, keep dry otherwise the filters will deteriorate. 14 Floor brush (24) After using the appliance, make sure no dirt is left on the brush, tubes or castors.*



[You're reading an excerpt. Click here to read official DELONGHI XE 1274 user guide](http://yourpdfguides.com/dref/3393447)

<http://yourpdfguides.com/dref/3393447>