



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DENON AVR-2308. You'll find the answers to all your questions on the DENON AVR-2308 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DENON AVR-2308
User guide DENON AVR-2308
Operating instructions DENON AVR-2308
Instructions for use DENON AVR-2308
Instruction manual DENON AVR-2308

DENON

AV SURROUND RECEIVER

AVR-2308

Owner's Manual

Bedienungsanleitung

Manuel de l'Utilisateur



[You're reading an excerpt. Click here to read official DENON AVR-2308 user guide](http://yourpdfguides.com/dref/2466513)
<http://yourpdfguides.com/dref/2466513>

Manual abstract:

REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance. Um dieses Gerät vollständig von der Stromversorgung abzutrennen, ziehen Sie bitte den Stecker aus der Wandsteckdose. Der Netzstecker wird verwendet, um die Stromversorgung zum Gerät völlig zu unterbrechen; er muss für den Benutzer gut und einfach zu erreichen sein. · **DECLARATION DE CONFORMITE** Nous déclarons sous notre seule responsabilité que l'appareil, auquel se réfère cette déclaration, est conforme aux standards suivants: EN60065, EN55013, EN55020, EN61000-3-2 et EN61000-3-3. D'après les dispositions de la Directive 2006/95/EC, 89/336/EEC et 93/68/EEC. **PRECAUTION:** · **DICHIARAZIONE DI CONFORMITÀ** Dichiariamo con piena responsabilità che questo prodotto, al quale la nostra dichiarazione si riferisce, è conforme alle seguenti normative: EN60065, EN55013, EN55020, EN61000-3-2 e EN61000-3-3. In conformità con le condizioni delle direttive 2006/95/EC, 89/336/EEC e 93/68/EEC. **QUESTO PRODOTTO E' CONFORME AL D.**

M. 28/08/95 N. 548 Pour déconnecter complètement ce produit du courant secteur, débranchez la prise de la prise murale. La prise secteur est utilisée pour couper complètement l'alimentation de l'appareil et l'utilisateur doit pouvoir y accéder facilement. **WARNING: ATTENZIONE: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

Per scollegare completamente questo prodotto dalla rete di alimentazione elettrica, scollegare la spina dalla relativa presa a muro. La spina di rete viene utilizzata per interrompere completamente l'alimentazione all'unità e deve essere facilmente accessibile all'utente. · **DECLARACIÓN DE CONFORMIDAD** Declaramos bajo nuestra exclusiva responsabilidad que este producto al que hace referencia esta declaración, está conforme con los siguientes estándares: EN60065, EN55013, EN55020, EN61000-3-2 y EN61000-3-3. Siguiendo las provisiones de las Directivas 2006/95/EC, 89/336/EEC y 93/68/EEC.

PRECAUCIÓN: Para desconectar completamente este producto de la alimentación eléctrica, desconecte el enchufe del enchufe de la pared.

El enchufe de la alimentación eléctrica se utiliza para interrumpir por completo el suministro de alimentación eléctrica a la unidad y debe de encontrarse en un lugar al que el usuario tenga fácil acceso. · **EENVORMIGHEIDSVERKLARING** Wij verklaren uitsluitend op onze verantwoordelijkheid dat dit product, waarop deze verklaring betrekking heeft, in overeenstemming is met de volgende normen: EN60065, EN55013, EN55020, EN61000-3-2 en EN61000-3-3.

Volgens de bepalingen van de Richtlijnen 2006/95/EC, 89/336/EEC en 93/68/EEC. **WAARSCHUWING:** Om de voeding van dit product volledig te onderbreken moet de stekker uit het stopcontact worden getrokken. De netstekker wordt gebruikt om de stroomtoevoer naar het toestel volledig te onderbreken en moet voor de gebruiker gemakkelijk bereikbaar zijn. · **ÖVERENSSTÄMMELSESINTYG** Härmed intygas helt på eget ansvar att denna produkt, vilken detta intyg avser, uppfyller följande standarder: EN60065, EN55013, EN55020, EN61000-3-2 och EN61000-3-3. Enligt stadgarna i direktiv 2006/95/EC, 89/336/EEC och 93/68/EEC. **FÖRSIKTIHETSMÅTT:** Koppla loss stickproppen från eluttaget för att helt skilja produkten från nätet.

Stickproppen används för att helt bryta strömförsörjningen till apparaten, och den måste vara lättillgänglig för användaren. I SVENSKA NEDERLANDS ESPAÑOL ITALIANO FRANCAIS DEUTSCH ENGLISH n **NOTE ON USE / HINWEISE ZUM GEBRAUCH / OBSERVATIONS RELATIVES A L'UTILISATION / NOTE SULL'USO / NOTAS SOBRE EL USO / ALVORENS TE GEBRUIKEN / OBSERVERA ANGÅENDE ANVÄNDNINGEN CAUTION:** · · · · · The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.

No naked flame sources, such as lighted candles, should be placed on the unit. Observe and follow local regulations regarding battery disposal. Do not expose the unit to dripping or splashing fluids. Do not place objects filled with liquids, such as vases, on the unit. · Avoid high temperatures. Allow for sufficient heat dispersion when installed in a rack. · Vermeiden Sie hohe Temperaturen. Beachten Sie, dass eine ausreichende Belüftung gewährleistet wird, wenn das Gerät auf ein Regal gestellt wird. · Eviter des températures élevées. Tenir compte d'une dispersion de chaleur suffisante lors de l'installation sur une étagère.

· Evitate di esporre l'unità a temperature elevate. Assicuratevi che vi sia un'adeguata dispersione del calore quando installate l'unità in un mobile per componenti audio. · Evite altas temperaturas. Permite la suficiente dispersión del calor cuando está instalado en la consola. · Vermijd hoge temperaturen. Zorg er bij installatie in een audiorack voor, dat de door het toestel geproduceerde warmte goed kan worden afgevoerd. · Undvik höga temperaturer. Se till att det finns möjlighet till god värmeavledning vid montering i ett rack. · · · · · Keep the unit free from moisture, water, and dust. · Halten Sie das Gerät von Feuchtigkeit, Wasser und Staub fern.

· Protéger l'appareil contre l'humidité, l'eau et la poussière. · Tenete l'unità lontana dall'umidità, dall'acqua e dalla polvere. · Mantenga el equipo libre de humedad, agua y polvo. Laat geen vochtigheid, water of stof in het apparaat binnendringen. Utsätt inte apparaten för fukt, vatten och damm. Do not let foreign objects into the unit. Lassen Sie keine fremden Gegenstände in das Gerät kommen. Ne pas laisser des objets étrangers dans l'appareil. Non inserite corpi estranei all'interno dell'unità. No deje objetos extraños dentro del equipo.

Laat geen vreemde voorwerpen in dit apparaat vallen.



[You're reading an excerpt. Click here to read official DENON](#)

[AVR-2308 user guide](#)

<http://yourpdfguides.com/dref/2466513>

Se till att främmande föremål inte tränger in i apparaten. · Die Belüftung sollte auf keinen Fall durch das Abdecken der Belüftungsöffnungen durch Gegenstände wie beispielsweise Zeitungen, Tischtücher, Vorhänge o. Ä. behindert werden. · Auf dem Gerät sollten keinerlei direkte Feuerquellen wie beispielsweise angezündete Kerzen aufgestellt werden. · Bitte beachten Sie bei der Entsorgung der Batterien die örtlich geltenden Umweltbestimmungen. · Das Gerät sollte keiner tropfenden oder spritzenden Flüssigkeit ausgesetzt werden. · Auf dem Gerät sollten keine mit Flüssigkeit gefüllten Behälter wie beispielsweise Vasen aufgestellt werden. · La ventilation ne doit pas être gênée en recouvrant les ouvertures de la ventilation avec des objets tels que journaux, rideaux, tissus, etc.

· Aucune flamme nue, par exemple une bougie, ne doit être placée sur l'appareil. · Veillez à respecter les lois en vigueur lorsque vous jetez les piles usagées. · L'appareil ne doit pas être exposé à l'eau ou à l'humidité. · Ne pas poser d'objet contenant du liquide, par exemple un vase, sur l'appareil. ACHTUNG:

ATTENTION: · Unplug the power cord when not using the unit for long periods of time.

· Wenn das Gerät längere Zeit nicht verwendet werden soll, trennen Sie das Netzkabel vom Netzstecker. · Débrancher le cordon d'alimentation lorsque l'appareil n'est pas utilisé pendant de longues périodes. · Scollegate il cavo di alimentazione quando prevedete di non utilizzare l'unità per un lungo periodo di tempo. · Desconecte el cordón de energía cuando no utilice el equipo por mucho tiempo. · Neem altijd het netsnoer uit het stopcontact wanneer het apparaat gedurende een lange periode niet wordt gebruikt.

· Koppla loss nätkabeln om apparaten inte kommer att användas i lång tid. · Do not let insecticides, benzene, and thinner come in contact with the unit. · Lassen Sie das Gerät nicht mit Insektiziden, Benzin oder Verdünnungsmitteln in Berührung kommen. · Ne pas mettre en contact des insecticides, du benzène et un diluant avec l'appareil. · Assicuratevi che l'unità non entri in contatto con insetticidi, benzolo o solventi. · No permita el contacto de insecticidas, gasolina y diluyentes con el equipo. · Voorkom dat insecticiden, benzeen of ververdunner met dit toestel in contact komen. · Se till att inte insektsmedel på spraybruk, bensen och thinner kommer i kontakt med apparatens hölje. · Le aperture di ventilazione non devono essere ostruite coprendole con oggetti, quali giornali, tovaglie, tende e così via. · Non posizionate sull'unità fiamme libere, come ad esempio candele accese.

· Prestate attenzione agli aspetti legati alla tutela dell'ambiente nello smaltimento delle batterie. · L'apparecchiatura non deve essere esposta a gocciolii o spruzzi. · Non posizionate sull'unità alcun oggetto contenente liquidi, come ad esempio i vasi. · La ventilación no debe quedar obstruida por haberse cubierto las aperturas con objetos como periódicos, manteles, cortinas, etc. · No debe colocarse sobre el aparato ninguna fuente inflamable sin protección, como velas encendidas. · A la hora de deshacerse de las pilas, respete la normativa para el cuidado del medio ambiente. · No exponer el aparato al goteo o salpicaduras cuando se utilice. · No colocar sobre el aparato objetos llenos de líquido, como jarros. ATTENZIONE: PRECAUCIÓN: · Handle the power cord carefully.

Hold the plug when unplugging the cord.

· Gehen Sie vorsichtig mit dem Netzkabel um. Halten Sie das Kabel am Stecker, wenn Sie den Stecker herausziehen. · Manipuler le cordon d'alimentation avec précaution. Tenir la prise lors du débranchement du cordon. · Maneggiare il cavo di alimentazione con attenzione.

Tenete ferma la spina quando scollegate il cavo dalla presa. · Maneje el cordón de energíte;rées, mais mises au rebut conformément aux lois en vigueur sur la mise au rebut des piles. Ce produit et les accessoires inclus, à l'exception des piles, sont des produits conformes à la directive DEEE. NOTA

RELATIVA AL RICICLAGGIO: I materiali di imballaggio di questo prodotto sono riutilizzabili e riciclabili. Smaltire i materiali conformemente alle normative locali sul riciclaggio.

Per lo smaltimento dell'unità, osservare le normative o le leggi locali in vigore. Non gettare le batterie, né incenerirle, ma smaltirle conformemente alla normativa locale sui rifiuti chimici. Questo prodotto e gli accessori inclusi nell'imballaggio sono applicabili alla direttiva RAEE, ad eccezione delle batterie.

ACERCA DEL RECICLAJE: Los materiales de embalaje de este producto son reciclables y se pueden volver a utilizar. Disponga de estos materiales siguiendo los reglamentos de reciclaje de su localidad. Cuando se deshaga de la unidad, cumpla con las reglas o reglamentos locales. Las pilas nunca deberán tirarse ni incinerarse. Deberá disponer de ellas siguiendo los reglamentos de su localidad relacionados con los desperdicios químicos. Este producto junto con los accesorios empaquetados es el producto aplicable a la directiva RAEE excepto pilas. EEN AANTEKENING MET BETREKKING TOT DE RECYCLING: Het inpakmateriaal van dit product is recycleerbaar en kan opnieuw gebruikt worden.

Er wordt verzocht om zich van elk afvalmateriaal te ontdoen volgens de plaatselijke voorschriften. Volg voor het wegdoen van de speler de voorschriften voor de verwijdering van wit- en bruingoed op. Batterijen mogen nooit worden weggegooid of verbrand, maar moeten volgens de plaatselijke voorschriften betreffende chemisch afval worden verwijderd. Op dit product en de meegeleverde accessoires, m.u.v. de batterijen is de richtlijn voor afgedankte elektrische en elektronische apparaten (WEEE) van toepassing. OBSERVERA ANGÅENDE ÅTERVINNING: Produktens emballage är återvinningsbart och kan återanvändas. Kassera det enligt lokala återvinningsbestämmelser. När du kasserar enheten ska du göra det i överensstämmelse med lokala regler och bestämmelser.

Batterier får absolut inte kastas i soporna eller brännas. Kassera dem enligt lokala bestämmelser för kemiskt avfall. Denna apparat och de tillbehör som levereras med den uppfyller gällande WEEE-direktiv, med undantag av batterierna.



[You're reading an excerpt. Click here to read official DENON](http://yourpdfguides.com/dref/2466513)

[AVR-2308 user guide](http://yourpdfguides.com/dref/2466513)

<http://yourpdfguides.com/dref/2466513>

III ENGLISH Contents	Getting Started	Accessories	2	Cautions on
Handling	3	Cautions on Installation	3
	3	Inserting the Batteries	3
	3	Part Names and Functions	4
Display	4	Front Panel	4
	4	Rear Panel	5
	5	Remote Control Unit	5
	6	Connections Preparations	7
	7	Cables Used for Connections	7
HDMI Output	7	Video Conversion Function	8
	8	On-Screen Display for Component Video Outputs and	9
	9	Speaker Connections	9
	9	Speaker Installation	9
	9	Speaker Connections	9, 10
	9, 10	Connecting Equipment with HDMI	11
	11	connectors	11
	11	Connecting the Monitor	12
	12	DVD Player	12
	12	Record Player	12
	13	CD Player	13
	13	iPod®	13
	14	TV/CABLE Tuner	14
	14	Connecting the Recording	14
Components	15	Digital Video Recorder	15
	15	Video Cassette Recorder	15
	15	CD Recorder / MD Recorder / Tape Deck	16
Devices	16	Connections to Other	16
	16	Video Camera / Game Console	16
	16	Component with Multi-channel Output	16
	16	connectors	16
	16	External Power Amplifier	17
	17	Antenna terminals	17
	17	Multi-zone	17
	18	External Controller	18
	18	Connecting the Power Cord	18
	19	Once Connections are Completed	19
	19	Menu Operations Operations	19
	19	Example of Display of Default Values	19
	20	Examples of On-screen Display and Front Display	20
	20	Menu Map	20
	21	Auto Setup Preparations	21
	22	Auto Setup	22
	23	a Start Menu	23
	23	Error	23
Messages	24	s Option	24
	24	d Parameter	24
Check	24	Manual Setup	24
	24	Speaker Setup	25
	25	a Speaker	25
	25	Configuration	25
	25	s Subwoofer Setup	25
	25	d Distance	25
	25, 26	f Channel Level	26
	26	g Crossover Frequency	26
	26	HDMI Setup	27
	27	a HDMI Audio Setup	27
	27	s HDMI Video Setup	27
	27	Audio Setup	27
	28	a EXT.	28



[You're reading an excerpt. Click here to read official DENON](http://yourpdfguides.com/dref/2466513)

[AVR-2308 user guide](http://yourpdfguides.com/dref/2466513)

<http://yourpdfguides.com/dref/2466513>

<i>IN Subwoofer Level</i>	28 s 2ch Direct/Stereo	28 d Dolby Digital Setup
.....	28 f Auto Surround Mode	28 g Manual EQ
.....	29 Zone2 Setup	29 a Lch Level
.....	29 s Rch Level	29 d Volume Limit
.....	29 f Power On Level	29 g Mute Level
.....	29 Option Setup.....	30 a Amp
<i>Assign</i>	30 s Volume Control	30 d Source Delete
.....	30 f On-Screen Display	31 g Quick Select Name
.....	31 h Trigger Out	31 j Remote ID Setup
.....	32 k 2Way Remote	32 l Display
.....	32 A0 Setup Lock	32 Input Setup Settings Related to
<i>Playing Input Sources</i>	33 Auto Preset	33 Preset Skip
.....	33 Preset Name	33 Input Mode
.....	34 Rename	34 Assign
.....	34, 35 iPod	35 Other
.....	35, 36 Surround Modes Standard Playback	36 Surround
<i>Playback of 2-channel Sources</i>	36 Playing Multi-channel Sources (Dolby Digital, DTS, etc.	



[You're reading an excerpt. Click here to read official DENON
AVR-2308 user guide
http://yourpdfguides.com/dref/2466513](http://yourpdfguides.com/dref/2466513)

)	36 DSP Simulation Playback	37 Stereo Playback	37 Direct Playback
	Parameter	37 Playback in the PURE DIRECT Mode	37 Parameter a Surround
		38, 39 s Tone Control	40 d Room EQ
		40 f RESTORER	40 g Night Mode
		41 h Audio Delay	41 Information Status
		41 a Main Zone	41 s ZONE2
		41 Audio Input Signal	41 HDMI Information
		42 a HDMI Signal Information	42 s HDMI Monitor Information
		42 Auto Surround Mode	42 Quick Select
		42 Preset Station	42 ENGLISH Playback Preparations
		43 Turning the Power On	43 Selecting the input source
		43 Operations During Playback	43 Playing Video and Audio
Equipment	44 Basic Operation	44 Listening to FM/AM Broadcasts	
	44 Basic Operation	44 Presetting Radio Stations (Preset Memory)	
	45 Listening to Preset Stations	45 RDS (Radio Data System)	45
RDS Search		46 PTY Search	46 TP Search
		46 RT (Radio Text)	47 iPod® Playback
		47 Basic Operation	47 Listening to Music
Operations	48 Viewing Still Pictures or Videos on the iPod	48 Other Operations and Functions Other	
	49 Recording on an External Device (REC OUT mode)	49 Convenient Functions	
	49 Channel Level	49 Fader Function	
	49 Quick Select Function	50 Personal Memory Plus Function	
	50 Last Function Memory	50 Backup Memory	
	50 Resetting the Microprocessor	50 Remote Control Unit Operations	
Operating DENON Audio Components	51 Presetting	51 Operating Preset	
Components	51 ~ 53 Punch Through Function	54 Amp Assign / Multi-zone Connections and	
Operations Multi-zone Settings with the Amp Assign Function	55 ~ 57 Multi-zone Settings and Operations with Zone Output	57 Multi-zone	
Operations	58 Turning the Power On and Off	58 Selecting the Input	
Source	58 Adjusting the Volume	58 Turning off the Sound Temporarily	
	58 Other Information	59 ~ 67 Troubleshooting	
	68, 69 Specifications	70 List of preset codes	
	End of this manual Getting Started Connections Setup Playback Remote Control Multi-Zone Information Troubleshooting Getting Started Thank you for purchasing this DENON product.		



[You're reading an excerpt. Click here to read official DENON](http://yourpdfguides.com/dref/2466513)

[AVR-2308 user guide](http://yourpdfguides.com/dref/2466513)

<http://yourpdfguides.com/dref/2466513>

To ensure proper operation, please read these owner's manual carefully before using the product. After reading them, be sure to keep them for future reference. Accessories Check that the following parts are supplied with the product. q Owner's manual .

.....

.....

.....

.....

.....

.....

.....

.....

..... 1 w Service station list .

.....

.....

.....

.....

.....

.....

.....

.....

..... 1 e Remote control (RC-1081)

.....

.....

.....

.....

.....

.....

.....

. 1 r R6P/AA batteries

.....

.....

.....

.....

.....

.....

.....

2 t FM indoor antenna

.....

.....

.....

.....

.....

.....

.....

.....

. 1 y AM loop antenna

.....

.....

.....

.....

.....

.....

.....

.....

..... 1 u Setup microphone (Cord length: Approx. 7.6 m) ...

.....

.....

.... 1 e t y u ENGLISH Cautions on Handling · Before turning the power switch on Check once again that all connections are correct and that there are no problems with the connection cables.

· Power is supplied to some of the circuitry even when the unit is set to the standby mode. When traveling or leaving home for long periods of time, be sure to unplug the power cord from the power outlet. · About condensation If there is a major difference in temperature between the inside of the unit and the surroundings, condensation (dew) may form on the operating parts inside the unit, causing the unit not to operate properly. If this happens, let the unit sit for an hour or two with the power turned off and wait until there is little difference in temperature before using the unit. · Cautions on using mobile phones Using a mobile phone near this unit may result in noise. If so, move the mobile phone away from this unit when it is in use. · Moving the unit Turn off the power and unplug the power cord from the power outlet. Next, disconnect the connection cables to other system units before moving the unit. · Note that the illustrations in these instructions may differ from the actual unit for explanation purposes. About the Remote Control Unit In addition to the AVR-2308, the included remote control unit (RC1081) can also be used to operate the equipment listed below.

qDENON system components wNon-DENON system components · By setting the preset memory (vpage 51 ~ 53) Operating Range of the Remote Control Unit Point the remote control unit at the remote sensor when operating it. Getting Started Connections Inserting the Batteries q Lift the clasp and remove the rear lid. w Load the two batteries properly as indicated by the marks in the battery compartment. 30° R6P/AA Setup 30° Playback Approx. 7 m Remote Control NOTE e Put the rear cover back on. The set may function improperly or the remote control unit may not operate if the remote control sensor is exposed to direct sunlight, strong artificial light from an inverter type fluorescent lamp or infrared light. Multi-Zone NOTE · Replace the batteries with new ones if the set does not operate even when the remote control unit is operated close to the unit. · The supplied batteries are only for verifying operation. · When inserting the batteries, be sure to do so in the proper direction, following the "q" and "w" marks in the battery compartment. · To prevent damage or leakage of battery fluid: · Do not use a new battery together with an old one.

· Do not use two different types of batteries. · Do not attempt to charge dry batteries. · Do not short-circuit, disassemble, heat or dispose of batteries in flames. · If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries. · Remove the batteries from the remote control unit if it will not be in use for long periods.

· When replacing the batteries, have the new batteries ready and insert them as quickly as possible. Information Cautions on Installation Note: For proper heat dispersal, do not install this unit in a confined space, such as a bookcase or similar enclosure. b Note b b Troubleshooting b Wall ENGLISH Part Names and Functions For buttons not explained here, see the page indicated in parentheses ().

Front Panel W0 Q9 Q8 Q7 Q6 Q5 Q4 Q9 SOURCE SELECT knob..... (43) W0 SOURCE button (43) W1 INPUT MODE button (34) W2 ANALOG button..... (34) W3 EXT. IN button (34) W4 BAND button..... (44) W5 SHIFT button (45) W6 PRESET buttons..... (45) W7 TUNING buttons (44) W8 RDS button..... (46) W9 PTY button (46) E0 RT button (47) Getting Started Connections Setup Playback Remote Control Multi-Zone Information Troubleshooting Display Q5 Q4 Q3 Q2 Q1 Q0 o i u y W1 W2 W3 W4 W5 W6 W7 W8 W9 E0 q q we r t y u i o Q0 Q1 Q2 Q3 w e Q1 NIGHT indicator r t q Power operation button (ON/STANDBY) (43) Q2 SELECT/ENTER knob (19) · The SELECT/ENTER knob on the main unit operates in the same way as the CURSOR o and p buttons on the remote control unit.



[You're reading an excerpt. Click here to read official DENON](http://yourpdfguides.com/dref/2466513)

[AVR-2308 user guide](http://yourpdfguides.com/dref/2466513)

<http://yourpdfguides.com/dref/2466513>

q Input signal indicators *w* Input signal channel indicators These light when digital signals are input. This lights when the night mode is selected. *Q2* RESTORER indicator This lights when the RESTORER mode is selected. *w* Power indicator..... (43) *e* Power switch (hON jOFF) (43) *r* Headphones jack (PHONES) (43) *t* SPEAKER buttons (43) *y* ZONE2 ON/OFF button (58) *u* QUICK SELECT buttons (50) *i* V. AUX INPUT connectors Remove the cap covering the terminals when you want to use them. *e* Information display The input source name, surround mode, setting values and other information are displayed here. *Q3* HDMI indicator This lights connections. when playing using HDMI *r* Output signal channel indicators *t* Front speaker indicators These light according to the settings of the front A and B speakers. *Q4* Decoder indicators These light when the respective decoders are operating. · The control functions in the same way as the CURSOR *o* button when turned counterclockwise, as the CURSOR *p* button when turned clockwise.

· The control functions in the same way as the ENTER button when pressed the knob. *y* ZONE2 output indicator This lights when the power for the ZONE2 is turned on. *Q5* Tuner reception mode indicators These light according to the reception conditions when the input source is set to "TUNER" . · AUTO This lights when in the auto tuning mode. · RDS This lights when receiving RDS broadcasts. · STEREO In the FM mode, this lights when receiving analog stereo broadcasts. · TUNED This lights when the broadcast is properly tuned in. *u* Master volume indicator *i* AUDYSSEY MULTEQ indicator This lights when the room equalizer is selected. *o* SETUP MIC jack (22) *Q0* MENU button (19) *Q1* RETURN button (19) *Q3* Cursor buttons (ui) (19) *Q4* MASTER VOLUME control knob..... (43) *Q5* Master volume indicator *Q6* Display *Q7* Remote control sensor..... (3) *Q8* ZONE2/REC SELECT button (49) *o* Input mode indicators *Q0* Recording output source indicator This lights when the REC OUT mode is selected. ENGLISH Rear Panel *Q2* *Q1* *Q0* *o* *i* Getting Started Connections Setup *Q6* Playback *Q3* *Q7* Remote Control *Q3* *Q4* *Q5* Multi-Zone Information Troubleshooting *q* *w* *e* *r* *t* *Q4* FM/AM antenna terminals *y* *u* *q* RS-232C connector (18) *w* REMOTE CONTROL jacks..... (18) *e* TRIGGER OUT jack (18) *r* DOCK CONTROL jack (14) *t* Speaker terminals (SPEAKERS) (9) *y* SIGNAL GND terminal (13) *u* AC OUTLET (19) *i* Power cord (19) *o* Digital audio connectors (OPTICAL / COAXIAL) (12, 15) (TUNER ANTENNA) (17) *Q0* COMPONENT VIDEO connectors (12) *Q1* HDMI connectors (11) *Q2* VIDEO / S-VIDEO connectors (12) *Q3* Analog audio connectors (AUDIO) (12) *Q5* ZONE2 connectors..... (18) *Q6* EXT.



[You're reading an excerpt. Click here to read official DENON AVR-2308 user guide](http://yourpdfguides.com/dref/2466513)
<http://yourpdfguides.com/dref/2466513>

<i>IN connectors</i>	(16)	<i>Q7 PRE OUT connectors</i>	(17)	<i>ENGLISH Remote Control Unit [Front]</i>	<i>Q2 q w e r t q</i>
<i>Indicator</i>	(51)	<i>w Power buttons</i>	(43)	<i>e Tuner system buttons</i>	(45) <i>r QUICK</i>
<i>SELECT buttons</i>	(50)	<i>t Source select buttons</i>	(43)	<i>y System buttons</i>	(48) <i>u Video select</i>
<i>button (V. SELECT)</i>	(35)	<i>i Cursor buttons (uio p)</i>	(19)	<i>o DISPLAY button</i>	(41) <i>Q0 DIMMER button</i>
<i>control buttons</i>	(43)	<i>Q1 Mode selector switches</i>	(43, 47)	<i>Q2 Remote control signal transmitter</i>	(3) <i>Q3 Master volume</i>
<i>Q4 MUTING button</i>	(43)	<i>Q5 NIGHT button</i>	(41)	<i>Q6 STATUS button</i>	
<i>Q7 Channel select (CH SEL) / ENTER button</i>	(19, 49)	<i>Getting Started Connections Setup Playback</i>			
<i>Remote Control Multi-Zone Information Troubleshooting [Rear]</i>	<i>q ZONE2 power buttons</i>	(58)	<i>w Source select buttons</i>		
<i>(43) e Tuner system buttons</i>	(44, 45)	<i>r Test tone button (TEST)</i>	(26)	<i>t Main zone power buttons</i>	
<i>(MAIN)</i>	(58)	<i>y Surround mode buttons</i>	(36, 37)	<i>u Amp menu button (A.</i>	



[You're reading an excerpt. Click here to read official DENON
AVR-2308 user guide
http://yourpdfguides.com/dref/2466513](http://yourpdfguides.com/dref/2466513)

