



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DENON AVR-2311. You'll find the answers to all your questions on the DENON AVR-2311 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

 
 
 
 
User manual DENON AVR-2311
User guide DENON AVR-2311
Operating instructions DENON AVR-2311
Instructions for use DENON AVR-2311
Instruction manual DENON AVR-2311

DENON

AV SURROUND RECEIVER

AVR-2311

Owner's Manual
Manuel de l'Utilisateur
Manual del usuario

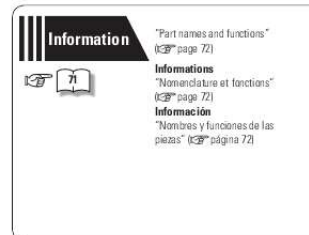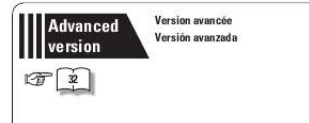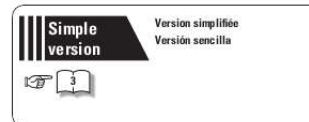

[You're reading an excerpt. Click here to read official DENON AVR-2311 user guide](http://yourpdfguides.com/dref/2712000)
<http://yourpdfguides.com/dref/2712000>

Manual abstract:

Clean only with dry cloth. Do not block any ventilation openings. 9. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over. 12. Unplug this apparatus during lightning storms or when unused for long periods of time. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. 14. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like. To completely disconnect this product from the mains, disconnect the plug from the wall socket outlet. The mains plug is used to completely interrupt the power supply to the unit and must be within easy access by the user. Allow for sufficient heat dispersion when installed in a rack. Keep the unit free from moisture, water, and dust. Unplug the power cord when not using the unit for long periods of time. Do not let foreign objects into the unit. Never disassemble or modify the unit in any way. Do not expose the unit to dripping or splashing fluids. Do not handle the mains cord with wet hands. When discarding the unit, comply with local rules or regulations. For proper heat dispersal, do not install this unit in a confined space, such as a bookcase or similar enclosure. Do not place any other equipment on this unit. AUTO SETUP AUDYSSEY AUTO SETUP STEP3 Measurement Please place the microphone at ear height at 2nd listening position. Les subwoofers peuvent mesurer une distance constatée plus grande que la distance réelle du fait du retard électrique commun aux subwoofers. Ambient noise is too high or Level is too low Vous pourrez également l'utiliser pour commander à distance la ZONE2 (une autre pièce). ENTER Enter RETURN Cancel Set use of surround back ch. Front B : À sélectionner pour connecter le second jeu des enceintes avant aux bornes SURR. Assign surround back AMP for other use Distance Permet de régler la distance · [DEVICE ON] QUICK1 OK QUICK2 NG QUICK3 Return Press QUICK 1 if device works, QUICK 2 if not MANUAL SETUP OPTION SETUP REMOTE PRESET CODES Category : DVD Brand : Denon Code [1/ 3] : 30490 Setup Remote 1. @@@@.



[You're reading an excerpt. Click here to read official DENON](#)

[AVR-2311 user guide](#)

<http://yourpdfguides.com/dref/2712000>