



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DENON AVR-2808. You'll find the answers to all your questions on the DENON AVR-2808 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DENON AVR-2808
User guide DENON AVR-2808
Operating instructions DENON AVR-2808
Instructions for use DENON AVR-2808
Instruction manual DENON AVR-2808

DENON

AV SURROUND RECEIVER

AVR-2808

Owner's Manual
Bedienungsanleitung
Manuel de l'Utilisateur



[You're reading an excerpt. Click here to read official DENON AVR-2808 user guide](http://yourpdfguides.com/dref/2466534)
<http://yourpdfguides.com/dref/2466534>

Manual abstract:

REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance. Um dieses Gerät vollständig von der Stromversorgung abzutrennen, ziehen Sie bitte den Stecker aus der Wandsteckdose. Der Netzstecker wird verwendet, um die Stromversorgung zum Gerät völlig zu unterbrechen; er muss für den Benutzer gut und einfach zu erreichen sein. · **DECLARATION DE CONFORMITE** Nous déclarons sous notre seule responsabilité que l'appareil, auquel se réfère cette déclaration, est conforme aux standards suivants: EN60065, EN55013, EN55020, EN61000-3-2 et EN61000-3-3. D'après les dispositions de la Directive 2006/95/EC, 89/336/EEC et 93/68/EEC. **PRECAUTION:** · **DICHIARAZIONE DI CONFORMITÀ** Dichiariamo con piena responsabilità che questo prodotto, al quale la nostra dichiarazione si riferisce, è conforme alle seguenti normative: EN60065, EN55013, EN55020, EN61000-3-2 e EN61000-3-3. In conformità con le condizioni delle direttive 2006/95/EC, 89/336/EEC e 93/68/EEC. **QUESTO PRODOTTO E' CONFORME AL D.**

M. 28/08/95 N. 548 Pour déconnecter complètement ce produit du courant secteur, débranchez la prise de la prise murale. La prise secteur est utilisée pour couper complètement l'alimentation de l'appareil et l'utilisateur doit pouvoir y accéder facilement. **WARNING: ATTENZIONE: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

Per scollegare completamente questo prodotto dalla rete di alimentazione elettrica, scollegare la spina dalla relativa presa a muro. La spina di rete viene utilizzata per interrompere completamente l'alimentazione all'unità e deve essere facilmente accessibile all'utente. · **DECLARACIÓN DE CONFORMIDAD** Declaramos bajo nuestra exclusiva responsabilidad que este producto al que hace referencia esta declaración, está conforme con los siguientes estándares: EN60065, EN55013, EN55020, EN61000-3-2 y EN61000-3-3. Siguiendo las provisiones de las Directivas 2006/95/EC, 89/336/EEC y 93/68/EEC.

PRECAUCIÓN: Para desconectar completamente este producto de la alimentación eléctrica, desconecte el enchufe del enchufe de la pared. El enchufe de la alimentación eléctrica se utiliza para interrumpir por completo el suministro de alimentación eléctrica a la unidad y debe de encontrarse en un lugar al que el usuario tenga fácil acceso. · **EENVORMIGHEIDSVERKLARING** Wij verklaren uitsluitend op onze verantwoordelijkheid dat dit product, waarop deze verklaring betrekking heeft, in overeenstemming is met de volgende normen: EN60065, EN55013, EN55020, EN61000-3-2 en EN61000-3-3.

Volgens de bepalingen van de Richtlijnen 2006/95/EC, 89/336/EEC en 93/68/EEC. **WAARSCHUWING:** Om de voeding van dit product volledig te onderbreken moet de stekker uit het stopcontact worden getrokken. De netstekker wordt gebruikt om de stroomtoevoer naar het toestel volledig te onderbreken en moet voor de gebruiker gemakkelijk bereikbaar zijn. · **ÖVERENSSTÄMMELSESINTYG** Härmed intygas helt på eget ansvar att denna produkt, vilken detta intyg avser, uppfyller följande standarder: EN60065, EN55013, EN55020, EN61000-3-2 och EN61000-3-3. Enligt stadgarna i direktiv 2006/95/EC, 89/336/EEC och 93/68/EEC. **FÖRSIKTIHETSMÅTT:** Koppla loss stickproppen från eluttaget för att helt skilja produkten från nätet.

Stickproppen används för att helt bryta strömförsörjningen till apparaten, och den måste vara lättillgänglig för användaren. I SVENSKA NEDERLANDS ESPAÑOL ITALIANO FRANCAIS DEUTSCH ENGLISH n **NOTE ON USE / HINWEISE ZUM GEBRAUCH / OBSERVATIONS RELATIVES A L'UTILISATION / NOTE SULL'USO / NOTAS SOBRE EL USO / ALVORENS TE GEBRUIKEN / OBSERVERA ANGÅENDE ANVÄNDNINGEN CAUTION:** · · · · The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.

No naked flame sources, such as lighted candles, should be placed on the unit. Observe and follow local regulations regarding battery disposal. Do not expose the unit to dripping or splashing fluids. Do not place objects filled with liquids, such as vases, on the unit. · Avoid high temperatures. Allow for sufficient heat dispersion when installed in a rack. · Vermeiden Sie hohe Temperaturen. Beachten Sie, dass eine ausreichende Belüftung gewährleistet wird, wenn das Gerät auf ein Regal gestellt wird. · Eviter des températures élevées. Tenir compte d'une dispersion de chaleur suffisante lors de l'installation sur une étagère.

· Evitate di esporre l'unità a temperature elevate. Assicuratevi che vi sia un'adeguata dispersione del calore quando installate l'unità in un mobile per componenti audio. · Evite altas temperaturas. Permite la suficiente dispersión del calor cuando está instalado en la consola. · Vermijd hoge temperaturen. Zorg er bij installatie in een audiorack voor, dat de door het toestel geproduceerde warmte goed kan worden afgevoerd. · Undvik höga temperaturer. Se till att det finns möjlighet till god värmeavledning vid montering i ett rack. · · · · · Keep the unit free from moisture, water, and dust. · Halten Sie das Gerät von Feuchtigkeit, Wasser und Staub fern.

· Protéger l'appareil contre l'humidité, l'eau et la poussière. · Tenete l'unità lontana dall'umidità, dall'acqua e dalla polvere. · Mantenga el equipo libre de humedad, agua y polvo. Laat geen vochtigheid, water of stof in het apparaat binnendringen. Utsätt inte apparaten för fukt, vatten och damm. Do not let foreign objects into the unit. Lassen Sie keine fremden Gegenstände in das Gerät kommen. Ne pas laisser des objets étrangers dans l'appareil. Non inserite corpi estranei all'interno dell'unità. No deje objetos extraños dentro del equipo.

Laat geen vreemde voorwerpen in dit apparaat vallen.



[You're reading an excerpt. Click here to read official DENON](#)

[AVR-2808 user guide](#)

<http://yourpdfguides.com/dref/2466534>

Se till att främmande föremål inte tränger in i apparaten. · Die Belüftung sollte auf keinen Fall durch das Abdecken der Belüftungsöffnungen durch Gegenstände wie beispielsweise Zeitungen, Tischtücher, Vorhänge o. Ä. behindert werden. · Auf dem Gerät sollten keinerlei direkte Feuerquellen wie beispielsweise angezündete Kerzen aufgestellt werden. · Bitte beachten Sie bei der Entsorgung der Batterien die örtlich geltenden Umweltbestimmungen. · Das Gerät sollte keiner tropfenden oder spritzenden Flüssigkeit ausgesetzt werden. · Auf dem Gerät sollten keine mit Flüssigkeit gefüllten Behälter wie beispielsweise Vasen aufgestellt werden. · La ventilation ne doit pas être gênée en recouvrant les ouvertures de la ventilation avec des objets tels que journaux, rideaux, tissus, etc.

· Aucune flamme nue, par exemple une bougie, ne doit être placée sur l'appareil. · Veillez à respecter les lois en vigueur lorsque vous jetez les piles usagées. · L'appareil ne doit pas être exposé à l'eau ou à l'humidité. · Ne pas poser d'objet contenant du liquide, par exemple un vase, sur l'appareil. ACHTUNG:

ATTENTION: · Unplug the power cord when not using the unit for long periods of time.

· Wenn das Gerät längere Zeit nicht verwendet werden soll, trennen Sie das Netzkabel vom Netzstecker. · Débrancher le cordon d'alimentation lorsque l'appareil n'est pas utilisé pendant de longues périodes. · Scollegate il cavo di alimentazione quando prevedete di non utilizzare l'unità per un lungo periodo di tempo. · Desconecte el cordón de energía cuando no utilice el equipo por mucho tiempo. · Neem altijd het netsnoer uit het stopcontact wanneer het apparaat gedurende een lange periode niet wordt gebruikt.

· Koppla loss nätkabeln om apparaten inte kommer att användas i lång tid. · Do not let insecticides, benzene, and thinner come in contact with the unit. · Lassen Sie das Gerät nicht mit Insektiziden, Benzin oder Verdünnungsmitteln in Berührung kommen. · Ne pas mettre en contact des insecticides, du benzène et un diluant avec l'appareil. · Assicuratevi che l'unità non entri in contatto con insetticidi, benzolo o solventi. · No permita el contacto de insecticidas, gasolina y diluyentes con el equipo. · Voorkom dat insecticiden, benzeen of ververdunner met dit toestel in contact komen. · Se till att inte insektsmedel på spraybruk, bensen och thinner kommer i kontakt med apparatens hölje. · Le aperture di ventilazione non devono essere ostruite coprendole con oggetti, quali giornali, tovaglie, tende e così via. · Non posizionate sull'unità fiamme libere, come ad esempio candele accese.

· Prestate attenzione agli aspetti legati alla tutela dell'ambiente nello smaltimento delle batterie. · L'apparecchiatura non deve essere esposta a gocciolii o spruzzi. · Non posizionate sull'unità alcun oggetto contenente liquidi, come ad esempio i vasi. · La ventilación no debe quedar obstruida por haberse cubierto las aperturas con objetos como periódicos, manteles, cortinas, etc. · No debe colocarse sobre el aparato ninguna fuente inflamable sin protección, como velas encendidas. · A la hora de deshacerse de las pilas, respete la normativa para el cuidado del medio ambiente. · No exponer el aparato al goteo o salpicaduras cuando se utilice. · No colocar sobre el aparato objetos llenos de líquido, como jarros. ATTENZIONE: PRECAUCIÓN: · Handle the power cord carefully.

Hold the plug when unplugging the cord.

· Gehen Sie vorsichtig mit dem Netzkabel um. Halten Sie das Kabel am Stecker, wenn Sie den Stecker herausziehen. · Manipuler le cordon d'alimentation avec précaution. Tenir la prise lors du débranchement du cordon. · Maneggiare il cavo di alimentazione con attenzione.

Tenete ferma la spina quando scollegate il cavo dalla presa. · Maneje el cordón de energíte;rées, mais mises au rebut conformément aux lois en vigueur sur la mise au rebut des piles. Ce produit et les accessoires inclus, à l'exception des piles, sont des produits conformes à la directive DEEE. NOTA

RELATIVA AL RICICLAGGIO: I materiali di imballaggio di questo prodotto sono riutilizzabili e riciclabili. Smaltire i materiali conformemente alle normative locali sul riciclaggio.

Per lo smaltimento dell'unità, osservare le normative o le leggi locali in vigore. Non gettare le batterie, né incenerirle, ma smaltirle conformemente alla normativa locale sui rifiuti chimici. Questo prodotto e gli accessori inclusi nell'imballaggio sono applicabili alla direttiva RAEE, ad eccezione delle batterie.

ACERCA DEL RECICLAJE: Los materiales de embalaje de este producto son reciclables y se pueden volver a utilizar. Disponga de estos materiales siguiendo los reglamentos de reciclaje de su localidad. Cuando se deshaga de la unidad, cumpla con las reglas o reglamentos locales. Las pilas nunca deberán tirarse ni incinerarse. Deberá disponer de ellas siguiendo los reglamentos de su localidad relacionados con los desperdicios químicos. Este producto junto con los accesorios empaquetados es el producto aplicable a la directiva RAEE excepto pilas. EEN AANTEKENING MET BETREKKING TOT DE RECYCLING: Het inpakmateriaal van dit product is recycleerbaar en kan opnieuw gebruikt worden.

Er wordt verzocht om zich van elk afvalmateriaal te ontdoen volgens de plaatselijke voorschriften. Volg voor het wegdoen van de speler de voorschriften voor de verwijdering van wit- en bruingoed op. Batterijen mogen nooit worden weggegooid of verbrand, maar moeten volgens de plaatselijke voorschriften betreffende chemisch afval worden verwijderd. Op dit product en de meegeleverde accessoires, m.u.v. de batterijen is de richtlijn voor afgedankte elektrische en elektronische apparaten (WEEE) van toepassing. OBSERVERA ANGÅENDE ÅTERVINNING: Produktens emballage är återvinningsbart och kan återanvändas. Kassera det enligt lokala återvinningsbestämmelser. När du kasserar enheten ska du göra det i överensstämmelse med lokala regler och bestämmelser.

Batterier får absolut inte kastas i soporna eller brännas. Kassera dem enligt lokala bestämmelser för kemiskt avfall. Denna apparat och de tillbehör som levereras med den uppfyller gällande WEEE-direktiv, med undantag av batterierna.



[You're reading an excerpt. Click here to read official DENON](#)

[AVR-2808 user guide](#)

<http://yourpdfguides.com/dref/2466534>

III ENGLISH Contents	Getting Started	Accessories	2	Cautions on
Handling	3	Cautions on Installation	3
	3	About the Remote Control Unit	3
	3	Inserting the Batteries	3
	3	Operating Range of the Remote Control Unit	3
	3	Part Names and Functions	4
	4	Front Panel	4
Display	4	Rear Panel	5
	5	Remote Control Unit	5
	6	Connections Preparations	7
	7	Cables Used for Connections	7
	7	Video Conversion Function	8
HDMI Output	8	On-Screen Display for Component Video Outputs and	9
	9	Speaker Connections	9
	9	Speaker Installation	9
	9	Speaker Connections	9, 10
	9, 10	Connecting Equipment with HDMI	9, 10
	11	Connecting the Monitor	12
	12	Connecting the Playback Components	12
	12	DVD Player	12
	12	Record Player	12
	13	CD Player	13
	13	iPod®	13
	14	TV/CABLE Tuner	14
	14	Satellite Receiver	14
	15	Connecting the Recording Components	15
	15	Digital Video Recorder	15
	15	Video Cassette Recorder	15
	16	CD Recorder / MD Recorder / Tape Deck	16
	16	Connections to Other Devices	16
	17	Video Camera / Game Console	17
17 Component with Multi-channel Output connectors	17	External Power Amplifier	17
	17	Antenna terminals	17
	18	Multi-zone	18
	19	External Controller	19
	19	Connecting the Power Cord	19
	20	Once Connections are Completed	20
	20	Menu Operations Operations	20
	20	Example of Display of Default Values	20
	21	Examples of On-screen Display and Front Display	21
	21	Menu Map	21
	22	Auto Setup Preparations	23
	23	Auto Setup	23
	24	a Start Menu	24
	24	Error	24
Messages	25	s Option	25
	25	d Parameter	25
Check	25	Manual Setup Speaker Setup	26
	26	a Speaker	26
Configuration	26	s Subwoofer Setup	26
	26	d Distance	26
	26, 27	f Channel Level	27
	27	g Crossover Frequency	27
	27	HDMI Setup	27
	27	a HDMI Audio Setup	27
	27	s HDMI Video Setup	28
	28	Audio Setup	28
	28	a EXT.	28



[You're reading an excerpt. Click here to read official DENON](http://yourpdfguides.com/dref/2466534)

[AVR-2808 user guide](http://yourpdfguides.com/dref/2466534)

<http://yourpdfguides.com/dref/2466534>

<i>IN Subwoofer Level</i>	28 s 2ch Direct/Stereo	28, 29 d Dolby Digital Setup
.....	29 f Auto Surround Mode	29 g Manual EQ
.....	29 Zone Setup	30 a ZONE2 Setup
.....	30 s ZONE3 Setup	30 Option
<i>Setup</i>	31 a Amp Assign.....	31 s Volume Control
.....	31 d Source Delete	31 f On-Screen Display
.....	31, 32 g Quick Select Name	32 h Trigger Out
.....	32 j Remote ID Setup	32 k 2Way Remote
.....	32 l Display	32 A0 Setup Lock
.....	33 Input Setup Settings Related to Playing Input Sources.....	34 Auto Preset
.....	34 Preset Skip	34 Preset Name
.....	34 Input Mode	34 Rename
.....	34 Assign	35 iPod
.....	35, 36 Other	36 Surround Modes Standard
<i>Playback</i>	36 Surround Playback of 2-channel Sources	36 Playing Multi-channel Sources
	(Dolby Digital, DTS, etc.)	



[You're reading an excerpt. Click here to read official DENON](http://yourpdfguides.com/dref/2466534)

[AVR-2808 user guide](http://yourpdfguides.com/dref/2466534)

<http://yourpdfguides.com/dref/2466534>

)	37 DSP Simulation Playback	37 Stereo Playback	37 Direct Playback
	Parameter	37 Playback in the PURE DIRECT Mode	38 Parameter a Surround
		40 f RESTORER	40 d Room EQ
		41 h Audio Delay	41 g Night Mode
		41 a Main Zone	41 Information Status
		41 Audio Input Signal	42 HDMI Information
		42 a HDMI Signal Information	42 s HDMI Monitor Information
		42 Auto Surround Mode	42 Quick Select
		42 Preset Station	42 ENGLISH Playback Preparations
		43 Turning the Power On	43 Selecting the Input Source
		43 Operations During Playback	43 Playing Video and Audio Equipment
		44 Basic Operation	44 Listening to FM/AM Broadcasts
		44 Basic Operation	44 Presetting Radio Stations (Preset Memory)
		44 Listening to Preset Stations	45 RDS (Radio Data System)
		45 RDS Search	45 PTY Search
		46 RT (Radio Text)	46 TP Search
		47 Basic Operation	47 iPod® Playback
		47 48 , Viewing Still Pictures or Videos on the iPod	47 Listening to Music
		48 Playing Super Audio CD	48 Other Operations and Functions Other Operations
		49 Convenient Functions	48 Recording on an External Device (REC OUT mode)
		49 Fader Function	49 Channel Level
		50 Personal Memory Plus Function	49 Quick Select Function
		50 Backup Memory	50 Last Function Memory
		50 Remote Control Unit Operations Main Remote Control Unit	50 Resetting the Microprocessor
		51 Presetting	51 Operating DENON Audio Components
		51 ~ 53 Setting the Remote ID	51 Operating Preset Components
		54 System Call Function	54 Learning Function
		55 Setting the Time the Backlight Stays Lit	55 Punch Through Function
		55 Resetting the Main Remote Control Unit	55 Adjusting the Backlight's Brightness
		57 Amp Assign / Multi-zone Connections and Operations Multi-zone Settings with the Amp Assign Function	56 Sub Remote Control Unit
		59 Multi-zone Settings and Operations with Zone Pre-out Output	57 ~ 59 Multi-zone Operations
		60 Selecting the Input Source	60 Turning the Power On and Off
		60 Turning off the Sound Temporarily	60 Adjusting the Volume
		61 ~ 69 Troubleshooting	60 Other Information
		72 List of preset codes	70, 71
			End of this manual Getting Started
			Connections Setup Playback Remote Control Multi-Zone Information Troubleshooting Getting Started Thank you for purchasing this DENON product.



[You're reading an excerpt. Click here to read official DENON](http://yourpdfguides.com/dref/2466534)

[AVR-2808 user guide](http://yourpdfguides.com/dref/2466534)

<http://yourpdfguides.com/dref/2466534>

To ensure proper operation, please read this owner's manual carefully before using the product. After reading them, be sure to keep them for future reference. Accessories Check that the following parts are supplied with the product. q Owner's manual .

.....

.....

.....

.....

.....

.....

.....

.....

..... 1 w Service station list .

.....

.....

.....

.....

.....

.....

.....

.....

..... 1 e Power cord (Cord length: Approx. 1.5 m) ..

.....

.....

.....

.....

. 1 r Main remote control (RC-1068)

.....

.....

.....

.....

.....

..... 1 t LR6/AA batteries (for RC-1068)..

.....

.....

.....

.....

.....

. 2 y Sub remote control (RC-1071)

.....

.....

.....

.....

.....

..... 1 u R03/AAA batteries (for RC-1071)

.....

.....

.....

.....

.....

.....

2 i FM indoor antenna

.....

.....

.....

AUX INPUT connectors..... (17) W3 SETUP MIC jack (23) W4 ROOM EQ button (40) W5
DIMMER button (32) W6 SPEAKER button..... (43) W7 SURROUND BACK button (40) W8
STATUS button (42) W9 AUDIO DELAY button (41) E0 RESTORER button (41) E1
DIRECT/STEREO button..... (37) E2 PURE DIRECT button..... (38) E3 DSP SIMULATION button (37) E4
STANDARD button (36) r Output signal channel indicators t Front speaker indicator These light according to the settings of the front
A and B speakers. Q6 Decoder indicators These light when the respective decoders are operating. GWith the door openH E4 E3 E2 E1 E0 W9 W8 W7 W6 W5
W4 W3 y HDMI monitor indicator This lights when an HDMI monitor is detected. Q7 Tuner reception mode indicators These light according to the reception
conditions when the input source is set to "TUNER" . · AUTO This lights when in the auto tuning mode. · RDS This lights when receiving RDS broadcasts. ·
STEREO In the FM mode, this lights when receiving analog stereo broadcasts.
· TUNED This lights when the broadcast is properly tuned in. u Master volume indicator i AUDYSSEY MULTEQ XT indicator This lights when the room
equalizer is selected. Q4 Q5 Q6 Q7 Q8 Q9 W0 W1 W2 o Recording output source indicator This lights when the REC OUT mode is selected. q Power
operation button (ON/STANDBY) (43) w Power indicator..... (43) e Power switch (hON jOFF)
..... (43) r QUICK SELECT buttons / indicators (50) t MASTER VOLUME control knob..... (43) y Master volume indicator u Display i
Remote control sensor..... (3) o SOURCE SELECT knob..... (43) Q0 SOURCE button (43) Q1
TUNING PRESET button (45) Q2 ZONE2/3 / REC SELECT button (49, 60) Q3 VIDEO SELECT button (36) Q0
NIGHT indicator This lights when the night mode is selected.



[You're reading an excerpt. Click here to read official DENON](#)

[AVR-2808 user guide](#)

<http://yourpdfguides.com/dref/2466534>

Q1 Multi-zone indicators These light when the power for the respective zone is turned on.

Q2 RESTORER indicator This lights when the RESTORER mode is selected. ENGLISH Rear Panel Q2 Q1 Q0 o Getting Started Connections Setup Playback

Q3 Remote Control Q5 Q3 Q4 Q6 Q5 Multi-Zone Information Troubleshooting q w e r t y Q2 VIDEO / S-VIDEO connectors (12) Q3 Analog audio connectors (AUDIO) (12) Q4 FM/AM antenna terminals (TUNER ANTENNA) (18) u i q RS-232C connector (19) w REMOTE CONTROL jacks (19) e TRIGGER OUT jacks (19) r DOCK CONTROL jack (14) t Speaker terminals (SPEAKERS) (9) y SIGNAL GND terminal (13) u AC inlet (AC IN) (20) i AC OUTLET (20) o Digital audio connectors (OPTICAL / COAXIAL) (12, 15) Q0 COMPONENT VIDEO connectors (12) Q1 HDMI connectors (11) Q5 PRE OUT connectors (17, 19) Q6 EXT. IN connectors (17) ENGLISH Remote Control Unit n Main remote control unit (RC-1068) Q5 q w Q6 Q7 q Signal transmission indicator (51) w Mode select buttons (51) e Quick select / System call buttons (50, 55) r Surround mode buttons (36 ~ 38) t System buttons (52, 53) y Audio delay button (A. DL) (41) u Tuner system buttons (44) i Input mode button (INPUT) (34) o MENU button (20) Q0 Cursor buttons (uio p) (20) Q1 Parameter / Search button (PARA / SRCH) (38, 48) The time for which the backlight stays on can be changed (vpage 55 "Setting the Time the Backlight Stays Lit").



[You're reading an excerpt. Click here to read official DENON](#)

[AVR-2808 user guide](#)

<http://yourpdfguides.com/dref/2466534>

SEL, SAT TU, DTU, NET/USB buttons cannot be used. · The ZONE2 mode QUICK SELECT (1 ~ 3), A, DL, RSTR, NGT, INPUT, SPKR, TEST and surround mode buttons cannot be used. · The ZONE4 mode cannot be used. e r t y u i o Q0 Q1 Q2 Q3 Q1 e r t y u Q2 Q3 Q8 Q9 W0 W1 W2 W3 W4 W5 W6 Q2 HOME button (51) Q3 Channel buttons (CH) (44) Q4 Input source select / Number buttons .. (43, 44) Q5 Remote control signal transmitter (3) Q6 Device select indicators (DEV1 / DEV2) ... (51) Q7 ZONE3 select indicators (Z3) (51) Q8 RESTORER button (RSTR)..... (41) Q9 Night button (NGT) (41) W0 Test tone button (TEST) (27) W1 Front speaker select button (SPKR) (43) W2 POWER buttons (43) W3 Channel select (CH SEL) / ENTER button (20, 49) Q4 W7 W4 Return button (RTN) (20) W5 Master volume control buttons (VOL) (43) W6 Muting button (MUTE)..... (43, 60) W7 Main remote control unit setup button (RC SETUP) (51) q Remote control signal transmitter (3) w Zone power off button (OFF) (60) e CHANNEL buttons (57) r TUNING buttons (57) t System buttons (57) y REPEAT button (57) u RANDOM button (57) i ZONE2/ZONE3 select switch..... (57) o Zone power on button (ON) (60) Q0 Input source select buttons (60) Q1 Volume control buttons (VOLUME) (60) Q2 Muting button (MUTE)..... (60) Q3 SHIFT button (57) The FAVORITES DIRECT PLAY button is for future use.



[You're reading an excerpt. Click here to read official DENON](#)

[AVR-2808 user guide](#)

<http://yourpdfguides.com/dref/2466534>