




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DENON COCOON PORTABLE. You'll find the answers to all your questions on the DENON COCOON PORTABLE in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DENON COCOON PORTABLE
User guide DENON COCOON PORTABLE
Operating instructions DENON COCOON PORTABLE
Instructions for use DENON COCOON PORTABLE
Instruction manual DENON COCOON PORTABLE

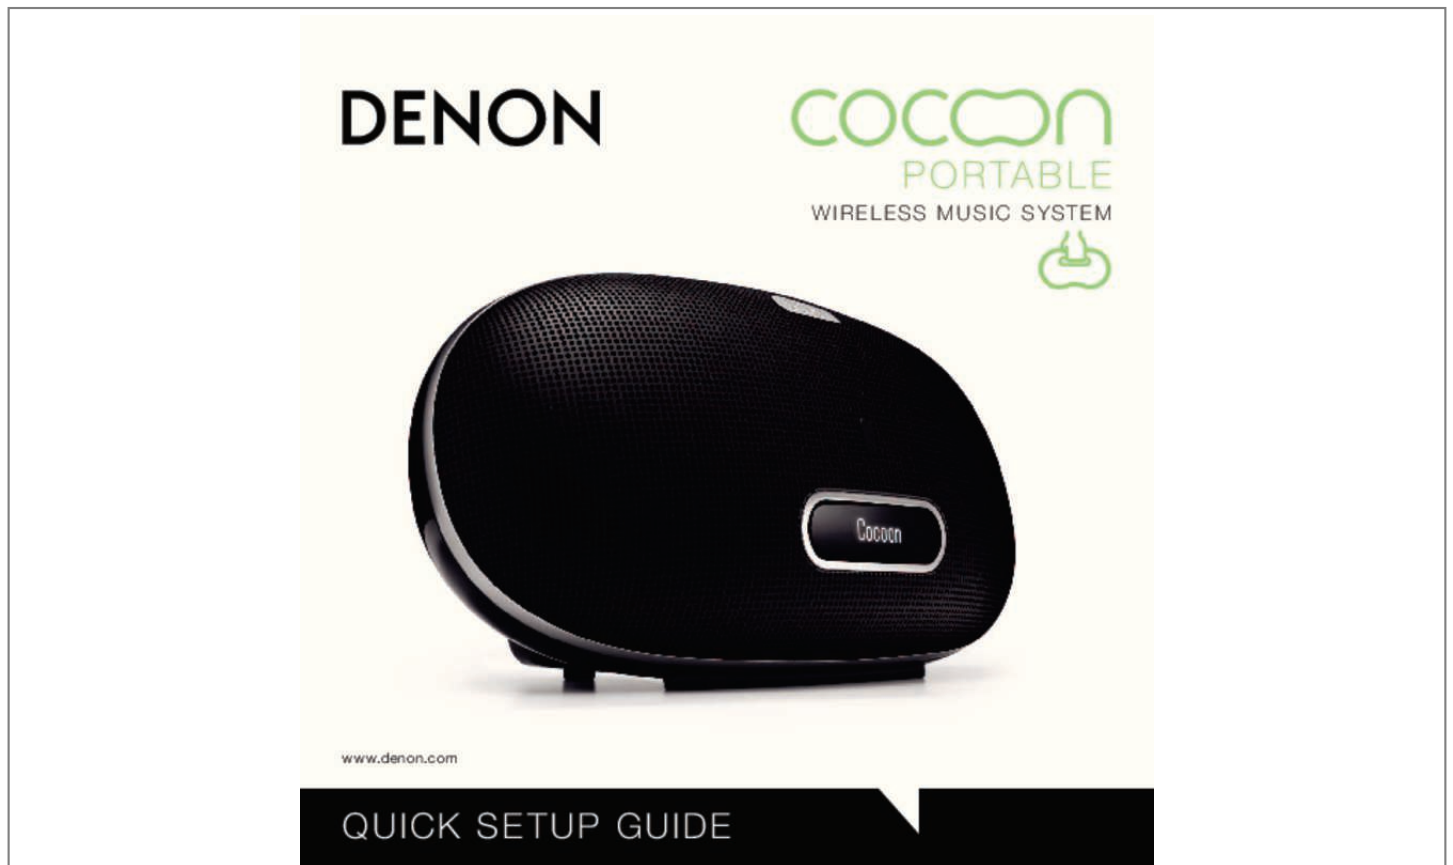

[You're reading an excerpt. Click here to read official DENON COCOON PORTABLE user guide](http://yourpdfguides.com/dref/5161283)
<http://yourpdfguides.com/dref/5161283>

Manual abstract:

JP ES CH 2 Please wait while the Cocoon Portable starts up ... 60–90 s NL * □ [European model only]: Use the + and - buttons to select “Network Always On” if you use AirPlay™ or select “Network Off in Standby” to save power when the Cocoon Portable is in Standby Power mode. press the button to select. @ @ £ □ □ 17 □ □ ENJOYING YOUR MUSIC 1 Press the display to reveal the dock. * When you dock your iOS device the following message may appear. Select “Ignore” if you want to listen to music immediately from your iOS device or select “App Store” if you want to install the Denon Cocoon App from the App store. SE ES JP 2 Place your iPhone or iPod into the dock. * NL CH 3 Launch your favorite music app and start listening! If you want to install the Cocoon App, go to page 17 6 7 DE EINE VERBINDUNG ZU IHREM HEIM-NETZWERK HERSTELLEN Wählen Sie eine der folgenden Möglichkeiten. @ @ @ @ If you don't have an iOS device or a WPS router, go to page 21. @ @ Once connected, set the “POWER” switch to “ON”. ANSLUT TILL DITT HEMNÄTVERK MED DIN iOS-ENHET Se till att iOS-enheten är ansluten till ditt hemnätverk. @ @ @ @ JP ES CH NL Go to page 13 2 Place your iOS device into the dock. @ @ @ @ @ @ @ @ @ @ 2 Then push the WPS button on the Cocoon Portable within 2 minutes. Go to page 15 CH NL 3 Please wait as completing the connection can take a few minutes. The front panel of the Cocoon Portable will show the status of the connection. @ @ 2 Please wait as rebooting may take up to 30 s. @ @ @ @ □ □ □ □ För mer support information, vänligen referera till Bruksanvisningen på den medföljande CD-ROM skivan. C Connecting to your Home Network Using A PC or Mac (Continued) Use web browser for configuration Launch your web browser 4 □ 4 SE FR and enter http://169. 1 in the address bar and then hit the RETURN key. 5 6 5 □ Click Profile Configuration. @ @ Click APPLY to save these settings to your Cocoon Portable. for ! □ further support please refer to the Owner's Manual on the supplied CD-ROM. @ @.



[You're reading an excerpt. Click here to read official DENON COCOON PORTABLE user guide](http://yourpdfguides.com/dref/5161283)
<http://yourpdfguides.com/dref/5161283>