




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DENON DN-MC6000. You'll find the answers to all your questions on the DENON DN-MC6000 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DENON DN-MC6000 User guide DENON DN-MC6000 Operating instructions DENON DN-MC6000 Instructions for use DENON DN-MC6000 Instruction manual DENON DN-MC6000

DENON DN-MC6000 Quick Guide for TRAKTOR

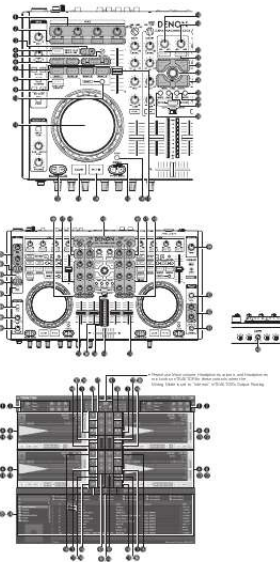

Function table

Available for TRAKTOR control with DN-MC6000

| Function | TRAKTOR | Function | TRAKTOR |
|----------|---------|----------|---------|
| EQ | EQ | EQ | EQ |
| ... | ... | ... | ... |

* Functions available in TRAKTOR Pro

Set the following items of DN-MC6000 and TRAKTOR

Controlling two decks on TRAKTOR

Set the following items of DN-MC6000 and TRAKTOR

Mixing by using DN-MC6000 CH2/CH3

Setting of DN-MC6000

Channel input source switch knob (Top panel)

Mixing mode selector switch (Rear panel)



Setting of TRAKTOR



Audio Setup

Audio Device: DN-MC6000

Output Routing

Mixing Mode: External

Output Channel A: L = 1 Front Left

R = 2 Front Right

Output Channel B: L = 3 Back Left

R = 4 Back Right

Input Routing

Input Channel A: L (Main) = 1 Front Left

R = 2 Front Right

Input Channel B: L (Main) = 3 Front Center

R = 4 Low Frequency Effects

Using the mixer function of TRAKTOR

Setting of DN-MC6000

Channel input source switch knob (Top panel)

Mixing mode selector switch (Rear panel)

CH1: "USB12 + MIDI"

CH2: "USB14 + MIDI"

CH3: "USB12 + MIDI"

CH4: "MIDI"

CH5: "USB12 + MIDI"

CH6: "MIDI"

CH7: "USB12 + MIDI"

CH8: "MIDI"

CH9: "USB12 + MIDI"

CH10: "MIDI"

CH11: "USB12 + MIDI"

CH12: "MIDI"

CH13: "USB12 + MIDI"

CH14: "MIDI"

CH15: "USB12 + MIDI"

CH16: "MIDI"

CH17: "USB12 + MIDI"

CH18: "MIDI"

CH19: "USB12 + MIDI"

CH20: "MIDI"

CH21: "USB12 + MIDI"

CH22: "MIDI"

CH23: "USB12 + MIDI"

CH24: "MIDI"

CH25: "USB12 + MIDI"

CH26: "MIDI"

CH27: "USB12 + MIDI"

CH28: "MIDI"

CH29: "USB12 + MIDI"

CH30: "MIDI"

CH31: "USB12 + MIDI"

CH32: "MIDI"

CH33: "USB12 + MIDI"

CH34: "MIDI"

CH35: "USB12 + MIDI"

CH36: "MIDI"

CH37: "USB12 + MIDI"

CH38: "MIDI"

CH39: "USB12 + MIDI"

CH40: "MIDI"

CH41: "USB12 + MIDI"

CH42: "MIDI"

CH43: "USB12 + MIDI"

CH44: "MIDI"

CH45: "USB12 + MIDI"

CH46: "MIDI"

CH47: "USB12 + MIDI"

CH48: "MIDI"

CH49: "USB12 + MIDI"

CH50: "MIDI"

CH51: "USB12 + MIDI"

CH52: "MIDI"

CH53: "USB12 + MIDI"

CH54: "MIDI"



[You're reading an excerpt. Click here to read official DENON DN-MC6000 user guide](http://yourpdfguides.com/dref/3332826)
<http://yourpdfguides.com/dref/3332826>

Manual abstract:

CHAINED EFX MODE: Controls the amount of the selected effect. **ADVANCED EFX MODE:** Switches the effect parameter. **CHAINED EFX MODE:** **ADVANCED EFX MODE:** Switches the effect parameter on and off. **CHAINED EFX MODE:** Switches the selected effect on and off. Switches the FX1/2 on and off. Choose a focus of DECK A-C/B-D. Switches key lock feature on and off. Sets Loop In point. Sets Loop Out point. Switches Auto Loop feature on and off. @@Selects CUE14 or CUE58. Scratch, Search, or Bend feature. Fast search feature. + : Forward. : Reverse. Sets current cue point, or back to current cue point. Play or Pause. Controls the pitch bend. Automatic beat matching. Adjusts the pitch. Controls the filter cutoff. Switches Filter feature, on and off. Loads the selected song on the deck A. Loads the selected song on the deck B. **ROTATE:** Scrolls through selected library in browser list. **PUSH :** Jumps cursor to previous favorites slots. Jumps cursor to next favorites slots. **TAP feature.** Clear the **LOOP.** **SHIFT + ADVANCED EFX MODE:** Selects effect type.

CHAINED EFX MODE: **ADVANCED EFX MODE:** **CHAINED EFX MODE:** Selects effect type. **DN-MC6000 Quick Guide for TRAKTOR q w e r t y u i o** Q0 Available for TRAKTOR control with DN-MC6000 DNMC6000 Button/Knob No. DNMC6000 CONTROLS EFX.1 knob Q8 Q9 q EFX.2 knob EFX.3 knob EFX.4 knob EFX.1 W0 W1 W2 W3 W4 W5 W6 W7 W8 w EFX.2 EFX.3 EFX. 4 e r t y u i o Q0 Q1 Q2 Q3 Q4 Q5 FX 1/2 DECK CHG. **KEYLOCK LOOP IN LOOP OUT +/- AUTO LOOP CUE14 (SAMP .14) SHIFT SAMP . @@In** BeatJump mode, Moves by edited jump size. Opens the advanced panel for BeatJump feature. Deletes CUE point.z Fast search for files in file list. + : Bend mode (touch sense of DNMC6000 off) feature. : Vinyl mode (touch sense of DNMC6000 on) feature. + : Pitch lock feature of DNMC6000 on. : Pitch lock feature of DNMC6000 off. Sets current Deck to the Master for SYNC feature. @@@@PUSH: Opens and close directory/folder in browser tree. Loads the selected song on the preview player. The preview player Play or Pause. MIDI channel of DNMC6000 changes. **DECK CHG.= BLUE DECK A = MIDI CHANNEL 13, DECK B = MIDI CHANNEL 15 DECK CHG.= RED DECK C = MIDI CHANNEL 14, DECK D = MIDI CHANNEL 16 MIDI channel of DNMC6000 changes. DECK CHG.** = BLUE DECK A = MIDI CHANNEL 9, DECK B = MIDI CHANNEL 11 DECK CHG.= RED DECK C = MIDI CHANNEL 10, DECK D = MIDI CHANNEL 12 MIDI channel of DNMC6000 changes. @@@@Controls the relative output level from the summed A and B Mixes. Adjusts the level of the selected channel. Adjusts the Hi-frequency response. Adjusts the Mid-frequency response. @@@@and other countries. @@@@All trademarks are the property of their respective holders. All specifications subject to change without notice. ©2010, NATIVE INSTRUMENTS GmbH. All rights reserved. @@Controls parameter1. Controls parameter2. Controls filter cutoff. Switches the selected effect on and off. Effect buttons 1 (Only supported in selected effect plugins). Effect buttons 2 (Only supported in selected effect plugins). Resets filter (off). FX1: Flanger on/off. FX2: Beat Grid on/off. Deck changes between A and C, or B and D. Switches key lock feature on and off. Sets Loop In point. Sets Loop Out point. Edits the Loop Size. Switches Auto Loop feature on and off. **SAMP.mode=OFF :** Sets Cue point and play. **SAMP.mode=ON:** Sets sample and sample play. Deletes CUE or LOOP point / Shift function / Select Effect mode. Selects CUE14 or SAMP.14. @@Fast search feature. + : Forward. : Reverse. Sets current cue point, or back to current cue point. Play or Pause. Applies pitch bend. Automatic beat matching. Adjusts the pitch. **BROWSER:** Selects video transition. **SAMPLER:** Adjusts the sample volume on the left deck. **EFFECTS:** Adjusts parameter #1 of the selected effect. **RECORD: BROWSER:** Selects video effect. **SAMPLER:** Adjusts the sample volume on the right deck. **EFFECTS:** Adjusts parameter #2 of the selected effect. **RECORD: BROWSER:** Activates selected video transition. **SAMPLER:** Plays the sample on the left deck. **EFFECTS:** Activates the selected effect on the left deck. **RECORD: BROWSER:** Activates selected video effect. **SAMPLER:** Plays the sample on the right deck. **EFFECTS:** Activates the selected effect on the right deck. **RECORD: BROWSER:** Loads the selected song on the deck A. **SAMPLER:** Selects the sampler deck. **EFFECTS:** Selects the effect deck. **RECORD: BROWSER:** Loads the selected song on the deck B. **SAMPLER:** Selects the sampler deck. **EFFECTS:** Selects the effect deck. **RECORD: ROTATE: BROWSER:** Scrolls file/folder list. **SAMPLER:** Selects sample. **EFFECTS:** Selects effect. **RECORD: PUSH :** **BROWSER:** Songs: Adds song to playlist.z **Folders:** Enters folder. **SAMPLER:** Plays sample. **EFFECTS:** Turns selected effect on/off. **RECORD: BROWSER:** Moves between folders, songs, playlistz and sidelist*. **SAMPLER:** Selects sample. @@@@TAP feature. Clear the **LOOP.** Clear the **LOOP.** Moves the loop left/right by 4 beats. / (Adjusts sample length by halving/doubling it.) Switches smart loop on/off. / (Switches sample loop on/off) **SAMP.** mode=OFF : Clears CUE point. **SAMP.mode=ON:** Stutter. **BROWSER:** Scrolls file/folder list. **SAMPLER:** Selects sample. **EFFECTS:** Selects effect. **RECORD: + :** Bend mode (touch sense of DNMC6000 off) feature. : Vinyl mode (touch sense of DNMC6000 on) feature. + : Pitch lock feature of DNMC6000 on. : Pitch lock feature of DNMC6000 off. Sets current Deck to the Master for SYNC feature. **DN-MC6000 Quick Guide for Virtual DJ q w e r t y u i o** Q0 Available for Virtual DJ control with DN-MC6000 DNMC6000 Button/Knob No. @@KEYLOCK LOOP IN LOOP OUT +/- SHIFT + / (SAMP. @@JOG WHEEL Q2 FAST SEARCH +/- CUE PLAY/PAUSE PITCH BEND+ / SYNC PITCH FADER PARAM.1 knob Q2 R8 R7 R6 Q3 Q4 R5 Q5 Q6 Q7 R6 R7 R8 Q3 Q4 Q5 Q6 Q7 Q8 Inputs: LINE INSz Inputs: LINE INSz Outputs: HEADPHONES Outputs: HEADPHONES (Master: Chan1&2 / Headphones: Chan3&4) (Master: Chan 1&2 / Headphones: Chan 3&4)eamless and beat-aware LOOP functionality Synchronized sampler with 12 instant record and playback slots Real scratch simulation Automatic first beat and last beat detection Automatic BPM and KEY calculation Printed in China CHANNEL EQ LOW Adjusts the Lowfrequency response.

qwe R8 z Function available in Virtual DJ Pro (or trial of Virtual DJ Pro, during the trial period). Regarding Audio Setting for Mac, please refer to the "DN-MC6000_mac_configuration_manual.pdf" in DN-MC6000 Resource CD-ROM attached. D&M Holdings Inc. 9415 43004 330P .



[You're reading an excerpt. Click here to read official DENON DN-MC6000 user guide](#)

<http://yourpdfguides.com/dref/3332826>