



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DENON DRR-M33. You'll find the answers to all your questions on the DENON DRR-M33 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DENON DRR-M33
User guide DENON DRR-M33
Operating instructions DENON DRR-M33
Instructions for use DENON DRR-M33
Instruction manual DENON DRR-M33


DENON

STEREO CASSETTE TAPE DECK

DRR-M33

OPERATING INSTRUCTIONS
BEDIENUNGSANLEITUNG
MODE D'EMPLOI
ISTRUZIONI PER L'USO

INSTRUCCIONES DE OPERACION
GEBRUIKSAANWIJZING
BRUKSANVISNING

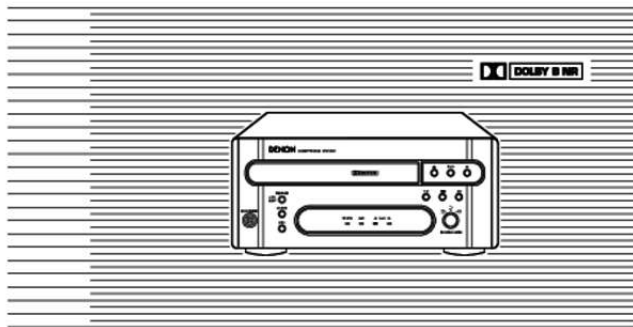

FOR ENGLISH READERS	PAGE	4 - PAGE	13
FÖR ENLIGTISKE LÄSARE	SEITE	14 - SEITE	33
POUR LES LECTEURS FRANÇAIS	PAGE	24 - PAGE	33
PER IL LETTORE ITALIANO	PAGINA	34 - PAGINA	43
PARA LECTORES DE ESPAÑOL	PAGINA	44 - PAGINA	53
VOOR NEDERLANDSE ALLE LEZERS	PAGINA	54 - PAGINA	63
FÖR SVENSKALÄSARE	SIDA	64 - SIDA	73



[You're reading an excerpt. Click here to read official DENON DRR-M33 user guide](http://yourpdfguides.com/dref/5129843)

<http://yourpdfguides.com/dref/5129843>

Manual abstract:

Allow for sufficient heat dispersion when installed on a rack. □ Keep the set free from moisture, water, and dust. □ Do not let foreign objects in the set. □ Hold the plug when unplugging the cord. □ Unplug the power cord when not using the set for long periods of time. □ Do not let insecticides, benzene, and thinner come in contact with the set. * (For sets with ventilation holes) • Do not obstruct the ventilation holes. □ Never disassemble or modify the set in any way. □ The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc. □ No naked flame sources, such as lighted candles, should be placed on the apparatus.

• Please be care the environmental aspects of battery disposal. □ The apparatus shall not be exposed to dripping or splashing for use. □ No objects filled with liquids, such as vases, shall be placed on the apparatus. Handle the power supply cord carefully Do not damage or deform the power supply cord. If it is damaged or deformed, it may cause electric shock or malfunction when used.

When removing from wall outlet, be sure to remove by holding the plug attachment and not by pulling the cord. 2. Do not open the top cover In order to prevent electric shock, do not open the top cover. If problems occur, contact your DENON DEALER. 3.

Do not place anything inside Do not place metal objects or spill liquid inside this unit. Horizontal loading for stable travel The horizontal loading mechanism used on the DRR-M33 is the ideal type of tray for the rotating parts, the most important part of the cassette deck. Mounting the deck mechanism horizontally lessens vibration of the flywheel in the thrust direction and reduces modulation noise. 2. □ Auto tape selector for automatically identifying the tape type.

□ 3. □ □ □ □ WARNING: TO PREVENT FIRE OR SHOCK HAZARD , DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. Please, record and retain the Model name and serial number of your set shown on the rating label. Thank you for purchasing this DENON cassette tape deck. Please read the operating instructions thoroughly in order to acquaint yourself with the cassette tape deck and achieve maximum satisfaction from it.

7 Read the following before using the set • Before turning on the power Check again that all connections are correct and that there are no problems with the connection cords. Be sure to unplug the power supply cord before connecting or disconnecting the connection cords. □ Moving the set To prevent short-circuits or damage to the connection cords, always unplug the power supply cord and disconnect the connection cords between all other audio components when moving the set. □ Condensation (dew) Water droplets may condense on internal operation parts if the set is brought into a heated room from the cold outdoors or when the room is heated rapidly. If this happens, the set may not operate properly. □ Should condensation occur The condensation will evaporate in one hour or less, at which time the system will function normally. □ Store this instructions in safe place After reading, store this instructions along with the warranty in a safe place. Also fill in the items on the back paper for your convenience. □ Illustrations in this manual Note that some of the illustrations used for explanations in this manual may differ from the actual set. 13 • ACCESSORIES Check that the following parts are included in the package aside from the main unit: q Operating instructions.

In the event that the player is used while a near-by tuner or TV is turned on, although unlikely, interference could occur either in the sound from the tuner or the picture of the TV. To avoid this, please take the following precautions. □ Keep the cassette tape deck as far away from the tuner or TV set as possible. □ Keep the power cable and connecting cable of the cassette tape deck separate from the antenna wires of the tuner and TV. 6 8:50 □ □ □ 5 ENGLISH 4 CONNECTIONS Connecting to the RCD-M33/M35DAB 2 When connecting to a receiver other than the one in the RCD-M33/M35DAB there is no need to make connection 3.

Note that in this case none of the system functions (auto power on, etc.) will work. □ System operations such as the auto power on function can only be used if stereo audio cords and system cords are connected between all the system components. Be sure to securely connect all the connection cords between all the units. □ Disconnecting a system cord during system operation may result in malfunction.

□ □ □ □ □ Use the AC OUTLET for audio equipment only. Do not use them for hair driers, etc. □ □ □ □ □ □ □ □ □ □ □ □ □ □ In this case, none of the system functions (auto power on, etc.) will work. □ □ □ □ Recommended System Installation • Do not place another component directly on top of the CD receiver (RCD-M33/M35DAB). □ To ensure stability, do not stack more than two units. NOTES: • Do not plug power supply cords into power outlets until all connections have been completed. □ Check the left and right channels and be sure to interconnect them correctly (R to R, L to L). □ Clasp the power supply cords and connection cords together may result in humming or noise. □ After unplugging the power supply cord, wait at least 5 seconds before plugging it back in.

□ The illustration of the CD receiver in the diagram or the operation description is for the RCD-M33/M35DAB. Model) 3 CD receiver (RCD-M33/M35DAB) (option) Power plug AC 230 V, 50 Hz (Plug into a power outlet) 5 I.) q Power operation switch (ON/STANDBY) • Press this once to turn the cassette deck's power on. Press again to set the cassette deck to the standby mode. □ The indicator color changes as follows, according to the condition: During power ON: green During STANDBY: red ! 1 7 (fast-forward) button • Connect this unit's power supply cord to the AC outlet on the CD receiver (RCD-M33/M35DAB). □ AC OUTLET • Use the AC OUTLET for audio equipment only. (60 W MAX.) • Use this to select the direction of tape travel. • For details refer to page 7. □ Press this button to fast-forward the front side of the tape.

(The back side of the tape is rewind.) Also use this button to search for the beginning of the following selection when playing in the forward (I) direction, or to search for the beginning of the current selection when playing in the reverse (0) direction. □ Press this button while the tape is moving to stop the tape. □ Press this button to play the tape. □ Press this to open and close the cassette tray.

□ When pressed in the standby mode, the cassette deck's power turns on. A 6 HANDLING CASSETTE TAPES AND CAUTIONS Cautions on Handling Cassette Tapes • C-120 and C-150 tapes C-120 and C-150 cassette tapes use extremely thin tape that can easily get caught in the capstan or pinch roller. do not use such cassette tapes. □ Slack in the tape The tape may get caught on the capstan and be damaged if the tape is slack when the cassette is loaded.



[You're reading an excerpt. Click here to read official DENON DRR-M33 user guide](http://yourpdfguides.com/dref/5129843)
<http://yourpdfguides.com/dref/5129843>

use a pencil , etc.

, to take up any slack in the tape before loading the cassette. Accidental Erasure Prevention Tabs • Cassette tapes are equipped with accidental erasure prevention tabs. To protect recordings from being erased accidentally, use a screwdriver, etc. , to press on the tabs and break them off. □ To record on a cassette tape whose tabs have been broken off, cover the holes with cellophane tape, etc. Accidental erasure protection tab for side B w CD SRS (Synchronized Recording System) button • Use this button for synchronized recording of CDs. 3 PLAY button e REC button • This button is used when recording and when creating blank spaces between selections. If only the REC button is pressed, the recording pause mode is set. • For details , refer to page 9. @@@@To close the cassette tray, press the 5 (open/close) button again.

for details , refer to page 7. @@@@This results in noise or a loss of high frequencies. @@@@ • Press to reverse the direction of tape playback or recording. □ Press this button to rewind the front side of the tape. (The back side NOTE: • Be sure to press the 2 (stop) button to stop recording before turning off the power or unplugging the power supply cord. @@@@It will not detect blank spaces that are less than 4 seconds long. Start playing the track on the CD receiver. 6 8:50 □□□ 10 ENGLISH 10 SYSTEM FUNCTIONS 2 Operation is even easier when the components in the RCD-M33/M35DAB is connected to the DRR-M33 with system connections. (For instructions on connections , refer to “CONNECTIONS” on page 5 and refer to the respective operating instructions of CD receiver (RCD-M33/M35DAB). @@They will not work with other components.

@@@@ (Refer to “PART NAMES AND FUNCTIONS” on page 6. @@@@6 (rewind) button 7 (fast-forward) button Press this button to rewind the front side of the tape. (The back side of the tape is fast-forwarded.) Also use this button to search for the beginning of the current selection when playing in the forward (1) direction, or to search for the beginning of the following selection when playing in the reverse (0) direction. Press this button to fastforward the front side of the tape.

(The back side of the tape is rewind.) Also use this button to search for the beginning of the following selection when playing in the forward (1) direction, or to search for the beginning of the current selection when playing in the reverse (0) direction. 1 (forward play) button 0 (reverse play) button Press this to start playback or recording in the reverse direction. Press this to start playback or recording in the forward direction. 6 8:50 □□□ 11 ENGLISH (2) Auto power on function (when connected to the RCD-M33/M35DAB) 2RCD-M33/M35DAB (RC-999) • Recording starts automatically.

□ When playback on the CD receiver ends, the CD receiver is automatically set to the stop mode and the DRR-M33 is set to the recording pause mode. □ To stop recording in the middle, press the 2 (stop) button on the CD receiver to stop playback of the CD. NOTES: • The editing function will not work with discs containing more than 26 tracks. □ Load the cassette tape onto which you want to record into the cassette deck's cassette tray with side A facing up before starting edited recording. The beginning of the tape is automatically found before recording starts. □ When using a recorded cassette tape for edited recording, recording stops and a blank section is left on side B of the tape if the tape is longer than the set time, so erase the tape beforehand.

@@@@To cancel the editing mode, press the 2 (stop) button on the DRR-M33 or the CD receiver to stop playback of the CD. The editing mode is not canceled if other buttons are pressed. 6 8:50 □□□ 13 ENGLISH 11 TROUBLESHOOTING Check the following before you draw the conclusion that your Stereo Cassette Deck is malfunctioning: 1. Are all the connections correct? 2.

Are all system components being operated correctly in accordance with the operating instructions? If the tape deck still does not function properly, check the symptom against the list below. If the symptom does not correspond to the check list, please contact your DENON dealer. Symptom Recording does not start when REC button is pressed. Sound is broken or no sound is produced during recording and playback. Humming sound is heard while playing cassette tapes.

□ Cover the tab holes with cellophane tape. Page 7 6 6 – 12 OTHER INFORMATION Cleaning the Heads • If the cassette deck's head are dirty, tapes cannot be played or recorded with good sound quality. @@@@ avoid using such cleaning cassettes. @@This results in noise or a loss of the treble sound. @@ • Noise from a TV.

(Noise may be produced by some types of TVs. □ Move the TV away from the system. 4 13 SPECIFICATIONS – 6 Type: Heads: Tape speed: Noise reduction: Usable tapes: Power supply: Power consumption: Maximum external dimensions: Mass: Horizontal 4-track 2-channel stereo auto reverse cassette deck 1 hard permalloy recording/playback head 1 double-gap ferrite erasing head 4. 75 cm/s Dolby B NR Normal, High (TYPE I, II) The metal tapes (TYPE IV) can only be used for playback AC 230 V, 50 Hz 9W 210 (W) x 95 (H) x 325 (D) mm (including feet, controls and terminals) 3. (W) = width, (H) = height, (D) = depth • For improvement purposes, specifications and functions are subject to change without advanced notice.

2 Manufactured under license from Dolby Laboratories. 2 “DOLBY” and the double-D symbol are trademarks of Dolby Laboratories. 12 8:56 □□□ 2 SVENSKA 4 ANSLUTNING Anslutning till RCD-M33/M35DAB 2 Vid anslutning till en annan receiver än den för RCD-M33/M35DAB behöver anslutning 3 inte göras. □ Se till att höger och vänster kanaler ansluts rätt (höger till höger och vänster till vänster). □ Vid anslutning till RCD-M33/M35DAB, anslut till TAPE IN-kontakterna på CD-receivern (RCDM33/M35DAB).

7 Analoga linjeingångar (LINE IN) o 6 (återspolning)-tangent • När dessa ingångar ansluts till bandutgångarna på receivern, kan du spela in ljud från de ljudkällor som anslutits till enheten på DRRM33. □ Vid anslutning till RCD-M33/M35DAB, anslut till TAPE OUT-kontakterna på CD-receivern (RCDM33/M35DAB). .



[You're reading an excerpt. Click here to read official DENON DRR-M33 user guide](http://yourpdfguides.com/dref/5129843)

<http://yourpdfguides.com/dref/5129843>