



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DENON DVD-1400. You'll find the answers to all your questions on the DENON DVD-1400 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.


User manual DENON DVD-1400
User guide DENON DVD-1400
Operating instructions DENON DVD-1400
Instructions for use DENON DVD-1400
Instruction manual DENON DVD-1400

DENON

DVD AUDIO-VIDEO/SUPER AUDIO CD PLAYER

DVD-1400

OPERATING INSTRUCTIONS
BEDIENUNGSANLEITUNG
ISTRUZIONI PER L'USO
MODE D'EMPLOI
GEBRUIKSAANWIJZING
INSTRUCCIONES DE FUNCIONAMIENTO
BRUKSANVISNING

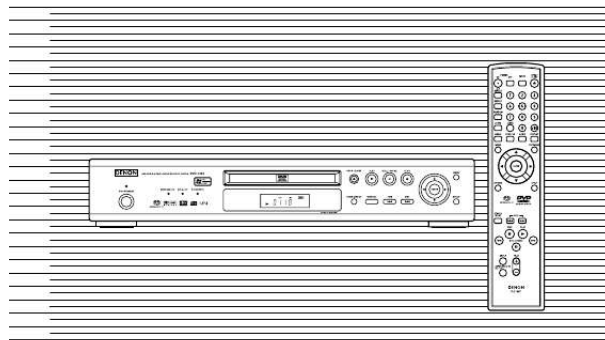

[You're reading an excerpt. Click here to read official DENON DVD-1400 user guide](http://yourpdfguides.com/dref/2466956)
<http://yourpdfguides.com/dref/2466956>

Manual abstract:

@@@ CAUTION: CAUTION: LOCATION: *PRINTED ON THE BACK USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED. DO NOT STARE INTO BEAM. Nonuse periods - Turn the unit off when it is not in use. Unplug the unit from the household AC outlet if it is not to be used for a long time. Unplug the unit during lightning storms. 2 EN PRECAUTIONS Important Use only discs marked DVD or disc with this DVD player. Caution 1) Do not attempt to open the cabinet. There are no parts you can service inside. Refer all servicing to qualified service personnel.

2) Slot and openings in the cabinet and at the side or bottom are provided for ventilation. To ensure reliable operation and to protect the unit from overheating these opening must not be blocked or covered. Avoid enclosed spaces such as book cases unless proper ventilation is provided. 3) Keep the unit away from the radiator heat sources. 4) Avoid using near strong magnetic fields.

5) Do not push objects of any kind into this through the cabinet slot as they could touch current carrying parts or short circuit parts resulting in a fire or electric shock. 6) Never spill liquid of any kind on this unit. If liquid is spilled into the unit, consult qualified service engineer. 7) Use this unit in a horizontal (flat) position only. 8) This equipment is in Stand-by mode when it turns off whilst the power cord is connected.

9) Keep the set free from moisture, water and dust. 10) Handle the power cord carefully. Hold the plug when unplugging the cord. 11) All the safety cautions and operating instructions should be read before the DVD player is operated. 12) Use caution not to pinch your finger in the disc slot. 13) Do not put heavy objects on the AC power cord. 14) Keep the AC power cord away from heat appliances. 15) Be sure to remove a disc and unplug the AC power cord from the outlet before carrying the DVD player. 16) Do not put any pressure to the DVD player when carrying. 17) Do not use the DVD player outdoors.

Power Supply The main power supply is engaged when the main plug is plugged in a 220-240V, 50Hz AC outlet. To operate the unit, press the ON/STANDBY button to turn on the unit. **Warning** To avoid fire or electric shock, do not expose this unit to rain or moisture. **WARNING: LIVE PARTS INSIDE. DO NOT REMOVE ANY SCREWS.** **Dew Warning** Moisture condensation may occur inside the unit when it is moved from a cold place to a warm place, or after heating a cold room or under conditions of high humidity. Do not use the DVD Player at least for 2 hours until its inside is dry. **Declaration of Conformity** We declare under our sole responsibility that this product, to which this declaration relates, is in conformity with the following standards: EN60065, EN 55013, EN55020, EN61000-3-2 and EN61000-3-3. Following the provisions of 73/23/EEC, 89/336/EEC and 93/68/EEC Directive. 3 EN English **TABLE OF CONTENTS I PRECAUTIONS .**

.....

.....

.....

..... 2 Laser Safety .

.....

.....

.....

.....
.. 2 Important . .

.....

.....

.....
... 3 Power Supply . .

.....

.....

.....

3 Warning.....

.....

.....

.....

..... 3 Dew Warning. . .

.....

.....

.....

3 Caution

.....

.....

.....

..... 3 Declaration of Conformity . . .

.....

.....
.....
3 1 INTRODUCTION
.....
.....
.....
5 About Copyright.
.....
.....
.....
5 Supplied Accessories.
.....
.....
..... 5 Symbols Used in this Manual. .
.....
.....
.....
..... 5 1 ABOUT THE DISCS .
.....
.....
.....
.....
6 Playable Discs. ...
.....
.....
.....
.....
.....
..... 6 Disc Types ..
.....
.....
.....
.....
..... 6 1 FEATURES
.....
.....
.....
..... 7 1 FUNCTIONAL OVERVIEW
.....
.....
..... 8 FRONT PANEL ..
.....
.....
.....
..... 8 REMOTE CONTROL ...
.....
.....
.....
..... 8 Tour of the remote control ...
.....
.....
.....
..... 9 Display
.....
.....
.....
.....
..... 11 Displays During Operation
.....
.....

... 11 Loading the Batteries

.....

.....

..... 11 I CONNECTIONS .

.....

.....

.....

..... 12 Description - rear panel ..

.....

.....

.....

.. 12 Connection to an audio system

.....

13 Connection to a 5.1-channel Surround Sound system . 14 Connection to a TV (for video) ...

.....

.....

. 15 I PLAYING A DISC

.....

.....

..... 16 Basic Playback .

.....

.....

.....

..... 16 CANCELLING AND CALLING BACK THE PBC FUNCTION .

.....

.....

.....

.. 16 General Features

.....

.....

.....

. 16 Pure Direct Mode

.....

.....

.....

16 Pause

.....

.....

.....

..... 16 Disc Menus ...

.....

.....

.....

.....

16 Title Menu

.....

.....

.....

.... 16 CALLING UP A MENU SCREEN DURING PLAYBACK

.....

.....

.....

..... 16 Step by Step Playback

.....
.....
.....

17 Resume.....

.....
.....
.....

..... 17 Fast Forward / Reverse Search

.....
.....

..... 17 Slow Forward / Slow Reverse

.....

... 17 Zoom .

.....
.....

.....

.....

. 17 Track

.....
.....

..... 18 Title / Chapter Search .

.....
.....
.....

..... 18 Page Selection

.....
.....

..... 18 Playing From a Desired Group.

.....

... 18 Playback of the Bonus Group . .

.....
.....

.. 18 Time Search

.....
.....
.....

..... 18 Repeat

.....
.....
.....

19 REPEAT TITLE / CHAPTER.....

.....

..... 19 REPEAT TRACK .

.....
.....
.....

..... 19 A-B REPEAT

.....
.....
.....

..... 19 Program (CD/SUPER AUDIO CD/DVD-A).....

..... 19 Playback of All Groups....

.....

.....

.....

. 20 Random Playback (CD/SUPER AUDIO CD/DVD-A) ... 20 MP3 / JPEG / WMA Playback.....

.....

.....

... 20 Slide Show Mode.....

.....

.....

.....

. 21 On-Screen Information.....

.....

.....

. 21 Track Selection....

.....

.....

.....

. 21 Random Playback (MP3/JPEG/WMA).....

..... 22 Program (MP3/JPEG/WMA).

.....

.....

.....

22 Audio Language or Sound Mode.....

..... 22 Stereo Sound Mode....

.....

.....

.....

.... 23 Subtitle Language.....

.....

.....

.....

.. 23 Camera Angle.....

.....

.....

.....

... 23 Changing the On-Screen Display.....

.....

.....

23 Marker Setup Screen.....

.... Virtual Surround.....

.....

.....

.. DVD SETUP.....

.....

.. Language Setting....

.....

..... Display Setting ..

.....

.....

. Audio Setting.....

.....

..... Speaker Setting

.....

.....

.... Ratings Control

.....

.. RATING LEVEL ...

.....

..... IF YOU FORGET THE PASSWORD CONTROL LEVELS ..

.....

. MAINTENANCE

.....

..... TROUBLESHOOTING GUIDE ..

..... SPECIFICATIONS

.....

.....

. PIN CONNECTION

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 24 24 25 25 25 26 26 27 27 27 27 29 30 31 31 I I I I I 4 EN INTRODUCTION A NOTE ABOUT RECYCLING This product's packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with your local recycling regulations.



[You're reading an excerpt. Click here to read official DENON](#)

[DVD-1400 user guide](#)

<http://yourpdfguides.com/dref/2466956>

Batteries should never be thrown away or incinerated but disposed of in accordance with your local regulations concerning chemical wastes. The serial number of this product may be found on the back of the DVD player.

No others have the same serial number as yours. You should record the number and other vital information here and retain this book as a permanent record of your purchase to aid identification in case of theft. Serial numbers are not kept on file. Date of Purchase Dealer Purchase from Dealer Address Dealer Phone No. Model No.

Serial No. About Copyright Unauthorized copying, broadcasting, public performance and lending of discs are prohibited. This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners.

Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited. Apparatus Claims of U. S. Patent Nos, 4,631,603, 4,577,216, 4,819,098, and 4,907,093 licensed for limited viewing uses only. Supplied Accessories Please check to make sure the following items are included with the main unit in the carton. Remote Audio "AA" (R6P) control 1 batteries 2 cable 1 Video cable 1 Service Station Operating Instructions . . . 1 List 1 (approx. 3 feet (100 cm) long) (approx. 3 feet (100 cm) long) Symbols Used in this Manual The following symbols appear below in some headings and notes in this manual, with the following meanings! DVD-A : DVD-V : CD SUPER AUDIO CD 0 Description refers to playback of DVD-Audio discs. Description refers to playback of DVD-Video discs.

Description refers to playback of Audio CDs. Description refers to playback of Super Audio CDs. Description refers to playback of discs formatted with MP3.

Description refers to playback of Video CDs. Description refers to viewing of JPEG discs. Description refers to playback of discs formatted with w2 tion may result.) ;CD-ROM ;VSD ;CDV (Only the audio part is played back.) ;CD-G (Only plays back the sound.) ;CD-R/CD-RW (Only discs on which CD/MP3/JPEG/WMA Track 2 audio has been recorded can be played.) ;CD-I (Never play back since malfunction may result.

) ;Photo CD (Never play back since, malfunction may result.) CAUTION: Any other discs without compatibility indications. ;Use caution not to pinch your finger in the disc slot. ;Be sure to remove the disc and unplug the AC power cord from the outlet before carrying the DVD player. 6 EN FEATURES ;Analogue 5.

1-channel Dolby and DTS surround output This player is equipped with analogue 5.1-channel Dolby and DTS surround audio out jacks for playback.

;Still/fast/slow/step playback Various playback modes are available including still pictures, fast forward/reverse, slow motion and step frames. ;Random playback for audio CD, Super Audio CD, MP3, JPEG, DVD-Audio, and WMA This player can shuffle the order of tracks to play them in random order. ;Programme playback for audio CD, Super Audio CD, MP3, JPEG, DVD-Audio, and WMA You can program the order of tracks and play them in any desired order.

;DVD menus in a desired language You can display DVD menus in a desired language, if available on a DVD. ;Auto standby When the screen saver program is activated for 35 minutes, the power is automatically turned off. ;Subtitles in a desired language You can select a desired language for the display subtitles, if that language is available on a disc. ;Selecting a camera angle You can select the desired camera angle, if a disc contains sequences recorded from different angles. ;Choices for audio language and sound mode You can select the desired audio language and sound mode, if different languages and modes are available on a disc. ;Parental lock You can set the control level to limit playback of discs which may not be suitable for children. ;Automatic detection of discs This player automatically detects if a loaded disc is a DVD-Video, DVD-Audio, Video CD, Audio CD, Super Audio CD, MP3, JPEG or WMA disc.

;Playing an MP3 disc You can enjoy MP3 files which are recorded on CDR/RW discs. ;Direct Search You can search for the desired title, chapter, and track with the numeric buttons during playback or in the stop mode. ;On-screen display Information about the current operation can be displayed on a TV screen, allowing you to confirm the currently active functions (such as program playback), on the TV screen using the remote control.

;Search Group search: Search for a group is possible. Page search: Search for a page is possible. Chapter search: Search for a chapter is possible. Title search: Search for a title is possible. Track search: Search for a track is possible. Time search: Search for a specific time is possible. ;Repeat Chapter: Repeated playback of a chapter on the disc being played is possible. Title: Repeated playback of a title on the disc being played is possible. Track: Repeated playback of a track on the disc being played is possible. ALL: Repeated playback is possible.

(excluding DVD-Video) A-B: The part between A and B points as designated by the user is possible. Group: Repeated playback of a folder on a MP3/JPEG/WMA/DVD-Audio disc being played is possible. ;Zoom A 2-time or 4-time magnified screen can be displayed. ;Marker The part designated by user can be called back. ;Resume Play It is possible to resume playback from the point at which play was stopped even if the power was switched off. ;Component Video Out Jacks Jacks located on the back of the DVD Player which are used to send high-quality video to a TV via the Component Video In Jacks. ;Dimmer The brightness of the display can be varied. ;Bit rate indication ;DRC (Dynamic range control) You can control the range of sound volume. ;MPEG sound This player can play discs that supports MPEG audio, and the DVD player is connected to a MPEG decoder. ;Displaying a JPEG picture (NOTES 1) Kodak Picture CDs can be played.

Still images stored in the JPEG format on CD-R/RW discs can also be played. ;Reproducing WMA data (NOTES 2) You can enjoy WMA files which are recorded on CD-R/RW discs. ;Pure Direct Mode You can enjoy higher quality audio by stopping the video signal and display.



[You're reading an excerpt. Click here to read official DENON DVD-1400 user guide](http://yourpdfguides.com/dref/2466956)
<http://yourpdfguides.com/dref/2466956>

"Kodak Picture CD COMPATIBLE" is trademark of Eastman Kodak Company. "WMA" (Windows Media Audio) is a new audio codec developed by Microsoft® in the United States of America. 7 EN English English FUNCTIONAL OVERVIEW FRONT PANEL 1 35 2 3 4 5 6 7 8 36 REMOTE CONTROL 34
15 14 13 12 11 10 9 31 1 16 17 18 19 20 21 8 10 7 22 28 27 26 3 30 29 1. 2. 3. 4. 5.

6. 7. 8. 9. 10. 11. 12. 13. 14. 15.
16. 17. 18. 19. 20.
21. 22. 23. 24. 25.
26. 27. 28. 29. 30. 31. 32. 33. 34. 35.

36. 37. 9 12 23 6 24 11 4 25 5 33 32 37 0 The buttons with circled numbers can only be operated with the remote control. ON/STANDBY, (POWER ON/OFF) Buttons [page 16] Disc loading tray OPEN/CLOSE Button [page 16] PLAY Button [page 16] STILL/PAUSE Button [page 16] STOP Button [page 16] Cursor Buttons [page 16] Use when making settings while watching the display on a TV screen. MENU Button [page 16] SETUP Button [page 25] ENTER Button [page 16] G (SKIP UP/FWD) Button [page 18] Plays back from the beginning of the next chapter or track. Hold down to fast forward playback. H (SKIP DOWN/REV) Button [page 18] Plays back from the beginning of the current chapter or track. Hold down to fast reverse playback. VIRTUAL Button [page 24] PURE DIRECT Button [page 16] Display, Remote Sensor Window A-B REPEAT Button [page 19] REPEAT Button [page 19] RANDOM Button [page 20] ZOOM Button [page 17] CLEAR Button [page 18] ANGLE Button [page 23] Press to change the camera angle and see the same sequence being played back from a different angle. RETURN Button [page 22] SEARCH MODE Button [page 18] h (FR SEARCH) Button [page 17] g (FF SEARCH) Button [page 17] SUBTITLE Button [page 23] Press to select a desired subtitle language.

TOP MENU Button [page 16] DISPLAY Button [page 21] AUDIO Button [page 22] Press to select a desired audio language or sound mode. Numeric Buttons [page 18] MODE Button [page 19] GROUP Button [page 18] PAGE Buttons [page 18] PURE DIRECT Indicator This indicator lights when PURE DIRECT is ON. DVD AUDIO Indicator This indicator lights when playing discs recorded in the DVD-Audio format. SUPER AUDIO CD Indicator This indicator lights when playing a Super Audio CD. SUPER AUDIO CD SET UP Button [page 23] 8 EN FUNCTIONAL OVERVIEW Tour of the remote control Buttons on remote control work in different ways for DVD, VCD, and CD : Refer to the following table for correct use.

DVD POWER · Press this to switch the power between on and standby. A-B REPEAT Button · Press this to switch the power between on and standby. · Press this to switch the power between on and standby. VCD CD · Marks a segment to be repeated between A and B. · Allows you to repeat play of a Group (For DVD-Audio), Title, or Chapter.

(For DVD-Audio) · Allows you to shuffle the playing order of groups and tracks. · To activate 3D sound (Virtual surround system). · Marks a segment to be repeated between A and B. · Allows you to repeat play of a Track or Disc. · Marks a segment to be repeated between A and B. · Allows you to repeat play of a Track or Disc. · Allows you to shuffle the playing order of tracks. REPEAT Button RANDOM Button MODE Button · To activate 3D sound (Virtual surround system). · Allows you to program a specific order or random playback. · To activate 3D sound (Virtual surround system).

ZOOM Button · To magnify a part of the picture · To magnify a part of the picture (x2). (x2/x4). · Accesses various camera angles on the disc. ANGLE Button SUBTITLE Button · Accesses various subtitles on the disc. · Accesses various audio functions · To select STEREO, L-CH or R-CH. · To select STEREO, L-CH or R-CH. on the disc. · Displays the current disc mode. · Displays the current disc mode. AUDIO Button DISPLAY Button · Displays the current disc mode. SEARCH MODE Button · To search for a chapter, · To search for a track or specific time. · To search for a track or specific time. title or specific time. · To rapidly return to a specific location · To rapidly return to a specific location · To rapidly return to a specific location on the disc. on the disc. OPEN/CLOSE Button · To open or close the disc tray. · To open or close the disc tray. · To open or close the disc tray. NUMERIC Buttons · To select chapter directly.

· To select a track directly. · To select a track directly. CLEAR Button · Clear the markers. · Clear the markers. · Clear the markers. · Removes status No. in program input. 9 EN English FUNCTIONAL OVERVIEW Tour of the remote control DVD MENU Button VCD CD · Brings up the Menu on a disc. TOP MENU Button · Brings up the Top Menu on a disc. ENTER, CURSOR Buttons · Moves the cursor and determines its position.

RETURN Button · Moves the cursor and determines · Moves the cursor and determines its its position. position. · Returns to the previous menu. SETUP Button · Returns to the previous menu. · Brings up the DVD player's Setup menu. · To skip Chapters. (For DVD-Audio) · To skip Tracks. · Allows you to search forward/backward through a disc (x2. x8. x50.

x100). · Brings up the DVD player's Setup menu. · Brings up the DVD player's Setup menu. SKIP Buttons · To skip Tracks. · To skip Tracks. SEARCH Buttons · Allows you to search forward/backward through a disc (x2. x8. x30). · Allows you to search forward/backward through a disc (x16). STOP Button · To stop playback.

· To stop playback. · To stop playback. PLAY Button · Begin disc play. STILL/PAUSE Button · Begin disc play. · Begin disc play. · Pause disc play. · Advances playback one frame at a time. · Pause disc play. · Advances playback one frame at a time. · Pause disc play.

GROUP Button (For DVD-Audio) · To select the group to be played back. PAGE Buttons (For DVD-Audio) · To select the image to be displayed. SUPER AUDIO CD SET UP Button (For SUPER AUDIO CD) · Displays playback options (MULTI-CH, CD AREA, 2CH). 10 EN FUNCTIONAL OVERVIEW Display Lights when repeat title function is on. Lights when the repeat function is on. Lights when the A-B repeat function is on. Lights when the inserted disc is being played back. Lights when repeat chapter function is on. Lights when repeat track function is on. Lights up when a DVD is inserted into the tray. (The DVD AUDIO Indicator also lights up when playing a DVD-Audio disc.) Lights up when the inserted disc comes to a pause.



[You're reading an excerpt. Click here to read official DENON DVD-1400 user guide](http://yourpdfguides.com/dref/2466956)
<http://yourpdfguides.com/dref/2466956>

CD: Lights up when a CD is inserted into the tray. (The SUPER AUDIO CD Lights up when a Indicator also lights up when playing playback control a Super Audio CD.) is activated.

VCD: Lights up when a Video CD is inserted into the tray. Displays how long the current title or track has played. When the chapter or track changes, the number of the new title, chapter or track is displayed. Displays During Operation Power on No disc inserted Loading the Batteries 1. Open the battery compartment cover.

2. Insert two "AA" (R6P) batteries, with each one oriented correctly. Tray open Tray closed 3. Close the cover. Loading the Disc NOTES Power off · Do not mix alkaline and manganese batteries. · Do not mix old and new batteries. Cautions On Batteries · Use "AA" (R6P) batteries in this remote control unit. · Replace the batteries with new ones approximately once a year, though this depends on the frequency with which the remote control unit is used. · If the remote control unit does not operate from close to the main unit, replace the batteries with new ones, even if less than a year has passed. · The included battery is only for verifying operation.

Replace it with a new battery as soon as possible. · When inserting the batteries, be careful to do so in the proper direction, following the and marks in the remote control unit's battery compartment. · To prevent damage or battery fluid leakage: · Do not use a new battery with an old one. · Do not use two different types of batteries. · Do not short-circuit, disassemble, heat or dispose of batteries in flames. · Remove the batteries when not planning to use the remote control unit for a long period of time. · If the batteries should leak, carefully wipe off the fluid from the inside of the battery compartment, then insert new batteries. 11 EN English CONNECTIONS Description - rear panel AVI 2 1 3 4 5 6 7 1. DIGITAL OUT JACKS Use either an optical or coaxial digital cable to connect to an AV amplifier with a built-in decoder (AV control centre). 2.

2ch AUDIO OUT JACKS (Extra jacks for analogue audio) Connect to the Audio input jacks of A/V-compatible TV or wide screen TV, Stereo system. (The sound of DVD-Audio and Super Audio CD discs is not output.) 3. VIDEO OUT JACK Use a video cable to connect this jack to the Video input jack on your A/V-compatible TV, widescreen TV or Stereo system. 4.

COMPONENT VIDEO OUT JACKS Use these jacks if you have a TV with Component Video in jacks. These jacks provide CR, CB and Y video. Together with S-Video, Component Video provides the best picture quality. 5. S-VIDEO OUT JACK Use the S-Video cable to connect this jack to the S-Video jack on your A/V-compatible TV or widescreen TV for a higher quality picture.

6. AVI JACK Connect to the 21-pin scart jack of a TV. (The sound of a DVD-Audio and a Super Audio CD is not output.) 7. 5.1ch AUDIO OUT JACKS Use the speaker cables to connect these jacks to the 5.1ch AUDIO IN jacks on your AV amplifier with 5.1-channel input terminals. NOTES · Be sure not to use both the AVI jack and component Video jacks for video output at the same time. · When changing the VIDEO OUT setting (SCART or COMPONENT), connect to a VIDEO jack or an S-VIDEO jack on the TV.

If the setting is changed, for example, to COMPONENT while the AVI jack is connected to the TV, a distorted video signal may be output. Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Manufactured under license from Digital Theater Systems, Inc. US Pat. No. 5,451,942, 5,956,674, 5,974,380, 5,978,762 and other world-wide patents issued and pending. "DTS" and "DTS Digital Surround" are registered trademarks of Digital Theater Systems, Inc. Copyright 1996, 2000 Digital Theater Systems, Inc. All Rights Reserved.

12 EN CONNECTIONS The following show examples of connections commonly used to connect the DVD player to a TV and other components. If using this DVD player to play back a DVD in the 5.1 channel Dolby Digital surround or DTS surround format, the DVD player outputs a Dolby Digital or DTS data stream from its OPTICAL or COAXIAL DIGITAL AUDIO OUT jacks. 5.1 channel Dolby Digital Surround sound and DTS sound can also be output from the 5.

1 CH OUTPUT jacks. By connecting the player to a Dolby Digital or DTS decoder, you can enjoy a more convincing, realistic ambience with powerful and high-quality surround sound of a professional standard, similar to that experienced cinemas. Use a coaxial or optical digital audio cable (not included) for the audio connections. Use audio cables (commercially available) for the 5.1 CH audio connection.

Notes ;Be sure to switch off the power to all components in the system before connecting another component. ;Refer to the Instruction Manuals for your TV, stereo system and any other components to be connected to the DVD player. Connection to an audio system Method 1 Method 2 Stereo system Dolby Digital decoder, DTS decoder or MPEG decoder Digital Audio Input Jacks AUDIO Audio Input Jacks DVD Analogue Audio Out Digital Audio Out · Method 1 DVD Player + Stereo system · Method 2 DVD Player + Dolby Digital decoder, DTS decoder or MPEG decoder NOTES · If output Dolby Digital audio, connect to a Dolby Digital decoder, and set Dolby Digital to on for audio output in the setup mode. (See page 26) · If output DTS audio, connect to a DTS decoder, and set DTS to ON for audio output in the setup mode. (See page 26) · If output MPEG audio, connect to a MPEG decoder, and set MPEG to ON for audio output in the setup mode. (See page 26) · Unless connected to a Dolby Digital decoder, a DTS decoder or an MPEG decoder, set Dolby Digital, DTS and MPEG to OFF for audio output in the setup mode. Playing a DVD using incorrect settings may generate noise distortion, and may also damage the speakers. (See page 26) · The audio source on a disc in a 5.1 channel Dolby Digital surround format cannot be recorded as digital sound by an MD or DAT deck. · Set Dolby Digital, DTS and MPEG to OFF for audio output in the setup mode for method 1 only.

Playing a DVD using incorrect settings may generate noise distortion, and may also damage the speakers. (Refer to page 26 to set ON for Dolby Digital, DTS and MPEG) · DVD-Audio and Super Audio CD sound is not output from the 2ch AUDIO OUT jacks and AVI jacks. · Super Audio CD sound is not output as digital sound. · Optical cable (not supplied) may be damaged when bent at sharp angles. Ensure cables are coiled in loops with a diameter of 15 cm or more when storing them. · Use a cable which is 3m or shorter. · Insert cable plugs firmly into the connectors when making connections. · If a plug has minor scratches or is dirty, clean it with a soft cloth before inserting it into a connector.



[You're reading an excerpt. Click here to read official DENON](http://yourpdfguides.com/dref/2466956)

[DVD-1400 user guide](http://yourpdfguides.com/dref/2466956)

<http://yourpdfguides.com/dref/2466956>

Optical cable (not supplied) 13 EN English CONNECTIONS Connection to a 5.1-channel Surround Sound system Analogue 5. 1-channel audio signals can be output from the DVD player. Multi-channel audio signals recorded in packed PCM format can be played when an AV amplifier equipped with analogue 5.1-channel audio inputs is connected. Centre speaker Method 1 Front speaker (left) Front speaker (right) Subwoofer Surround speaker (left) AV amplifier with 5.1-channel input terminals Surround speaker (right) AUDIO To 5.

1ch Audio IN Jacks DVD 5.1ch Audio OUT 14 EN CONNECTIONS Connection to a TV (for video) Basic Audio Method 1 Good picture VIDEO IN Method 2 Better picture S-VIDEO IN Method 3 Best picture 21-pin Scart jack COMPONENT VIDEO IN CR Y CB TV R L Video Cable AV Cable S-Video Cable Euro audio/video Cable or DVD Analogue Audio out Video out S-Video out AV1 out Component Video out · Method 1 DVD Player + TV with Video Input Jack · Method 2 DVD Player + TV with S-Video Input Jack · Method 3 DVD Player + TV with AV1 Jack or DVD Player + TV with Component Video Jacks NOTES · Connect the DVD player directly to a TV. If the A/V cables are connected to a VCR, pictures may be distorted due to the copy protection system. · S-Video output connector The video signals are divided into color (C) and brightness (Y) signals, achieving a clearer picture. If the TV is equipped with a S-Video input connector, we recommend connecting it to the this product's S-Video output connector using a commercially available S-Video connection cord. · DVD-Audio and Super Audio CD sound is not output from the 2ch AUDIO OUT jacks and AV1 jacks. HOW TO CONNECT TO A TV WITHOUT AUDIO/VIDEO INPUT JACKS If your TV does not have RCA type audio and video input jacks it is still possible to connect this DVD player to your TV's 75-ohm coaxial antenna terminal using an optional Stereo Audio/Video RF Modulator, not included. Connect the audio and video outputs of the DVD player to the audio and video inputs on the RF Modulator, and then connect the coaxial output of the RF Modulator (usually marked "TO TV") to the 75 ohm coaxial antenna terminal on your TV. Follow the instruction supplied with the RF Modulator for more details. If your TV's 75 ohm coaxial antenna terminal is already occupied by an antenna or cable box connection, remove that cable from your TV's antenna terminal and reconnect it to the coaxial antenna input terminal of the RF Modulator (usually marked "ANT IN"), then connect the RF modulator to your TV's antenna terminal as described above. NOTE · The picture quality from DVD discs will not be as good if the DVD player is connected to the TV's antenna terminal through an RF Modulator. 15 EN English PLAYING A DISC Basic Playback NOTES: · In the SETUP menu, the pure direct mode is not available. · When any of the buttons below are pressed, the pure direct mode will be released. SETUP or OPEN/CLOSE button (on both the remote control and the front panel), OFF or DISPLAY button (on the remote control), ON/STANDBY or PURE DIRECT button (on the front panel). · The PURE DIRECT button does not function while the SETUP menu is displayed.

DVD-A DVD-V Getting started · VCD CD SUPER AUDIO CD Turn on the power of the TV, amplifier and any other components which are connected to the DVD. Make sure the TV and audio receiver (commercially available) are set to the correct channel. 1 Press the POWER ON button. · "P-ON" will appear briefly on the display panel. 2 Press the OPEN/CLOSE button to open disc loading tray. 3 Place the disc in the tray, with the Pause label facing up. DVD-A DVD-V STILL/PAUSE button. VCD CD MP3 SUPER AUDIO CD WMA F 4 Press the PLAY button. · The tray closes automatically, and playback then starts from the first chapter or track on the disc. If playback does not start automatically, press the PLAY button. · When you play back a DVD on which a title menu is recorded, it may appear on the screen. In this case, refer to "TITLE MENU". 5 Press the STOP button to stop playback. 1 During playback, press the · Playback will pause and sound will be muted. 2 To continue playback, press the PLAY button. NOTES: · A "prohibited icon" may appear at the top-right on the TV screen during operation, warning that a prohibited operation has been encountered by the DVD player or the disc. · With DVDs that use some titles for playback program signals, playback may start from the second title, or it may skip these titles. · During the playback of two layered disc, pictures may stop for a moment. This happens when the 1st layer switches to the 2nd layer. This is not a malfunction. · The operation may vary when you playback DVDs with disc menu or Video CDs with PBC. Refer to the manual accompanying the disc for details. Disc Menus DVD-V 1 Press the MENU button. · The DVD main menu will appear. 2 If the feature is not available, symbol may appear on the TV screen. 3 If disc menu is available on the disc, audio language, subtitle options, chapters for the title and other options will appear for selection. 4 Press the cursor buttons (L / K / B / s) to select an item, and the ENTER button to confirm selection. CANCELLING AND CALLING BACK THE PBC FUNCTION Title Menu DVD-A DVD-V VCD 1 Press the TOP MENU button. · The title menu will appear. 2 If the feature is not available, 1 Insert a Video CD. · Playback starts automatically. 2 Press the STOP button. 3 Press the numeric buttons to enter the desired Track number. · The PBC function is now cancelled and playback of the Video CD will start. 4 To recall the PBC function, press the STOP button symbol may appear on the TV screen. 3 Press the cursor buttons (L / K / B / s) to select an item, and the ENTER button to confirm selection. · Playback will begin at the selected Title. twice, and then press the PLAY button. · The title menu appears on the display. VCD 1 When playing a Video CD with the PBC function, the title menu appears automatically. 2 Press the numeric buttons to select the desired General Features DVDs may contain menus to navigate the disc and access special features. Press the appropriate numeric button key or use the cursor buttons (L / K / B / s) to highlight your selection in the DVD main menu, and press the ENTER button to confirm. title. · Playback will begin at the selected title. 3 Press the RETURN button to go back to the title menu. CALLING UP A MENU SCREEN DURING PLAYBACK NOTE: · Unless otherwise stated, all operations described are based on remote control use. Some operations can be carried out using the menu bar on the TV screen.



[You're reading an excerpt. Click here to read official DENON](#)

[DVD-1400 user guide](#)

<http://yourpdfguides.com/dref/2466956>

DVD-V · Press the MENU button to call up the DVD main menu. Press the TOP MENU button to call up the title menu. · Contents of menus and corresponding menu operations may vary between discs.

Refer to the manual accompanying the disc for details. Pure Direct Mode 1 Press the PURE DIRECT button on the front panel to output analogue audio signals only (No video signal is output, and the display will be switched off.). · The PURE DIRECT indicator will light up. Higher quality sound will be achieved. NOTE: 16 EN PLAYING A DISC Step by Step Playback Slow Forward / Slow Reverse DVD-A DVD-V 1 During playback, press the VCD 1 During playback, F DVD-A DVD-V press the STILL/PAUSE button. VCD STILL/PAUSE button. · Playback will pause and sound will be muted. 2 Press the g or h button. · Slow motion playback will begin and sound will be muted.

3 Press the g or h button D Button 2 The disc advances by one frame each time the repeatedly to select the required speed: 1/16, 1/8, 1/2 of the normal playback. 1/16 STILL/PAUSE button is pressed. 3 To exit step by step playback, press the PLAY button. Resume DVD-A DVD-V STOP button. CD SUPER AUDIO CD VCD desired speed, release the button. 4 To return to normal playback, press the PLAY button. NOTES: · Slow Forward and Slow Reverse are not available when playing a DVD-Audio disc. · Slow Reverse playback is not available when playing a Video CD. · Only Slow Forward is available when playing a Video CD. The forward speed can be selected from 1/16, 1/8 or 1/2.

· If you are using the SKIP H button / the h button on the front panel, press and hold it for more than 1.5 sec (the longer you hold it, the slower the speed will be). When you reach the 1/8 1/2 1 During playback, press the Resume ON Press 'PLAY' to play from here. To play the beginning, press 'STOP' first and then 'PLAY'. · Resume message will appear on the TV screen.

Zoom 2 Press the PLAY button, playback will resume from the point at which playback was stopped. · To cancel resume, press the STOP button twice. DVD-V VCD NOTES: · Resume playback takes a little longer to start compared to normal playback. · Some Video CDs with PBC function resume playback from the beginning of the track. · The resume information stays on even when the power is switched off.

The Zoom function allows you to enlarge the video image and to pan through the enlarged image. 1 Press the ZOOM button during playback. · Playback will continue. 2 Press the ZOOM button repeatedly to select the required zoom factor: x2, x4 or OFF. · Only x2 zoom is available on Video CDs. Fast Forward / Reverse Search x2 x4 DVD-A DVD-V CD SUPER AUDIO CD MP3 repeatedly to select the required forward or reverse speed. VCD WMA 3 Use the cursor buttons (L / K / B / s) to move 1 During playback, press the g or h button · If you are using the SKIP G button / the g button on the front panel, press and hold it for more than 1.5 sec (the longer you hold it, the faster the speed will be). When you reach the desired speed, release the button. · For DVD-Audio discs and DVD-Video discs, the speed 2 8 50 100 the zoomed picture across the screen.

· · · · is x2, x8, x50 or x100. For Video CDs, the playback speed is x2, x8 or x30. For audio CDs, the speed is fixed at x16. For Super Audio CDs, the speed is fixed at x16. For MP3 and WMA the speed is fixed at x8. 4 To exit zoom mode, press the ZOOM button to 2 To return to normal playback, press the PLAY button. OFF. NOTES: · The zoom function does not work while the disc menu is shown. · x4 zoom is not available on some discs. 17 EN English PLAYING A DISC Track Page Selection DVD-A CD SUPER AUDIO CD MP3 VCD WMA DVD-A Some DVD-Audio discs that include still images feature a selection of images you can choose from.

1 During playback, press the There are three ways to begin playback on a DVD-Audio, Audio CD, Super Audio CD, Video CD, MP3 or WMA disc at a specific track. By using the Numeric buttons (except for DVD-Audio) 1 Press the numeric buttons to enter the desired PAGE + or button to select the desired page number to be displayed. 1/12 Track number. · Playback will start at the selected track. · For single digit tracks (1-9), press a single number (eg. track 3, press 3). · To play track 26, press +10, 2, 6 on the numerical button. Playing From a Desired Group DVD-A 1 During playback or in the stop By using the SEARCH MODE button (DVD-Audio/Audio CD/Super Audio CD/Video CD) 1 Press the SEARCH MODE button. · The track search display appears. _ / 15 mode, press the GROUP button.

2 Press the numeric buttons to 1/12 select a group. · The Group will be located and playback will start. Playback of a Bonus Group DVD-A 2 Within 30 seconds, select a desired track number using the numeric buttons. For single digits press "0" first. · Playback will start at the selected track. Some discs are recorded with a Bonus Group that can be played back by entering a password. Refer to disc jackets. 1 In the stop mode, press the SEARCH MODE button NOTE: · When selecting tracks from DVD-Audio discs, playback must first be stopped in the resume mode. to open the group search screen. 2 Press the numeric buttons to select a bonus group number.

· The password popup window appears. DVD-AUDIO BONUS GROUP Please enter a 4-digit password. By using the SKIP buttons H G During playback, press the SKIP G button to move to the next track. Press it repeatedly to skip to subsequent tracks. Press the SKIP H button to go back to the beginning of the current track. Press it repeatedly to go to the previous tracks. · The track number will appear briefly on the DVD display panel. · If any SKIP button is pressed while playback is paused, playback will be paused again after skipping to the next track. 3 Press the numeric buttons to enter the 4-digit password. · When the correct password is entered, playback starts from the top of the bonus group.

NOTES: · In some cases the password window is displayed on the menu screen. Follow the instructions given on the screen. · Once the password is entered, the bonus group can be played back repeatedly until the disc is removed from the disc tray. NOTE: · The SKIP H G buttons do not work when playback is stopped. Title / Chapter Search Time Search DVD-V By using the SEARCH MODE buttons 1 Press the SEARCH MODE button once for the DVD-A DVD-V CD SUPER AUDIO CD VCD 1:23:45 1 During playback, press the SEARCH MODE button three /2 _:__:__ Chapter search, twice for the Title search during playback.



[You're reading an excerpt. Click here to read official DENON](http://yourpdfguides.com/dref/2466956)

[DVD-1400 user guide](http://yourpdfguides.com/dref/2466956)

<http://yourpdfguides.com/dref/2466956>

2 Enter the desired chapter/title times (CD, Super Audio CD, VCD: twice) to display the Time Search menu on the TV screen. 2 Within 30 seconds, enter a desired disc time with the numeric buttons. · Playback will start at the specified time. 3 Press the CLEAR button to erase the incorrect number with the numeric buttons. By using the SKIP buttons H G During playback, press the SKIP G button to move to the next chapter.

Press it repeatedly to skip to subsequent chapters. Press the SKIP H button to go back to the beginning of the current chapter. Press it repeatedly to go to previous chapters. input. 18 EN PLAYING A DISC Repeat · The REPEAT button is available only during playback. NOTES: · The A-B repeat section can only be set within the current title (for DVDs), or current track (for Audio CDs). · A-B Repeat is not available with some scenes in DVD. · To cancel the A point which was set, press the CLEAR button. @@@@1 In stop mode, press the MODE button. · The PROGRAM screen will appear.

@@@@@@@ (Program cleared) · Up to 99 programs can be entered. @@@@@@@@@@@@@@@@@@4 Press the PLAY button to play the programmed tracks. @@@@@@1 In the stop mode, press the RANDOM CD [AUDIO] TOTAL 0:45:55 · A file with an extension of ".mp3 (MP3)" is called an "MP3 file". · A file with an extension of ".jpg (JPG)" or ".jpeg (JPEG)" is called a "JPEG file". The DVD player can reproduce an image file conforming to the Exif* specification. * The Exchangeable Image File format has been established by the Japanese Electronic Industry Development Association (JEIDA). · A file with an extension of "

wma (WMA)" is called a "WMA file". · Files whose extension is another one than ".mp3 (MP3)", ".jpg (JPG)", ".jpeg (JPEG)" or "

wma (WMA)" will not be listed in the MP3, JPEG, or WMA menu. · If the file is not recorded in the MP3, JPEG or WMA format, noise may be produced even if the file extension is ".mp3 (MP3)", ".jpg (JPG)", ".jpeg (JPEG)" or "

wma (WMA)". When a disc with MP3, JPEG or WMA files is inserted in the DVD player, the track menu will appear on the TV screen, and number of tracks is displayed on the front panel. 1 Place the disc in the tray with the label facing up. RANDOM button once or MODE button twice. RANDOM PROGRAM --no indication-- · The RANDOM screen appears. 2 Press the PLAY button to start random playback. NOTES: · If you wish to repeat the current track in the random selection, press the REPEAT button repeatedly until TRACK appears during playback. If you wish to repeat the entire random selection press the REPEAT button repeatedly until ALL appears during playback. · Refer to page 22 for random playback of MP3, WMA, and JPEG. For discs on which MP3, JPEG or WMA tracks are recorded: · · · · · An MP3, JPEG or WMA track menu screen appears.

The " " symbol is shown on the top of the group name. The " " symbol is shown on the top of MP3 files. The " " symbol is shown on the top of JPEG files. The " " symbol is shown on the top of WMA files. If the picture extends beyond the scope of screen, a down arrow "L" appears, indicating that you can view another part of the picture on the next page. If an up arrow "K" appears, it indicates that you can view another part on the previous page. The current page number and the number of total pages are shown to the right of the down arrow "L". The system can recognize up to 255 groups (or folders) and up to 256 tracks. (This applies to the case where mixed MP3, JPEG and WMA files are recorded.) If no MP3, JPEG or WMA files are found in the group, the group is not displayed.

The DVD player can reproduce data recorded as per ISO 9660 Level 1, Level 2 or Joliet on the disc. This player can also play discs on which data has been recorded in a multi-session. For more details of recording systems, see the instruction manual for the CD-R / CD-RW drive or the writing software. Remarks · It is prohibited to record MP3 sound on a digital device when connection is made digitally. · MP3 files recorded at fixed bit rate of 112 kbps or higher are recommended.

DVD-A 1 In the stop mode, press the MODE button three times. · The group selection screen appears. RANDOM DVD-AUDIO ALL 1 1:02:25 2 1:03:30 1/1 ALL · · 2 Press the cursor buttons (K or L) to select the desired group to be played back randomly, and then press the ENTER button. · The RANDOM screen appears. RANDOM ALL TOTAL 2:05:55 · · · · · RANDOM PROGRAM --no indication-- 3 Press the PLAY button.

· Random playback will start. Applicable MP3 file Sampling fre- 44.1kHz quency 48kHz MP3 / JPEG / WMA Playback MP3 JPEG WMA Type This DVD player can reproduce images and sounds from data recorded in the MP3, JPEG and WMA formats on CD-R and CD-RW discs. The DVD player can also reproduce JPEG files stored on Kodak picture CD. You can watch picture images on your television set by playing picture CDs. * Picture CD is a service to convert photographs taken by a conventional film camera into digital data and writing this data on a CD. For details about Picture CD, contact a shop that deals with developing services of Kodak Inc. MPEG1 audio layer 3 Applicable JPEG file Remarks Upper limit: · A JPEG image that extends Size of 6300x5100 dots beyond the screen is image Lower limit: reduced so that it will be 32x32 dots displayed within the screen. 20 EN PLAYING A DISC Applicable WMA file Remarks · Those frequencies are Sampling fre- 44.1kHz applicable to WMA version quency 48kHz 8 only, not to WMA version 9.

· Ensure that the copyright Bit rate 48192kbps function is set to off when preparing a WMA disc. · A prohibition "disable" symbol will appear if you Type WMA version 8 attempts to run a non-reproducible file such as copyright protected files. Slide Show Mode JPEG You can switch to the slide show mode during playback. 1 Press the MODE button during playback. · The slide show mode screen will appear. · The slide show mode cannot be switched when it is stopped, or from the file list screen or the Picture CD menu screen. 2 Press the ENTER button. · The slide show mode will change. 1 The entire image appears in one time. 2 The image appears gradually and then disappears.

3 Press the MODE button to exit. For JPEG discs or Kodak picture CDs: · A JPEG or Kodak Picture CD menu appears. · If all menu items cannot be displayed in the screen scope, a prompt symbol "G" appears at the right bottom of the screen, indicating that the user can view remaining items on the next page.



[You're reading an excerpt. Click here to read official DENON DVD-1400 user guide](http://yourpdfguides.com/dref/2466956)
<http://yourpdfguides.com/dref/2466956>

If another prompt symbol "H" appears, it indicates that the user can view other items on the previous page. The track number of the currently highlighted item and the total tracks are shown at the center bottom of the screen.

· If a prompt symbol "G" is shown at the right bottom, use the SKIP G button to view the next page. If another prompt symbol "H" is shown at the left bottom, use the SKIP H button to view the previous page. · It may take some time until all menu items are displayed on the menu screen. 1 For JPEG, press the cursor buttons (K/L), or for On-Screen Information MP3 You can check each file during playback. 1 Press the DISPLAY button.

· The name of the file currently in play will be displayed. JPEG TRACK 01 WMA Kodak Picture CD, press the cursor buttons (s / B / K / L), select a desired group or track to be played, then press the PLAY or ENTER button. · If an MP3 or WMA file is selected, reproduction will start from the selected track and go to the next one in turn. · If a JPEG or Kodak picture CD file is selected, the image will be reproduced from the selected track and go to the next one in turn. A track is displayed for five seconds and then the next track is displayed. Each press on the cursor button B will rotate the image clockwise by 90 degrees when an image is displayed. Each press on the cursor button s will rotate the image counterclockwise by 90 degrees. · If a group is selected, press the cursor button K/L to select a desired group, then press the B, PLAY or ENTER button to select a track. If you press the PLAY or ENTER button, reproduction of the picture will start. 2 Press the DISPLAY button again to show the track <Example: MP3> number, the elapsed time, the repeat status, and the playback status at the top of the screen.

· TR 1/36 0:01:15 will be displayed when the repeat play has been selected. T - indicates Track repeat G - indicates Group (folder) repeat A - indicates Disc repeat 3 Press the DISPLAY button again to exit. · During program or random playback, each playback status will be displayed when you press the DISPLAY button. Then press the DISPLAY button again to exit. Track Selection MP3 JPEG WMA Notes on MP3, JPEG and WMA: · Select "FIRST PLAY" and press the PLAY button, playback from the top of the disc in the order of tracks and groups. · The ninth and deeper hierarchies cannot be played. · Up to 25 characters of group and track names can be displayed. Underlined alphabetic characters and, numerals, asterisks or spaces may not be displayed. Unrecognizable characters will be replaced with asterisks. · Un-reproducible groups or tracks may be displayed depending on the recording conditions.

· If the TOP MENU button is pressed when a file list is displayed, "FIRST PLAY" will be highlighted. 2 Press the STOP button, to stop playback. 1 Press the SEARCH MODE button during playback. · The FILE LIST will appear. 2 Select a desired track using the cursor buttons (L/K/B/s).

· Press the B button when you want to go to the next hierarchy. · Press the s button when you want to go back to the previous hierarchy. 3 Press the PLAY button to start playing NOTES: Notes on Kodak picture CD: · A press on the STOP button will highlight the previously displayed track on the menu screen. Press the STOP button again or press the TOP MENU button, and the menu screen displays Tracks 1 to 6, where Track 1 is highlighted. · Press the SEARCH MODE button to exit.

· Some selections may require additional time to be recognized. · During play, a desired track can be directly searched. Just type in the TRACK number with the numeric buttons. · If the typed TRACK number is not available, the "disable" symbol appears and the direct search mode is cancelled. · Playback cannot be started from a desired time count. · Pressing the SKIP button G or H will play the next or previous file. · The SEARCH button is not effective for Picture CD. 21 EN English PLAYING A DISC Random Playback Audio Language or Sound Mode MP3 1 Press the RANDOM button JPEG RANDOM CD [DATA] WMA DVD-V The DVD player allows you to select a language during DVD disc (if multi language available) playback. 1 Press the AUDIO button during playback. 2 Press the AUDIO button repeatedly to select your once or MODE button twice while playback is stopped.

RANDOM PROGRAM --no indication-- desired language. 1.ENG DolbyD 5.1ch 48k/3 2 Press the PLAY button to play the tracks in random order. · Random play starts. · For a disc containing mixed MP3, JPEG and WMA files, random play of those files will be performed. 2.FRE DolbyD 5.1ch 48k/3 Program MP3 JPEG WMA 3.JPN DolbyD 5.

1ch 48k/3 This feature allows you to program a mp3 disc to play in a desired sequence. 1 Press the MODE button while playback is stopped. · The PROGRAM screen will appear. PROGRAM MY COLLECTION ABC DEF GHI JKL HELLO Bon jour 1/1 ABC 2 Press the K or L button to select a group, then press the ENTER button. · A track selection screen appears.

PROGRAM ABC DEF GHI JKL MNO NOTES: · The sound mode cannot be switched during playback of discs not recorded in bilingual sound. · Pressing the AUDIO button may not work on some DVDs with multiple audio languages (e.g. DVDs which allow audio language setting on the disc menu). · The sound mode cannot be changed during playback of a Super Audio CD.

(It may be possible to switch the sound mode when playing back discs including a CD area.) DEF 1/2 DEF 3 Press the K or L button to select a track, then press the ENTER, button to save it in a program. PROGRAM ABC DEF GHI JKL MNO · Press the CLEAR button to erase the incorrect input. · The programmed track is displayed in the right-hand screen. · If the entire program cannot be displayed at once on the screen, "L" appears to go to the next page. · Pressing the s button will show a list of folders that belong to the one-level upper hierarchy than the currently selected folder. 1/2 1/1 DEF DVD-A 1 Press the AUDIO button during playback. 2 Press the AUDIO button repeatedly to select the desired sound. 1.LPCM 5.

1ch 96k/2 4 Press the PLAY button to start programmed playback. · Programmed play starts. 2.PPCM 2.0ch 96k/2 NOTES: · Press the CLEAR button, and the last-programmed entry will be deleted. · Press the RETURN button, and the STOP screen will appear with the memorised programme contents. · To stop programmed play, press the STOP button. Another press on the STOP button will reset the subsequent information. · The programme setting is cancelled when the power is switched off or the disc tray is opened.



[You're reading an excerpt. Click here to read official DENON](http://yourpdfguides.com/dref/2466956)

[DVD-1400 user guide](http://yourpdfguides.com/dref/2466956)

<http://yourpdfguides.com/dref/2466956>

· Up to 99 tracks can be set in a programme.

· If a disc that contains mixed MP3, JPEG and WMA files is inserted, the programme setting allows selection of 99 tracks in any combination of MP3, JPEG and WMA files. · If eight or more tracks have been set in a program, the user can switch the right part of the screen with the SKIP button H or G. NOTE: · "2. PPCM 2.0CH 96k/2" may be displayed even if there is no second sound track.

(The sound number during playback remains as 1.) 22 EN PLAYING A DISC Stereo Sound Mode 1.ENG/6 CD select between STEREO, L-CH or R-CH. STEREO - both right and left channels are active (stereo) L-CH - only left channel is active R-CH - only right channel is active STEREO VCD 2.FRE/6 Subtitle 1 1 Press the AUDIO button repeatedly during playback to Subtitle 2 OFF Both right and left channels are active (stereo).

OFF L-CH NOTES: Only the left channel is active. R-CH Only the right channel is active. NOTES: · If the Virtual Surround setting is ON, the sound mode will be fixed to STEREO, and can not be changed. · Stereo sound mode will not be changed when playing DTS CD. SUPER AUDIO CD · Some discs allow audio language setting/subtitle language selection from the disc menu. (Operation varies between discs, so please refer to the instructions accompanying the disc.) · If the desired language is not shown after pressing the SUBTITLE button several times, the disc does not have subtitles in that language. · If you choose a Language that has a 3-letter language code, the code will be displayed every time you change the Subtitle language setting. @@(Refer to page 28.) Camera Angle DVD-V Some DVD discs contain scenes which have been shot simultaneously from various angles.

You can change the camera angle when the () mark appears on the screen. 1 Press the ANGLE button during playback. · The selected angle will be displayed on the display bar at the top of the screen. 2 Press the ANGLE button repeatedly to select your 1 Press the SUPER AUDIO CD SETUP button repeatedly to select among MULTI-CH, CD AREA, or 2CH. MULTI-CH - playback in multi channel format. The number of channels depends on the disc being played. CD AREA - Playback in the same quality with sound as normal CDs. 2CH - playback in higher quality than that of normal CD sound. MULTI-CH desired angle. 1/8 Angle 1 CD AREA 2/8 Angle 2 2CH 8/8 Angle 8 NOTES: · The Virtual Surround setting is not available for Super Audio CDs.

(It may be possible to use the Virtual Surround setting when playing back discs that include a CD area.) · Some playback options may not be available. These will be skipped. · MULTI-CH is selected as default. Changing the On-Screen Display DVD-V You can check information about the current disc by pressing the DISPLAY button on the remote control.

1 Press the DISPLAY button during Subtitle Language playback to show current Chapter. 9/49 0:00:00 -0:00:00 DVD-V The DVD player allows you to select a language for subtitle during DVD disc (if available) playback. 1 Press the SUBTITLE button during playback. 2 Press the SUBTITLE button repeatedly to select · The elapsed and remaining playing time of the current chapter will be displayed. 2 Press the DISPLAY button again to show current Title.

· The elapsed and remaining playing time of the current title will be displayed. your desired subtitle language. · The selected language will be displayed on the display bar at the top of the screen. 3 To turn off subtitles, press the SUBTITLE button repeatedly until OFF appears. 23 EN English PLAYING A DISC 3 Press the DISPLAY button the third time. IIII T Marker Setup Screen · The BIT RATE and the current repeat setting will be displayed. · If you are playing a dual layered disc, the layer number will also be displayed (L0: Layer 0 is playing. L1: Layer 1 is playing). 4 Press the DISPLAY button the fourth time to remove DVD-A DVD-V Use markers to memorise your favourite places on a disc. CD SUPER AUDIO CD VCD -- --:--:-- 1 Press the SEARCH MODE button the display.

ton four times (CD, Super Audio CD, VCD: three times) during playback. · The display screen and Markers will appear on the TV screen. 2 Press the s or B button to select 1, 2, 3, 4, 5, 6, 7, CD SUPER AUDIO CD VCD 1 Press the DISPLAY button during playback, the current Track will be displayed on the TV screen. · The elapsed and remaining playing time of the disc will be displayed. 2 Press the DISPLAY button again to show the Total 8, 9, or 10 and ensure that "- : - - : - -" appears in the display. 3 When reaches the desired point, press the ENTER button. · The Title or Track and elapsed playing time will appear in the TV screen. 4 To return to the Marker later, press the SEARCH Tracks. · The elapsed and remaining playing time of the disc will be displayed. 3 Press the DISPLAY button a third time to remove the display.

MP3 JPEG WMA 1 Press the DISPLAY button during playback. The MODE button four times (CD, Super Audio CD, VCD: three times) during playback and the s or B button to choose the desired marker, then press the ENTER button. NOTES: · All Markers will be erased when opening the disc tray, switching off the power or when AC is selected in step 2 and you press the ENTER button. · To clear a marker, using the s or B button, position the cursor on to the marker number to be cleared and press the CLEAR button. · You can mark up to 10 points.

5 Press the SEARCH MODE or RETURN button to current Track will be displayed on the TV screen. · The file name of the current track will be displayed. 2 Press the DISPLAY button again to show the Total Tracks. · The elapsed playing time of the disc will be displayed. 3 Press the DISPLAY button a third time to remove the display.

You can check information about the current disc by pressing the DISPLAY button on the remote control. 1 Press the DISPLAY button during playback to show the exit. DVD-A Virtual Surround current Track. · The elapsed and remaining playing time of the current track will be displayed. 2 Press the DISPLAY button again to show the current DVD-A DVD-V CD VCD MP3 WMA Group. · The elapsed and remaining playing time of the current group will be displayed. 3 Press the DISPLAY button a IIII T You can enjoy stereophonic visual space on your existing 2 channel stereo system. 1 Press the VIRTUAL button on the front panel or press the MODE button during playback. 2 Press the VIRTUAL or ENTER third time. · The BIT RATE and the current repeat setting will be displayed.

· If you are playing a dual layered disc, the layer number will also be displayed (L0: Layer 0 is playing).



[You're reading an excerpt. Click here to read official DENON](#)

[DVD-1400 user guide](#)

<http://yourpdfguides.com/dref/2466956>