



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DENON PMA-1500AE. You'll find the answers to all your questions on the DENON PMA-1500AE in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual DENON PMA-1500AE**  
**User guide DENON PMA-1500AE**  
**Operating instructions DENON PMA-1500AE**  
**Instructions for use DENON PMA-1500AE**  
**Instruction manual DENON PMA-1500AE**

**DENON**

PRE-MAIN AMPLIFIER

**PMA-1500AE**

---

OPERATING INSTRUCTIONS  
BEDIENUNGSANLEITUNG  
MODE D'EMPLOI  
ISTRUZIONI PER L'USO  
INSTRUCCIONES DE OPERACION  
GEBRUIKSAANWIJZING  
BRUKSANVISNING



[You're reading an excerpt. Click here to read official DENON PMA-1500AE user guide](http://yourpdfguides.com/dref/2467176)  
<http://yourpdfguides.com/dref/2467176>

**Manual abstract:**

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons. To completely disconnect this product from the mains, disconnect the plug from the wall socket outlet. When setting up this product, make sure that the AC outlet you are using is easily acceptable. Vid installationen av produkten ska du se till att eluttaget den ansluts till är nära utrustningen. Allow for sufficient heat dispersion when installed in a rack. Se till att det finns möjlighet till god värmeavledning vid montering i ett rack. Keep the set free from moisture, water, and dust. Do not allow foreign objects to enter the set. Unplug the power cord when not using the set for long periods of time. Do not let insecticides, benzene, and thinner come in contact with the set.

Never disassemble or modify the set in any way. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc. No naked flame sources, such as lighted candles, should be placed on the apparatus. @@@@ Batteries should never be thrown away or incinerated but disposed of in accordance with your local regulations concerning chemical wastes. This remarkable component has been engineered to provide superb sound, as well as providing outstanding high fidelity reproduction of your favorite music sources.

As this product is provided with an immense array of features, we recommend that before you begin hookup and operation that you review the contents of this manual before proceeding. @@@@ Always set the power switch to the standby position before connecting and disconnecting connection cords. Store these instructions in a safe place. After reading, store these instructions along with the warranty in a safe place. Note that the illustrations in these instructions may differ from the actual set for explanation purposes.

10 Copy from one tape to another . Noise or disturbance of the picture may be generated if this unit or any other electronic equipment using microprocessors is used near a tuner or TV. If this happens, take the following steps: · Install this unit as far as possible from the tuner or TV. Set the antenna wires from the tuner or TV away from this unit's power supply cord and input/output connection cords. Noise or disturbance tends to occur particularly when using indoor antennas or 300 /ohms feeder wires. we recommend using outdoor antennas and 75 /ohms coaxial cables. Note: For heat dispersal, do not install this equipment in a confined space such as a book case or similar unit. Switching the input function when input terminals are not connected. A clicking noise may be produced if the input function is switched when nothing is connected to the input terminals. If this happens, either turn down the MASTER VOLUME control knob or connect components to the input terminals.

@@@@@ nOTE: 1. Always keep the POWER switch on the main unit turned on. 2. Turn the power on and off from the remote control unit. 3. @@@@ Turn the power on from the remote control unit. @@W Insert two dry cell batteries as shown in the diagram on the Operate the remote control unit while pointing it towards the remote control sensor on the amplifier as shown in the diagram on the left. The remote control unit can be used at distances up to about 8 meters in a straight line from the amplifier. This distance will decrease if there are obstructions blocking the infra-red light transmission or if the remote control unit is not directed straight at the amplifier. nOTE: · Do not press the operating buttons on the amplifier and the remote control unit at the same time.

Operation of the remote control unit will become less effective or erratic if the infrared remote control sensor on the amplifier is exposed to strong light or if there are obstructions between the remote control unit and the sensor. In case you operate a VCR, TV or other components by remote control, do not operate buttons on two different remote control units at the same time. RC-1022 uses the size R03 (AAA) dry cell batteries. The batteries will need to be replaced approximately once a year. This will depend upon how often the remote control unit is used.

If, in less than a year from the time new batteries were inserted, the remote control unit fails to operate the amplifier from a near-by position, it is time to replace the batteries. (The included battery is only for verifying operation. Replace it with a new battery as soon as possible. ) · Insert the batteries properly, following the polarity diagram inside the battery compartment. Do not mix new batteries with used ones.

Do not mix different types of batteries. Do not jumper opposite poles of the batteries, expose them to heat, break them open, nor expose them to open fire. If the batteries have leaked, remove any traces of battery fluid from the battery compartment wiping thoroughly with a dry cloth. Then insert new batteries.

@@ When the POWER switch is turned ON, power is supplied to the unit. @@@@ This jack is used to plug in the headphones. (The Speaker output is turned off when the headphones are plugged. @@@@ one program source only can be selected at a time , as follows. TAPE-2/MD: Use this position when using the tape deck, etc. , connected to the TAPE-2/MD terminals.

TAPE-1/CD-R: Use this position when using the tape deck, etc. , connected to the TAPE-1/CD-R terminals. @@@@ This knob is used to control the bass quality of the sound. @@@@ This knob is used to control the treble quality of the sound. @@@@ ( . @@@@ ). This will achieve an even balance on the left and right sides. Turn the knob to the right (,) to raise the volume and to the left ( @@@@ Connect these PRE OUT terminals to the input terminals on the additional power amplifier, subwoofer, etc. Source connected to this terminal is directly fed to the power amplifier set volume level by the component connected to this terminal. NOTE: Signals are outputted from the PRE OUT terminals even when using headphones.

DIRECT terminal, volume control function of this unit does not work, so set volume level by the component connecting to this terminal. Do not use any other cord than the provided power supply cord. @@@@ NOTE: This terminal is used to reduce noise when a turntable, etc. @@@@ NOTE: The PHONO input terminals are equipped with a short pin-plug. Remove this plug to connect a record player.

@@ Note that operation may not be possible for some models. When the main unit's POWER switch is set to the ON/STANDBY position (ϵ), press this to turn the PMA-1500 AE's power on and off. When the power is turned off from the remote control unit, the main unit's POWER indicator lightes red, and the input Indicator turns off, indicating that the PMA-1500AE is in the standby mode.



[You're reading an excerpt. Click here to read official DENON](http://yourpdfguides.com/dref/2467176)

[PMA-1500AE user guide](http://yourpdfguides.com/dref/2467176)

<http://yourpdfguides.com/dref/2467176>

When the main unit's POWER switch is set to the OFF position (ⓧ) after turning the power off from the remote control unit and then set back to the ON/STANDBY position (⓪), the PMA1500AE is set to the operating mode. +: While this is pressed, the main unit's VOLUME control knob turns clockwise and the volume increases.

Use these to control the CD player connected to the PMA-1500AE. 0~9, +10 : Number REPEAT : Repeat play RANDOM: Random play 8 : Auto search (to beginning of track) 9 : Auto search (to beginning of track) 1 : Playback 3 : Pause 2 : Stop DISC SKIP: Refer to the operating instructions of your DENON CD player. While this is pressed, the main unit's VOLUME control knob turns counterclockwise and the volume decreases. When pressed, the main unit's POWER indicator flush red and the speaker output is turned off. When pressed again, the mute mode is cancelled and the POWER indicator flush red. CD-R with the INPUT SELECTOR knob will engage the RECORDING MONITOR and permit a check of the recording condition. @@@@Also, since the recording function is selected by the REC OUT SELECTOR switch, the free program source can be played through the speakers (or headphones) even during recording. Check the following before assuming there is a problem with the set. 1. Are all connections proper? Are the speakers and input components being operated properly? If the set does not seem to be operating properly, check the points listed below. If these points do not apply, the set may be damaged.

Turn off the power immediately and contact your store of purchase. Symptom Common problems arising when listening to the CD, records, tapes, and FM broadcasts, etc. Power indicator does not light and no sound is produced when POWER switch is turned on. Power indicator lights but no sound is produced. cause · Power supply cord is not connected. DIRECT switch is not set to proper position. Move speaker systems as far away as possible. Use cushions to absorb the vibrations transmitted from the floor to the speakers. If the turntable does not include insulators, use audio insulators, available in stores. Sound is not produced from one side only.

Volume level is different when listening to tuner and records. Turntable's ground wire is not connected. Influence from a TV or VCR near the turntable. Floor is soft and vibrates easily. Problems occurring when playing records.

Booming sound produced when playing records. Howling produced when volume is turned up while playing records. Stylus pressure is too light. Remote control unit is too far from this unit. Different button is being pressed.

This unit is not operated properly when remote control unit is used. Remote control system: Infrared pulse system Power supply: 3 V DC, Two size R03 (AAA) dry cell batteries External dimensions: 49 (W) x 220 (H) x 21 (D) mm (1-15/16" x 8-43/64" x 53/64") Mass: 120 g (Approx. For improvement purposes, specifications and functions are subject to change without advanced notice. Dra antennkablarna till tunern eller TV.



[You're reading an excerpt. Click here to read official DENON](#)

[PMA-1500AE user guide](#)

<http://yourpdfguides.com/dref/2467176>