



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DENON RCD-M37. You'll find the answers to all your questions on the DENON RCD-M37 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual DENON RCD-M37**  
**User guide DENON RCD-M37**  
**Operating instructions DENON RCD-M37**  
**Instructions for use DENON RCD-M37**  
**Instruction manual DENON RCD-M37**

## DENON

CD RECEIVER

### RCD-M37

---

**Owner's Manual**  
**Bedienungsanleitung**  
**Manuel de l'Utilisateur**  
**Manuale delle istruzioni**  
**Manual del usuario**  
**Gebruiksaanwijzing**  
**Bruksanvisning**



[You're reading an excerpt. Click here to read official DENON RCD-M37 user guide](http://yourpdfguides.com/dref/2467413)

<http://yourpdfguides.com/dref/2467413>

**Manual abstract:**

REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance. · DECLARATION DE CONFORMITE Nous déclarons sous notre seule responsabilité que l'appareil, auquel se réfère cette déclaration, est conforme aux standards suivants: EN60065, EN55013, EN55020, EN61000-3-2 et EN61000-3-3.

D'après les dispositions de la Directive 2006/95/EC et 2004/108/EC. Um dieses Gerät vollständig von der Stromversorgung abzutrennen, ziehen Sie bitte den Stecker aus der Wandsteckdose. Der Netzstecker wird verwendet, um die Stromversorgung zum Gerät völlig zu unterbrechen; er muss für den Benutzer gut und einfach zu erreichen sein. PRECAUTION: · DICHIARAZIONE DI CONFORMITÀ Dichiariamo con piena responsabilità che questo prodotto, al quale la nostra dichiarazione si riferisce, è conforme alle seguenti normative: EN60065, EN55013, EN55020, EN61000-3-2 e EN61000-3-3. In conformità con le condizioni delle direttive 2006/95/EC e 2004/108/EC. QUESTO PRODOTTO E' CONFORME AL D.

M. 28/08/95 N. 548 Pour déconnecter complètement ce produit du courant secteur, débranchez la prise de la prise murale. La prise secteur est utilisée pour couper complètement l'alimentation de l'appareil et l'utilisateur doit pouvoir y accéder facilement. ATTENZIONE: WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

· DECLARACIÓN DE CONFORMIDAD Declaramos bajo nuestra exclusiva responsabilidad que este producto al que hace referencia esta declaración, está conforme con los siguientes estándares: EN60065, EN55013, EN55020, EN61000-3-2 y EN61000-3-3. Siguiendo las provisiones de las Directivas 2006/95/EC y 2004/108/EC. Per scollegare completamente questo prodotto dalla rete di alimentazione elettrica, scollegare la spina dalla relativa presa a muro. La spina di rete viene utilizzata per interrompere completamente l'alimentazione all'unità e deve essere facilmente accessibile all'utente. n Laser Class (IEC 60825-1:2001) CLASS 1 LASER PRODUCT LUOKAN 1 LASERLAITE KLASI 1 LASERAPPARAT ADVARSEL: USYNLIG LASERSTRÅLING VED ÅBNING, NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION.

UNDGÅ UDSÆTTELSE FOR STRÅLING. LAITTEEN KÄYTTÄMINEN MUULLA KUIN TÄSSÄ KÄYTTÖOHJEESSA MAINITULLA TAVALLA SAATTA ALTISTAA KÄYTTÄJÄN TURVALLISUUSLUOKAN 1 YLITTÄVÄLLE NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE. OM APPARATEN ANVÄNDS PÅ ANNAT SÄTT ÄN I DENNA BRUKSANVISNING SPECIFICERATS, KAN ANVÄNDAREN UTSÄTTAS FÖR OSYNLIG LASERSTRÅLNING SOM ÖVERSKRIDER GRÄNSEN FÖR LASERKLASS 1. ATTENZIONE: QUESTO APPARECCHIO E' DOTATO DI DISPOSITIVO OTTICO CON RAGGIO LASER. L 'USO IMPROPRIO DELLAPPARECCHIO PUO' CAUSARE ' PERICOLOSE ESPOSIZIONI A RADIAZIONI! PRECAUCIÓN: · EENVORMIGHEIDSVERKLARING Wij verklaren uitsluitend op onze verantwoordelijkheid dat dit produkt, waarop deze verklaring betrekking heeft, in overeenstemming is met de volgende normen: EN60065, EN55013, EN55020, EN61000-3-2 en EN61000-3-3. Volgens de bepalingen van de Richtlijnen 2006/95/EC en 2004/108/EC. Para desconectar completamente este producto de la alimentación eléctrica, desconecte el enchufe del enchufe de la pared. El enchufe de la alimentación eléctrica se utiliza para interrumpir por completo el suministro de alimentación eléctrica a la unidad y debe de encontrarse en un lugar al que el usuario tenga fácil acceso. WAARSCHUWING: VAROITUS! · ÖVERENSSTÄMMELSESINTYG Härmed intygas helt på eget ansvar att denna produkt, vilken detta intyg avser, uppfyller följande standarder: EN60065, EN55013, EN55020, EN61000-3-2 och EN61000-3-3. Enligt stadgarna i direktiv 2006/95/EC och 2004/108/EC.

DENON EUROPE Division of D&M Germany GmbH An der Landwehr 19, Nettetal, D-41334 Germany Om de voeding van dit product volledig te onderbreken moet de stekker uit het stopcontact worden getrokken. De netstekker wordt gebruikt om de stroomtoevoer naar het toestel volledig te onderbreken en moet voor de gebruiker gemakkelijk bereikbaar zijn. FÖRSIKTIHETSMÅTT: VARNING: Koppla loss stickproppen från eluttaget för att helt skilja produkten från nätet. Stickproppen används för att helt bryta strömförsörjningen till apparaten, och den måste vara lättillgänglig för användaren.

CAUTION: USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. THIS PRODUCT SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT PROPERLY QUALIFIED SERVICE PERSONNEL. I SVENSKA NEDERLANDS ESPAÑOL ITALIANO FRANCAIS DEUTSCH ENGLISH n NOTE ON USE / HINWEISE ZUM GEBRAUCH / OBSERVATIONS RELATIVES A L'UTILISATION / NOTE SULL'USO / NOTAS SOBRE EL USO / ALVORENS TE GEBRUIKEN / OBSERVERA ANGÅENDE ANVÄNDNINGEN CAUTION: · · · · The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc. No naked flame sources, such as lighted candles, should be placed on the unit. Observe and follow local regulations regarding battery disposal. Do not expose the unit to dripping or splashing fluids.

Do not place objects filled with liquids, such as vases, on the unit. · Avoid high temperatures. Allow for sufficient heat dispersion when installed in a rack. · Vermeiden Sie hohe Temperaturen. Beachten Sie, dass eine ausreichende Belüftung gewährleistet wird, wenn das Gerät auf ein Regal gestellt wird. · Eviter des températures élevées. Tenir compte d'une dispersion de chaleur suffisante lors de l'installation sur une étagère. · Evitate di esporre l'unità a temperature elevate. Assicuratevi che vi sia un'adeguata dispersione del calore quando installate l'unità in un mobile per componenti audio. · Evite altas temperaturas.

Permite la suficiente dispersión del calor cuando está instalado en la consola.



[You're reading an excerpt. Click here to read official DENON RCD-M37 user guide](http://yourpdfguides.com/dref/2467413)

<http://yourpdfguides.com/dref/2467413>

· Vermijd hoge temperaturen. Zorg er bij installatie in een audiorack voor, dat de door het toestel geproduceerde warmte goed kan worden afgevoerd. · Undvik höga temperaturer. Se till att det finns möjlighet till god värmeavledning vid montering i ett rack. · · · · · · · Keep the unit free from moisture, water, and dust. · Halten Sie das Gerät von Feuchtigkeit, Wasser und Staub fern. · Protéger l'appareil contre l'humidité, l'eau et la poussière. · Tenete l'unità lontana dall'umidità, dall'acqua e dalla polvere. · Mantenga el equipo libre de humedad, agua y polvo.

Laat geen vochtigheid, water of stof in het apparaat binnendringen. Utsätt inte apparaten för fukt, vatten och damm. Do not let foreign objects into the unit.

Lassen Sie keine fremden Gegenstände in das Gerät kommen. Ne pas laisser des objets étrangers dans l'appareil. Non inserite corpi estranei all'interno dell'unità. No deje objetos extraños dentro del equipo. Laat geen vreemde voorwerpen in dit apparaat vallen. Se till att främmande föremål inte tränger in i apparaten. · Die Belüftung sollte auf keinen Fall durch das Abdecken der Belüftungsöffnungen durch Gegenstände wie beispielsweise Zeitungen, Tischtücher, Vorhänge o.

Ä. behindert werden. · Auf dem Gerät sollten keinerlei direkte Feuerquellen wie beispielsweise angezündete Kerzen aufgestellt werden. · Bitte beachten Sie bei der Entsorgung der Batterien die örtlich geltenden Umweltbestimmungen. · Das Gerät sollte keiner tropfenden oder spritzenden Flüssigkeit ausgesetzt werden.

· Auf dem Gerät sollten keine mit Flüssigkeit gefüllten Behälter wie beispielsweise Vasen aufgestellt werden. · La ventilation ne doit pas être gênée en recouvrant les ouvertures de la ventilation avec des objets tels que journaux, rideaux, tissus, etc. · Aucune flamme nue, par exemple une bougie, ne doit être placée sur l'appareil. · Veillez à respecter les lois en vigueur lorsque vous jetez les piles usagées. · L'appareil ne doit pas être exposé à l'eau ou à l'humidité. · Ne pas poser d'objet contenant du liquide, par exemple un vase, sur l'appareil. ACHTUNG: ATTENTION: · Unplug the power cord when not using the unit for long periods of time. · Wenn das Gerät längere Zeit nicht verwendet werden soll, trennen Sie das Netzkabel vom Netzstecker. · Débrancher le cordon d'alimentation lorsque l'appareil n'est pas utilisé pendant de longues périodes. · Scollegate il cavo di alimentazione quando prevedete di non utilizzare l'unità per un lungo periodo di tempo. · Desconecte el cordón de energía cuando no utilice el equipo por mucho tiempo. · Neem altijd het netsnoer uit het stopcontact wanneer het apparaat gedurende een lange periode niet wordt gebruikt. · Koppla loss nätkabeln om apparaten inte kommer att användas i lång tid. · Do not let insecticides, benzene, and thinner come in contact with the unit. · Lassen Sie das Gerät nicht mit Insektiziden, Benzin oder Verdünnungsmitteln in Berührung kommen.

· Ne pas mettre en contact des insecticides, du benzène et un diluant avec l'appareil. · Assicuratevi che l'unità non entri in contatto con insetticidi, benzolo o solventi. · No permita el contacto de insecticidas, gasolina y diluyentes con el equipo. · Voorkom dat insecticiden, benzeen of verfverdunder met dit toestel in contact komen. · Se till att inte insektsmedel på spraybruk, bensen och thinner kommer i kontakt med apparatens hölje. · Le aperture di ventilazione non devono essere ostruite coprendole con oggetti, quali giornali, tovaglie, tende e così via. · Non posizionate sull'unità fiamme libere, come ad esempio candele accese. · Prestate attenzione agli aspetti legati alla tutela dell'ambiente nello smaltimento delle batterie. · L'apparecchiatura non deve essere esposta a gocciolii o spruzzi. · Ns product and the supplied accessories, excluding the batteries, constitute the applicable product according to the WEEE directive.

HINWEIS ZUM RECYCLING: Das Verpackungsmaterial dieses Produktes ist zum Recyclen geeignet und kann wieder verwendet werden. Bitte entsorgen Sie alle Materialien entsprechend der örtlichen Recycling-Vorschriften. Beachten Sie bei der Entsorgung des Gerätes die örtlichen Vorschriften und Bestimmungen. Die Batterien dürfen nicht in den Hausmüll geworfen oder verbrannt werden; bitte entsorgen Sie die Batterien gemäß der örtlichen Vorschriften. Dieses Produkt und das im Lieferumfang enthaltene Zubehör (mit Ausnahme der Batterien!) entsprechen der WEEEDirektive.

UNE REMARQUE CONCERNANT LE RECYCLAGE: Les matériaux d'emballage de ce produit sont recyclables et peuvent être réutilisés. Veuillez disposer des matériaux conformément aux lois sur le recyclage en vigueur. Lorsque vous mettez cet appareil au rebut, respectez les lois ou réglementations en vigueur. Les piles ne doivent jamais être jetées ou incinérées, mais mises au rebut conformément aux lois en vigueur sur la mise au rebut des piles. Ce produit et les accessoires inclus, à l'exception des piles, sont des produits conformes à la directive DEEE.

NOTA RELATIVA AL RICICLAGGIO: I materiali di imballaggio di questo prodotto sono riutilizzabili e riciclabili. Smaltire i materiali conformemente alle normative locali sul riciclaggio. Per lo smaltimento dell'unità, osservare le normative o le leggi locali in vigore. Non gettare le batterie, né incenerirle, ma smaltirle conformemente alla normativa locale sui rifiuti chimici. Questo prodotto e gli accessori inclusi nell'imballaggio sono applicabili alla direttiva RAEE, ad eccezione delle batterie. ACERCA DEL RECICLAJE: Los materiales de embalaje de este producto son reciclables y se pueden volver a utilizar. Disponga de estos materiales siguiendo los reglamentos de reciclaje de su localidad. Cuando se deshaga de la unidad, cumpla con las reglas o reglamentos locales. Las pilas nunca deberán tirarse ni incinerarse. Deberá disponer de ellas siguiendo los reglamentos de su localidad relacionados con los desperdicios químicos.

Este producto junto con los accesorios empaquetados es el producto aplicable a la directiva RAEE excepto pilas.



[You're reading an excerpt. Click here to read official DENON RCD-M37 user guide](http://yourpdfguides.com/dref/2467413)

<http://yourpdfguides.com/dref/2467413>

EEN AANTEKENING MET BETREKKING TOT DE RECYCLING: Het inpakmateriaal van dit product is recycleerbaar en kan opnieuw gebruikt worden. Er wordt verzocht om zich van elk afvalmateriaal te ontdoen volgens de plaatselijke voorschriften. Volg voor het wegdoen van de speler de voorschriften voor de verwijdering van wit- en bruingoed op. Batterijen mogen nooit worden weggegooid of verbrand, maar moeten volgens de plaatselijke voorschriften betreffende chemisch afval worden verwijderd. Op dit product en de meegeleverde accessoires, m.u.v. de batterijen is de richtlijn voor afgedankte elektrische en elektronische apparaten (WEEE) van toepassing. OBSERVERA ANGÅENDE ÅTERVINNING: Produktens emballage är återvinningsbart och kan återanvändas.

Kassera det enligt lokala återvinningsbestämmelser. När du kasserar enheten ska du göra det i överensstämmelse med lokala regler och bestämmelser. Batterier får absolut inte kastas i soporna eller brännas. Kassera dem enligt lokala bestämmelser för kemiskt avfall. Denna apparat och de tillbehör som levereras med den uppfyller gällande WEEE-direktiv, med undantag av batterierna.

III ENGLISH n Contents Getting Started Accessories.....	2	Cautions on Handling.....	2	Main Features.....	2
.....2 Discs.....	2	Discs usable on the RCD-M37.....	2	.....	2
.....2, 3 Holding Discs.....	3	Loading Discs.....	3	.....	3
.....3 Cautions on Loading Discs.....	3	Cautions on Handling.....	3	.....	3
.....3 Cautions on Storing Discs.....	3	Cleaning Discs.....	3	.....	3
.....3 About the Remote Control Unit.....	3	Inserting the Batteries.....	3	.....	3
.....3, 4 Operating Range of the Remote Control Unit.....	4	Part Names and Functions.....	4	.....	4
.....4 Front Panel.....	4	Display.....	4	.....	4
.....5 Rear Panel.....	5	Remote Control Unit.....	5	.....	5
.....6, 7 Playback Preparations.....	6	Turning the Power On.....	13	.....	13
.....13 Loading Discs.....	13	Operations Possible During Playback.....	13	.....	13
.....13 Adjusting the Master Volume.....	13	Input Source Switching.....	13	.....	13
.....13 Adjusting the Tone.....	13	Turning the Sound Off Temporarily.....	13	.....	13
(Muting).....	13	Switching the Display's Brightness.....	13	Listening With Headphones.....	13
.....13 CD Playback.....	13	Playing CDs.....	14	.....	14
.....14 Playing Repeatedly <Repeat Playback>.....	14	Playing Random Order <Random Playback>.....	14	.....	14
.....14 Playing Tracks in the Desired Order <Program playback>.....	14	Switching the Display.....	15	.....	15
.....15 Playback of MP3 and WMA Files.....	15	About the MP3 and WMA Formats That Can be Played.....	15	.....	15
.....15 Playing MP3 and WMA Files.....	15	TUNER Playback.....	16	.....	16
.....17 Tuning in Broadcast Stations.....	17	Automatically Presetting FM Stations.....	17	.....	17
(Auto Preset).....	17	Presetting FM/AM Stations Manually.....	17	Listening to Preset Stations.....	17
.....18 Naming the Currently Tuned In Broadcast Station.....	18	RDS (Radio Data System).....	18	.....	18
.....18, 19 RDS Search.....	18	PTY Search.....	19	.....	19
.....19 TP Search.....	19	Listening to DAB (For UK Model Only).....	19	.....	19
.....20 Setting DAB Band.....	20	Tuning in DAB.....	21	.....	21
Stations.....	21	Auto Scannig Broadcast Stations.....	21	Switching the Reception Information for the Currently Tuned in DAB Station.....	21
.....21 DAB Initialize.....	21	Making the DAB Settings.....	21	.....	21
.....22 Preparations.....	22	iPod® Playback.....	22	.....	22
.....22, 23 Disconnecting the iPod.....	22	Listening to Audio.....	22	.....	22
.....23 Connecting a Portable Player.....	23	Playing a Portable Audio.....	23	.....	23
.....23 USB Playback.....	23	Playing the Portable Player.....	23	.....	23
.....24 Basic Operation.....	24	Playable USB Memory Formats.....	24	.....	24
Playback.....	24	Setting the Timer.....	24	.....	24
.....26 Setting the Timer.....	26	Sleep Timer Playback.....	26	.....	26
.....27 Other Functions Convenient Functions.....	26	Auto Power.....	28	.....	28
On.....	28	Auto Function Selector Function.....	28	.....	28
.....28 Resetting the Microprocessor.....	28	Last Function Memory.....	28	.....	28
.....28 Troubleshooting.....	28	Using an Optimizing Filter.....	28	.....	28
.....29, 30 Specifications.....	30	.....	30	.....	30
Connections Preparations.....	8	Cables Used for Connections.....	8	.....	8
AM Loop Antenna.....	8	Assembling the AM Loop Antenna.....	8	.....	8
.....8 Assembling the AM Loop Antenna.....	8	Speaker Connections.....	8	.....	8
.....9 Connecting the Speaker Cables.....	9	Connecting the Playback Components.....	9	.....	9
.....10 Control Dock for iPod.....	10	Connecting the Recording Components.....	10	.....	10
10 Recorder / MD Recorder / Tape deck.....	10	Connections to Other Devices.....	10	.....	10
.....10, 11 USB Port.....	10	Antenna Terminals.....	10	.....	10
.....11 Once Connections are Completed.....	11	Connecting the Power Cord.....	11	.....	11
Display).....	11	Connections Setting the Current Time (24-Hour Display).....	11	.....	11
.....12 ENGLISH Getting Started Connections Setup Playback Setting the Timer Other Functions Troubleshooting Specifications Getting Started Thank you for purchasing this DENON product.	12	.....	12	.....	12



[You're reading an excerpt. Click here to read official DENON RCD-M37 user guide](http://yourpdfguides.com/dref/2467413)

<http://yourpdfguides.com/dref/2467413>

To ensure proper operation, please read this owner's manual carefully before using the product. After reading them, be sure to keep them for future reference. **Cautions on Handling** · Before turning the power switch on Check once again that all connections are correct and that there are no problems with the connection cables. · Power is supplied to some of the circuitry even when the unit is set to the standby mode.

When traveling or leaving home for long periods of time, be sure to unplug the power cord from the power outlet. · Sufficiently ventilate the place of installation If the unit is left in a room full of the smoke from cigarettes, etc., for long periods of time, the surface of the optical pickup could get dirty, in which case it will not be able to read the signals properly. · About condensation If there is a major difference in temperature between the inside of the unit and the surroundings, condensation (dew) may form on the operating parts inside the unit, causing the unit not to operate properly. If this happens, let the unit sit for an hour or two with the power turned off and wait until there is little difference in temperature before using the unit. · Cautions on using mobile phones

Using a mobile phone near this unit may result in noise. If so, move the mobile phone away from this unit when it is in use. · Moving the unit Turn off the power and unplug the power cord from the power outlet. Next, disconnect the connection cables to other system units before moving the unit. · Note that the illustrations in these instructions may differ from the actual unit for explanation purposes.

**Main Features** 1. High quality amplifier stressing sound quality Equipped with 30 W + 30 W (6 ohms) high quality amplifier circuits. 2. Tone control and SDB control Separate bass and treble tone controls for adjusting the tone to your tastes and Super Dynamic Bass (SDB) circuit for producing powerful bass sound even when the volume is low. Source direct position provided for turning off the SDB and tone control circuitry to make the response flat. 3. CD player for digital sound Compact body integrating a CD section in addition to the FM/AM tuner and amplifier, allowing playback of CD-R/RW discs. 4. Playback of MP3 and WMA files Supports playback of discs and USB memory devices on which MP3 and WMA files are recorded. The track name and artist name of the currently playing track can be displayed on the set's display.

The characters that can be displayed "Switching the Display" (page 16) 5. Low standby power consumption Designed with considerations on the environment, with the power consumption when the power is in standby kept down to about 0.3 W. Accessories Check that the following parts are supplied with the product. q Remote control (RC-1097) .

.....  
.....  
.....  
.....  
.....  
.....

..... 1 w R03/AAA batteries .

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

. 2 e q Power cord: for continental model only (Cord length: Approx. 2 m) ...

.....  
.....  
.....  
.....  
.....

..... 1 w Power cord: for UK model only (Cord length: Approx. 2 m) ..

.....  
.....  
.....  
.....  
.....

..... 1 r AM loop antenna ..

.....  
.....  
.....  
.....  
.....



*Dusty or humid places 3. Places exposed to heat from heating appliances, etc. · Place 8 cm discs in the inner tray guide without using an adapter. e Put the rear cover back on. ENGLISH NOTE · Replace the batteries with new ones if the set does not operate even when the remote control unit is operated close to the unit.*



[You're reading an excerpt. Click here to read official DENON RCD-M37 user guide](http://yourpdfguides.com/dref/2467413)

<http://yourpdfguides.com/dref/2467413>

· The supplied batteries are only for verifying operation. · When inserting the batteries, be sure to do so in the proper direction, following the "q" and "w" marks in the battery compartment. · To prevent damage or leakage of battery fluid: · Do not use a new battery together with an old one. · Do not use two different types of batteries. · Do not attempt to charge dry batteries. · Do not short-circuit, disassemble, heat or dispose of batteries in flames. · If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries. · Remove the batteries from the remote control unit if it will not be in use for long periods. Part Names and Functions For buttons not explained here, see the page indicated in parentheses ( ). Getting Started Connections Setup Playback Setting the Timer Other Functions Troubleshooting Specifications Front Panel Q6 Q5 Q4 Q3 Q2 Operating Range of the Remote Control Unit Point the remote control unit at the remote sensor when operating it.

Q0 Approx. 7 m 30° 30° q w q Power operation button e r t y u i o Q1 (ON/STANDBY) ..... (13) o Master volume control knob (VOLUME) ..... (13) NOTE The set may function improperly or the remote control unit may not operate if the remote control sensor is exposed to direct sunlight, strong artificial light from an inverter type fluorescent lamp or infrared light. w Power indicator ..... (13) e USB port (USB) ..... (11) r Display t Portable jack (PORTABLE IN) ..... (23) y Headphones jack (PHONES) ..... (13) u SOURCE button ..... (13) i Revers-skip/Forward-skip buttons (8/, +/9) ..... (14, 17) Q0 MENU/SET button ..... (12, 26) Q1 SDB/TONE button ..... (13) Q2 BAND/Stop button (BAND/2) ..... (14, 17) Q3 Play/Pause button (1/3) ..... (14) Q4 Disc tray open/close button (5) ..... (13) Q5 Remote control sensor ..... (4) Q6 Disc tray ..... (3) ENGLISH Display Rear Panel u y t r Getting Started q w e r t y u i Connections Setup Playback q Information display Various information is displayed here, depending on the operation mode.



[You're reading an excerpt. Click here to read official DENON RCD-M37 user guide](http://yourpdfguides.com/dref/2467413)  
<http://yourpdfguides.com/dref/2467413>



Setting the Timer w 1: (the play indicator) lights when a disc is playing. 3: (the pause indicator) lights when a disc is pausing. e SDB, TONE indicator .....

.....  
.....  
.....

...(13) r Reception mode indicator .....

.....  
.....

...(17) t TOTAL indicator Lights when the total number of tracks and total time of the CD are displayed. Other Functions q w e y Play mode indicator

..... (14) u Timer indicator ..... (26) i F: Flashes when remote control signals are received. q Monaural audio connector (MONO OUT) ..... (9) Troubleshooting w Speakers terminals ..... (9) e AC inlet (AC IN) ..... (11) r DAB ANTENNA terminal (UK model only) ..... (11) t FM/AM antenna terminals ..... (10) y DOCK CONTROL jack ..... (10) u AUX1/AUX2 Analog audio connectors ..... (10) Specifications ENGLISH Remote Control Unit Buttons Operable for All Functions (CD, TUNER, iPod and USB) q DIMMER button ..... (13) w Master volume control buttons Getting Started Connections Setup Playback Setting the Timer Other Functions Troubleshooting Specifications Buttons Operable When the Function is Set to "CD" The buttons listed at "Buttons Operable for All Functions" can also be used. q t y (VOLUME) ..... (13) e SDB/TONE button ..... (13) r MENU/SET button ..... (12) t ON/STANDBY button ..... (13) y SLEEP button ..... (27) u MUTE button ..... (13) i CLOCK button ..... (12) q i w e r t e r u y Q3 i u o Q0 Q1 Q2 q Number buttons ..... (14) w PROG/DIRECT button ..... (15) e RANDOM button ..... (14) r SOURCE button ..... (14) t CD 1/3 button ..... (14) y FOLDER MODE button ..... (16) u TIME/DISPLAY button ..... (16) i CLEAR/DEL button ..... (15) o REPEAT button ..... (14) Q0 Fast-reversing/Fast-forwarding buttons (6, 7) ..... (14) Q1 Reverse-skip/Forward-skip buttons (8, 9) ..... (14) Q2 Stop button (2) ..... (14) Q3 Cursor buttons (uio p) ..... (16) ENGLISH Buttons Operable When the Function is Set to "TUNER" The buttons listed at "Buttons Operable for All Functions" can also be used.



[You're reading an excerpt. Click here to read official DENON RCD-M37 user guide](http://yourpdfguides.com/dref/2467413)  
<http://yourpdfguides.com/dref/2467413>

*Buttons Operable When the Function is Set to "iPod" "USB", The buttons listed at "Buttons Operable for All Functions" can also be used. Getting Started q*

*y u i o q Number buttons ..... (18) w SOURCE button ..... (17) e TUNER button ..... (17) r*

*DAB/RDS button ..... (19) t TIME/DISPLAY button ..... (21) y CLEAR/DEL button ..... (18) u Tuning*

*+, buttons (TU+, TU) ..... (17) i Channel +, buttons (CH+, CH) ..... (17) o Stop button (2) ..... (17) Q0 ENTER/MEMO*

*button ..... (17) Q1 Cursor buttons (uio p) ..... (17) q q Number buttons ..... (24) w RANDOM button*

*..... (25) e SOURCE button ..... (24) r MENU/SET button ..... (22) t FOLDER MODE button*

*..... (22) y TIME/DISPLAY button ..... (23) u REPEAT button ..... (25) i Fast-reversing/Fast-*

*forwarding buttons (6, 7) ..... (22) Connections Setup Playback o Reverse-skip/Forward-skip buttons (8,*

*9) ..... (22) w e w e u i o Q0 Q1 Q0 USB 1/3 button ..... (24) Q1 Stop button (2) ..... (22) Q2 iPod 1/3 button*

*..... (22) Q3 ENTER/MEMO button ..... (22) Q4 Cursor buttons (uio p) ..... (22) Q5*

*REMOTE/BROWSE button ..... (22) Setting the Timer Other Functions r Q0 Q1 t Q2 Q3 Q4 Q5 Troubleshooting r t y Specifications ENGLISH*

*Getting Started Connections Setup Playback Setting the Timer Other Functions Troubleshooting Specifications Connections Connections for all compatible*

*audio signal formats are described in this owner's manual.*



[You're reading an excerpt. Click here to read official DENON RCD-M37 user guide](http://yourpdfguides.com/dref/2467413)

<http://yourpdfguides.com/dref/2467413>

Please select the types of connections suited for the equipment you are connecting.

With some types of connections, certain settings must be made on the RCD-M37. For details, refer to the instructions for the respective connection items below. Preparations Cables Used for Connections Select the cables according to the equipment being connected. Using the AM Loop Antenna n To use suspended on a wall Suspend directly on the wall without assembling. NOTE · Do not plug in the power cord until all connections have been completed. · When making connections, also refer to the owner's manual of the other components. · Be sure to connect the left and right channels properly (left with left, right with right). · Do not bundle power supply cords together with connection cables. Doing so can result in humming or noise. Audio cables Analog connections (stereo) (White) (Red) L R L R Nail, tack, etc.

n To use standing alone Use the procedure below to assemble. Stereo pin-plug cable Analog connections (subwoofer) (Black) Pin-plug cable Speaker connections Assembling the AM Loop Antenna Speaker cable 1 Bend in the direction of the arrow. Signal direction Audio signal: Output Input 2 Insert into the hole. Input Output ENGLISH Speaker Connections Subwoofer with built-in amplifier Speaker SC-M37 Connecting the Speaker Cables Check the left (L) and right (R) channels and the + (red) and (black) terminals on the set and the speakers to be used and interconnect the cables to the same polarities. NOTE

Use speakers with an impedance of 6 to 16 ohms.

The protection circuit may be activated if speakers with an impedance other than specified are used. · Connect the speaker cables in a way that they do not stick out of the speaker terminals. The protection circuit may be activated if the core wires touch the rear panel or screws or if the + and sides touch. · Never touch the speaker terminals while the power is on. Doing so could cause electric shock.

Getting Started 1 (R) (L) Peel off about 10 mm of the sheathing at Connections the tip of the cable, twist the core wire and terminate it. w q w q 2 3 4 Turn the speaker terminal counterclockwise Protector circuit The protection circuit will be activated in the following cases: · When the speaker cable's core wires are touching the rear panel or screws or when the speaker cable's + and sides are touching · When the surrounding temperature is extremely high · When the internal temperature rises due to extended use with a high output If this happens, unplug the power cord, then check the connections of the speaker cables and input cables. If the set's temperature is extremely high, wait for it to cool off and improve surrounding ventilation. After doing this, plug the power cord back in. If the protection circuit is activated though there are no problems in ventilation around the set or in connections, the set could be damaged. Turn off the power, then contact a DENON servicing and inquiry outlet. Setup to loosen it. Playback Insert the speaker cable's core wire into the base of the speaker terminal. Setting the Timer Turn the speaker terminal counterclockwise to tighten it. Other Functions Troubleshooting Specifications ENGLISH Connecting the Playback Components Control Dock for iPod Use a DENON Control Dock for iPod (ASD-1R or ASD-3N/3W, sold separately ) to connect the set with an iPod.

iPod Connecting the Recording Components CD Recorder / MD Recorder / Tape deck CD recorder / MD recorder / Tape deck Connections to Other Devices Antenna Terminals AM/FM The AM and FM reception sensitivity depends on the place the antenna is set and the direction in which it is set. Set it so that reception is best. FM indoor antenna (Supplied) Black AM loop antenna (Supplied) Getting Started Connections Setup Playback Setting the Timer Other Functions Troubleshooting Specifications L R L R White R L L R R R L n Connecting the AM loop antenna 1 2 3 · When using a Control Dock for iPod, the Control Dock for iPod must be set. For details, refer to the operating instructions of the Control Dock for iPod. · To use an iPod, see "iPod® Playback" (vpage 22). Push the lever. Insert the conductor. @@@@ Press again to turn off display. Press [CLOCK]. @@To reduce electric consumption, turn the time display off.

@@@@@ The "3" is displayed. b To resume playback, press <13> or [CD 1/3]. During playback, press and hold in [6, 7]. SOURCE <BAND/2> n Fast-Forwarding and Fast-Reversing (searching) n Moving to the Beginning of Tracks (skipping) During playback, press 8, 9. b The disc is skipped the number of tracks equal to the number of times the button is pressed.

b When pressed once in the return direction, playback returns to the beginning of the currently playing track. Playing Random Order <Random Playback> 1 2 In the stop mode, press [RANDOM]. The "RANDOM" indicator lights. Press <1/3> or [CD 1/3]. The tracks start playing in random order. [NUMBER] [RANDOM] [PROG/DIRECT] SOURCE [CD 1/3] [CLEAR/DEL] [REPEAT] [6, 7] 8, 9 [2] n To Play the Desired Track (Remote Control Unit Only) Press [NUMBER] (0 ~ 9, +10) to select the track. GExampleH : Track 4 : [4] GExampleH : Track 12 : [+10], [2] GExampleH : Track 20 : [+10], [+10], [0] NOTE Random play cannot be set or canceled during playback. n Canceling Random Playback In the stop mode, press [RANDOM]. The "RANDOM" indicator turns off. NOTE When [REPEAT] pressed during random playback, the tracks are played in a different random order after this turn. [TIME/DISPLAY] ENGLISH Playing Tracks in the Desired Order <Program playback> Up to 25 tracks can be programmed. Playback of MP3 and WMA Files There are many music distribution sites on the Internet allowing you to download music files in MP3 or WMA (Windows Media® Audio) format. The music (files) downloaded from such sites can be stored on CD-R or CD-RW discs and played on the RCD-M37. "Windows Media" and "Windows" are registered trademarks or trademarks in the United States and other countries of Microsoft Corporation of the United States. Playable MP3/WMA file File format MP3 WMA Sampling frequency Bit rate Extension .

MP3 . WMA Getting Started 32, 44.1, 48 kHz 32 ~ 320 kbps 32, 44.1, 48 kHz 64 ~ 160 kbps 1 2 3 In the stop mode, press [PROG/DIRECT]. The "PGM" indicator lights. Connections Use [NUMBER] (0 ~ 9, +10) to select the tracks. b GExampleH To program tracks 3, 12, 7 to play in that order: Press [PROG/DIRECT], [3], [+10], [2], [7]. · Be sure to give files the extension " .



[You're reading an excerpt. Click here to read official DENON RCD-M37 user guide](http://yourpdfguides.com/dref/2467413)

<http://yourpdfguides.com/dref/2467413>

MP3" or ".WMA".

Files with any other extensions or with no extensions cannot be played. · Recordings you have made should only be used for your personal enjoyment, and as per copyright laws may not be used in other ways without permission of the copyright holder. Setup Press <1/3> or [CD 1/3]. Playback starts in the programmed order. About the MP3 and WMA Formats That Can be Played CD-R and CD-RW discs created in the format described below can be played.

Playback n Checking the order of the programmed tracks Setting the Timer In the stop mode, press 9 or 8. The track numbers are displayed in the programmed order each time the button is pressed. In the stop mode, press [CLEAR/DEL]. The last track programmed is cleared each time the button is pressed. In the stop mode, use 9 or 8 to select the track to be cleared, then press [CLEAR/DEL].

In the stop mode, press [PROG/DIRECT]. The "PGM" indicator turns off. Writing software format ISO9660 level 1 b When written in other formats, it may not be possible to play the disc properly. n To clear the last track programmed Other Functions n To clear one programmed track at a time n Clearing the all programmed track Maximum number of playable files and folders Total number of folders + files: 512 Maximum number of files in a folder: 255

Troubleshooting File format MPEG-1 Audio Layer-3 WMA (Windows Media Audio) When [REPEAT] is pressed, the tracks are played repeatedly in the programmed order. Tag data ID3-Tag (Ver.1x) META-Tag (Compatible with title, artist and album names) Specifications Switching the Display Press [TIME/DISPLAY]. Elapsed time of currently playing track Remaining time of currently playing track Remaining time for all remaining tracks b The display switches each time the button is pressed. ENGLISH Symbols used to indicate buttons in this manual Button located on both the main unit and the remote control unit BUTTON Button only on the main unit <BUTTON> Button only on the remote control unit [BUTTON] Playing MP3 and WMA Files n Switching the Display During playback, press[TIME/DISPLAY]. File name display Title/artist display Title/album display b The characters that can be displayed are as follows: Getting Started Connections Setup Playback Setting the Timer Other Functions Troubleshooting Specifications 1 2 Load a CD-R or CD-RW disc containing music files in the MP3 or WMA format into the disc tray (vpage 3). "Disc Mode".

SOURCE <1/3> <BAND/2> Press [FOLDER MODE] and select "Folder Mode" or A to Z a to z 0 to 9 ^ ' ( ) \* + , - . / = (space) GAbout the displayH When "Folder Mode" is selected "FLD" is displayed. When "Disc Mode" is selected "FLD" is not displayed. Folder Mode : All the files in the selected folder are played. Disc Mode : After the selected folder and files are played, all the files in all the folders are played. n To Play Repeatedly Press [REPEAT]. Playback starts in the respective repeat mode. b The selectable repeat modes differ in the "Folder Mode" and the "Disc Mode" . When "Folder Mode" is selected: Single-track repeat Repeat off Repeat of all the tracks in the folder 8, 9 MENU/SET 3 4 5 Use [ui] to select the folder to be played. Use played.

8, 9 or [o p] to select the file to be [CD 1/3]. When "Disc Mode" is selected: Single-track repeat All-track repeat Repeat off (indicator turns off) Press <1/3> or n To switch the Folder or File During Playback [NUMBER] · Folder Use [ui] to select the folder. · File Use 8, 9 to select the file, or use [NUMBER] (0 ~ select the file number. [Selectable items] 9, +10) to When "Folder Mode" is selected: 1FLD : Only the selected track is played repeatedly. FLD : All the files in the selected folder are played repeatedly.

FLD : Folder mode playback resumes. SOURCE [TUNER] [CD 1/3] [REPEAT] [TU , TU +] 8, 9 [CH , CH +] [2] b The file numbers are set automatically when the disc is loaded. Copyright-protected files cannot be played. (The "Not Support" is displayed.) Note that depending on the software used for burning and other conditions, some files may not play or display correctly.

When "Disc Mode" is selected: "Playing Repeatedly <Repeat playback>" (vpage 14) n Setting random playback MENU/SET [FOLDER MODE] [TIME/DISPLAY] [ENTER/MEMO] [ui o p] "Playing Random Order <Random playback>" (vpage 14) Programmed playback is not possible with MP3/WMA discs. ENGLISH TUNER Playback Tuning in Broadcast Stations Connect the antenna beforehand (vpage 10). About the FM Broadcast Reception Status Display The "ST" indicator lights when receiving stereo broadcasts. Automatically Presetting FM Stations (Auto Preset) Up to 40 stations can be preset. Auto preset is not possible with AM broadcast stations. Getting Started If the signal is weak and stable stereo reception is not possible, select "FM MONO" to receive in monaural. 1 Press band. [TUNER] or <BAND/2> to select the reception FM AUTO FM MONO AM About Switching the Tuning Mode and Preset Mode Use <8/, +/9> to perform the tuning and preset channel operations. Switch to the mode to be operated before operating. GAbout the displayH When FM AUTO is selected "AUTO" is displayed.

When FM MONO is selected "MONO" is displayed. When AM is selected The reception mode is not displayed. n To switch to the preset mode Press <+/9> while pressing <BAND/2>. The "PRESET" indicator flashes for about 5 seconds. Press <8/> while pressing <BAND/2>. The "TUNING" indicator flashes for about 5 seconds. n To switch to the tuning mode 1 2 3 Press MONO". [TUNER] to select "FM AUTO" or "FM Connections Press and hold in MENU/SET. The "AUTO PRESET" is displayed. Setup Press MENU/SET again.

Playback "Search" flashes and auto presetting starts. 2 Use reception band. <8/, +/9> or [TU , TU +] to select the Setting the Timer When a station is received, the "TUNED" indication will light. Broadcast stations whose antenna signal are weak cannot be preset automatically. If you wish to preset such stations, tune them in manually.

n To Cancel Auto Presetting · If the function is set to something other than "TUNER", press [TUNER] to switch the function to "TUNER" (vpage 28 "Auto Function Selector Function"). · The function can also be switched to "TUNER" using SOURCE. Press <BAND/2> or [2]. The "Search" indicator turns off. Other Functions n To Tune Automatically Press and hold in <8/, +/9> or [TU , TU +] to automatically search and tune in broadcast stations.



[You're reading an excerpt. Click here to read official DENON RCD-M37 user guide](http://yourpdfguides.com/dref/2467413)

<http://yourpdfguides.com/dref/2467413>