



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DIGEO MOXI. You'll find the answers to all your questions on the DIGEO MOXI in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DIGEO MOXI
User guide DIGEO MOXI
Operating instructions DIGEO MOXI
Instructions for use DIGEO MOXI
Instruction manual DIGEO MOXI



MOXI™

media center user guide

software version 4.1



[You're reading an excerpt. Click here to read official DIGEO MOXI user guide](http://yourpdfguides.com/dref/2846387)
<http://yourpdfguides.com/dref/2846387>

.....
..... 24 *Playing music* ...

.....
.....
.....
.....

..... 24 *Reading service messages* ...

.....
.....
.....

.. 25 *Playing Moxi games*.....

.....
.....
.....

..... 25 *Changing settings*

.....
.....
.....

..... 29 *Channel List*

.....
.....

..... 30 *Sound Effects*

.....
.....
.....
.....

..... 30 *HDTV Setup*.

.....
.....
.....

..... 30 *Setting standard TV video resolution*

31 *Setting HDTV video resolution*

.....

31 *Widescreen*

.....
.....
.....
.....
.....

..... 32 *Audio Output*

.....
.....
.....

..... 33 *Secondary Audio* .

.....
.....

.....
.....
.....
.. 34 Closed Caption.....

.....
.....
.....
.....
... 34 Skip settings

.....
.....
... 34 PC Link Setup ..

.....
.....
.....
.....

. 35 CD Options

.....
.....
.. 35 Parental Controls...

.....
.....
.....
.....
..... 35 2 © 2006 by Digeo, Inc. All rights reserved. Media Center User Guide i Creating a PIN ...

.....
.....
.....
.....
..... 35 Changing a PIN

.....
.....
... 36 Locking channels or programs by rating. 36 Turning off parental controls .

.....
.....
.....
.....
..... 37 Controlling Pay Per View or On Demand purchases

.....
.....
.....
.....
.. 38 If you forget your PIN ...

.....
.....

.....

.....

.54 Using Windows Media Player 11

.....

...55 Using Windows Media Connect

.....56 Playing shared music or photos....

.....

.....

....57 Getting connected.....

.....

.....

.....

59 Before connecting

.....

.....

.....60 Ventilation requirements ...

.....

.....

....60 Media center information

.....

.....

61 Media center illustrations.....

.....

.....

.....61 Moxi Mate information..

.....

.....

.....62 Moxi Mate illustrations ...

.....

.....

.....62 Available ports...

.....

.....

.....

62 Connecting to the TV and receiver.....

.....

...65 Connecting to the home network.....

.....66 Wired data connection ...

.....

.....

....66 Wireless data connection.....

.....

.....

.....67 Adding components..

.....
.....
.....
.....67 *Troubleshooting.*
.....
.....
.....
.....
.....71 *Media center troubleshooting..*
.....
.....
.....72 *Audio and video problems ..*
.....
.....
.....72 *Remote or front panel control problems .*
73 *Moxi Mate troubleshooting*
.....
.....73 *Power problems ..*
.....
.....
.....
73 *Audio and video problems*
.....
.....74 *Home network troubleshooting...*
.....
.....74 *Moxi remote programming codes ..*
.....77 *TV Codes ...*
.....
.....
.....
.....
.....78 *Audio device codes ...*
.....
.....
.....
.....
.....85 *Specifications*
.....
.....
.....
.....
.....
91 *Media center specifications*
.....
.....92 *Moxi Mate specifications ..*
.....
.....
.....
.....92 *Glossary*
.....

.....

.....

.....

.....

.....

.....

.. 11 Figure 8: The Find & Record card..

.....

.....

.....

.....

.....

.....

12 Figure 9: Entering letters with the remote buttons....

.....

.....

.....

.. 12 Figure 10: Searching for shows by title ...

.....

.....

.....

.....

.....

.....

. 12 Figure 11: Favorites card

.....

.....

.....

.....

.....

.....

.....

. 13 Figure 12: The flip bar

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 13 Figure 13: Playback controls

.....

.....

.....

.....

.....

.....

.....

.....

14 Figure 14: Features of the player bar

.....
.....
.....

.....
.....
.....

.. 14 Figure 15: Program card with the scheduled to record icon

15 Figure 16: Program card icons

.....
.....
.....
.....
.....

.. 15 Figure 17: Program card background colors and icons indicate status...

16 Figure 18: Recording options screen

.....
.....
.....
.....

..... 16 Figure 19: Summary of series recording options ..

.....
.....
.....

... 17 Figure 20: Changing the series priority ..

.....
.....
.....
.....
.....

.. 18 Figure 21: Locking a SuperTicker topic

.....
.....
.....
.....
.....

. 19 Figure 22: Locking a SuperTicker item

.....
.....
.....
.....
.....

. 19 Figure 23: Reading a SuperTicker story

.....
.....
.....
.....

.....
.....

20 *Figure 24: Uploading photos to the media center*

.....
.....
.....

... Figure 25: Browsing photo albums.....

.....
.....
.....

.....
.....
.....

..... Figure 26: Selecting an album to play in Jukebox .

.....
.....
.....
.....

... Figure 27: Adjusting the sound effects volume.....

.....
.....
.....

.....

. Figure 28: Letter box mode on standard (4:3) and widescreen (16:9)

Figure 29: Cropped mode on standard (4:3) and widescreen (16:9)

. Figure 30: Wide mode on standard (4:3) and widescreen (16:9).....

... Figure 31: Changing the audio output

.....
.....
.....

.....
.....
.....

... Figure 32: Enabling or disabling SAP

.....
.....
.....
.....

.....
.....

. Figure 33: Skip settings card

.....
.....
.....
.....
.....

.....
.....
.....

. Figure 34: Controlling movie ratings

.....
.....
.....
.....

.....
.... *Figure 35: The Favorites category with locked programs .*

.....
.....

..... *Figure 36: Disabling parental controls ...*

.....
.....
.....

..... *Figure 37: Setting the relock timer ..*

.....
.....
.....
.....

.... *Figure 38: Relock time*

.....
.....
.....
.....

..... *Figure 39: The Moxi remote..*

.....
.....
.....

.... *Figure 40: Infrared receiver on the media center front panel .*

.....
.....

. *Figure 41: Signal flow from the media center.*



[You're reading an excerpt. Click here to read official DIGEO MOXI user guide](http://yourpdfguides.com/dref/2846387)

<http://yourpdfguides.com/dref/2846387>

.....
.....
.....
.....

. Figure 42: Example of connections between the media center and DVCR....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... Figure 43: IEEE 1394 connector types ...

.....
.....
.....
.....
.....

-- Search two full weeks of guide data, including On Demand and Pay Per View listings, by title, keyword, and category. Category filters -- Browse by category HDTV, movies, sports, kids, news, music, and more. Parental controls -- Block shows by TV rating, movie rating, or channel, and set On Demand and PPV purchase options. Center focus is the active card · Horizontal band with category or filter selections · · Figure 1: Conceptual view of the Moxi Menu
2 Media Center User Guide © 2006 by Digeo, Inc. All rights reserved.

all DVRs were not created equal Introduction Watch and record in high-definition The Moxi service offers robust high definition TV (HDTV) so you can watch and record crystal-clear high definition programming. . . . Full DVR capabilities for HDTV, with Dolby Digital and surround sound decoding. Support for multiple video resolutions including 480i, 480p, 720p, and 1080i. Down-convert HD resolutions to standard definition TV (SDTV). Output options in 16:9 (widescreen) and 4:3 (standard) with DVI-D and component video outputs (in addition to RF, composite, and S-Video connectors). Automatic resolution switching passes through the native resolution of source programming for TVs that support multiple resolutions. Take charge of your TV Digital Video Recording (DVR) allows you to get more from your TV service provider. With Moxi, you can watch TV on your own schedule. Never miss your favorite shows, even if two are on at the same time. . . . Pause and use instant replay on live TV.

Watch one show while recording another, or record two shows while playing back a previously recorded show. Fast-forward and rewind shows, at a variety of speeds. Automatically record the entire season of a favorite series. Enjoy the clarity of high-definition video recordings. 1 · Other great applications On Demand and Pay Per View --The innovative Moxi Menu makes it easy to browse, preview, and purchase On Demand programming. You can surf through On Demand titles in a menu category, or find On Demand titles included within search and browse results alongside Pay Per View, live TV, and recorded show listings, all without digging through a deep menu. Digital photos -- Photos offers the easiest way to import, store, browse, and view family photos on TV. SuperTickerTM -- SuperTicker runs at the bottom of the TV screen and brings you one-touch access to weather, sports, news, and more, without taking you away from your show. Use the remote to see the details behind any headline. © 2006 by Digeo, Inc.

All rights reserved. Media Center User Guide 3 Introduction DVD player -- The on-screen menu for DVDs makes it easy to switch to alternate commentary, language tracks, and subtitles (some models). Games -- Enjoy traditional arcade games such as Mahjong, Video Poker, Slot Machine, and more. Jukebox -- Import music from CDs and then play them through the Moxi Menu. Browse your collection by artist, album, genre, or song.

Shuffle the collection by genre, artist, or album. PC Link -- PC Link allows your media center to access photos and music stored on your networked computers. Any shared media are then available for display or play on the TV and home theater audio system. Using Windows Media Connect 2.0 or later, photos and music files appear in the Photos or Jukebox categories, just like photos and music loaded directly on the media center.

PC Link can connect to your home network through Ethernet or with a wireless Ethernet adapter. Using this guide Each chapter includes a short table of contents at the beginning and a blue box at the end directing you to the next step in the process or further information on recently discussed subjects. At the back of this book there is a glossary and index. Since the Moxi user interface is so intuitive, readers often look to the index to find answers to specific questions. Notes appear throughout this book. The notes have icons to indicate that the subject. ! Notes with a red icon contain cautionary or warning information. Failure to heed this information could lead to damaged or malfunctioning equipment or loss of data. Extend the media center to a second TV The Moxi Mate makes all the features of the media center available to a second TV in the home. Contact your service provider for the availability of the Moxi Mate.

Not all media centers are compatible. Notes with the blue icon contain informative tips or answers to common questions. Notes with the orange icon contain something to try out. When a word is bolded it either refers to an element of the Moxi Menu or a button on the remote or front panel that requires user action.

For example, press the skip button on the remote. 4 Media Center User Guide © 2006 by Digeo, Inc. All rights reserved. all DVRs were not created equal Introduction 1 The next steps To jump right into using Moxi, go to Using Moxi on page 7. To customize Moxi to suit your equipment and configuration, see Changing settings on page 29. See Using and programming the remote on page 41 to learn how to configure the remote for your TV.

Do you have a specific question? Use the Glossary on page 93 and Index on page 97 to find the answer. © 2006 by Digeo, Inc. All rights reserved. Media Center User Guide 5 Introduction 6 Media Center User Guide © 2006 by Digeo, Inc. All rights reserved.

2 Using Moxi Using the remote control

.....
.....
.....
.....
.....
.....
.....
.....

8 Navigating the Moxi Menu

.....
.....
.....
.....
.....
.....
.....
.....

10 Learning about Moxi.....

.....
.....
.....
.....
.....
.....
.....
.....

11 Searching for shows

.....
.....
.....
.....
.....
.....
.....
.....

12 Remembering your favorite channels

.....
.....
.....
.....
.....
.....

..... 13 Using the Moxi Flip Bar

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

. 13 Using the player bar.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.. 14 Recording shows

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 15 Using SuperTickerTM...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 19 Using Photos ..

.....
.....
.....
.....
.....

.....
.....
.....
.....

... 25 © 2006 by Digeo, Inc. All rights reserved. Media Center User Guide 7 Using Moxi This chapter tells you all you need to know to become an expert user of the Moxi Menu. Using the remote control The Moxi remote allows full control of the media center and provides volume controls for your TV or audio receiver. Buttons on the remote are organized by function. Many buttons have multiple functions depending on whether you are in the Moxi Menu, watching fullscreen TV, or using an application such as Jukebox. The primary function of the orange Moxi button is to open and close the Moxi Menu but no matter where you end up in the Moxi Menu, always remember that the Moxi button can get you back to full-screen TV with a couple of presses.

See figure 2 on page 9 for a detailed look at all the buttons and functions. 8 Media Center User Guide © 2006 by Digeo, Inc. All rights reserved. all DVRs were not created equal Using Moxi * locks and unlocks SuperTicker items ticker displays and hides SuperTicker power turns the TV and audio receiver on and off on demand jumps to the On Demand category live TV jumps to full-screen live TV play starts a recorded program, song, or album rew multi-speed rewind for playback (press multiple times to select speed) fwd multi-speed fast forward for playback (press multiple times to select the speed) rec starts a recording stop stops a program, song, or album pause pauses a live or recorded show, song, or album (press pause, then fwd for slow motion) replay jumps back seven seconds, moves the Moxi Menu back one day skip jumps ahead in stored or recorded video, moves the Moxi Menu forward one day info displays additional information about the selected item zoom toggles between an open Moxi Menu and full-screen TV without losing menu position arrow up, down, right use to navigate menus, play games (hold for turbo speed) arrow left exit most menus, navigate menus, play games (hold for turbo speed) OK selects or activates the selected item back jumps back 15 minutes, shows last note page, jumps 30 minutes in the Moxi Menu, or goes to the previous photo next jumps back 15 minutes, shows last note page, jumps 30 minutes in the Moxi Menu, or goes to the next photo MOXI opens and closes the Moxi Menu from most places (two presses might be required) vol adjusts the audio volume on the TV or audio device mute toggles sound on and off jump goes to the last viewed channel ch changes channels or pages through vertical menus (hold for turbo speed) 2 number keys tune directly to channels, enter text in menus, make choices in games 1 press twice to backspace during text entry 0 press twice to add a space during text entry clear deletes all entered text, deletes shows from Recorded TV, and dismisses the Moxi Menu and Flip Bar enter applies numeric or text entries Figure 2: The Moxi remote control © 2006 by Digeo, Inc.



[You're reading an excerpt. Click here to read official DIGEO MOXI user guide](http://yourpdfguides.com/dref/2846387)
<http://yourpdfguides.com/dref/2846387>

All rights reserved. Media Center User Guide 9 Using Moxi Navigating the Moxi Menu The Moxi Menu works by filtering TV programs and features into categories such as Channels, Movies, Sports, Kids, and more. These category cards appear in the horizontal band. The vertical band contains the list of choices for that category. The O.C.

62 6:33 4. 5. When you find a show to watch press OK and the action menu appears (see figure 4). Press OK again to watch the show. Channels The Office 5 9:30 - 10:00 PM Love, Inc.

Smallville Survivor I Shouldn't Be Alive Mini TV window record series record once watch close see all times Action menu choices change depending on your activity Figure 4: Channels list action menu Coming Up 8:40 My name Is Earl 9:30 The Office 10:00 ER TV-14, repeat Channels Will & Grace 5 8:00 - 8:40 PM Dog Whisperer, Change Time Slot The American Inventor On Demand Using Change Time Slot The Change Time Slot card appears in most categories and includes a menu that allows you to scroll to a specific time (see figure 5). Use the right arrow to highlight the menu, and then choose the time. What happened to Baby Gin? Vince's plans to move into a brownstone with Will. Coming Up menu Show synopsis and rating Figure 3: Channels list in the Moxi Menu 1. 2.

3. Press the orange Moxi button on the remote to open the Moxi Menu. The Channels category card is in center focus (see figure 3). Use the up and down arrow keys on the remote to scroll vertically. Press the right arrow key once to move to the Coming Up menu, and then scroll vertically to see what is showing later on that channel. Figure 5: Change Time Slot card 10 Media Center User Guide © 2006 by Digeo, Inc. All rights reserved. all DVRs were not created equal Alternatively, change the time slot by using the remote (see figure 6). Advances the category schedule 30 minutes. Goes back 30 minutes (if you are viewing future listings).

Advances the category schedule 24 hours. Goes back 24 hours (if you are viewing future listings). One press returns the schedule to the current time. Figure 6: Change Time Slot remote button functions Using Moxi Understanding the storage meter The Storage & Stats card in the About Moxi category provides a disk space meter that indicates how much hard drive space is in use. If an external hard drive is connected, the media center adjusts the meter to account for the extra space. This meter only provides a general idea of how much more you can record. The exact space for future recordings depends upon the type of recording (HD or SD), the broadcasting station, and whether or not any stored programs are eligible for deletion. 2 Software version and other details The Storage & Stats card in the About Moxi category lists information that may be helpful during a service call. Software version -- the current version of the Moxi software running on the media center Box ID -- serial number or hardware device ID (HDID) IP address -- a numerical address that identifies a specific location or computer on the Internet MAC address -- Media Access Control address is a unique number assigned to a media center The date of the most recent updates for account settings, entitlements, and EPG data Learning about Moxi The About Moxi category offers several helpful tips and a welcome movie that provides an overview of the media center. About Moxi Figure 7: The About Moxi card © 2006 by Digeo, Inc.

All rights reserved. Media Center User Guide 11 Using Moxi Searching for shows There are many ways to find shows. Besides channel or menu surfing, you can search by title, keyword, or by category. Use either the arrow and OK buttons..

. or the number buttons to enter letters. Press twice to add a space Press twice to backspace Searching by title or keyword 1. In the Moxi Menu, scroll to the Find & Record category (see figure 8). Find & Record Figure 8: The Find & Record card Press to clear the entire entry Figure 9: Entering letters with the remote buttons 2. Choose By Title or By Keyword, and then enter the search word. Use the arrow keys to highlight a letter, and then press OK to enter it. Alternatively, use the number keys as you would when entering letters on a telephone or writing a mobile phone text message (see figure 9 and figure 10). Press the left arrow key on the remote to view the results. Select a show, and then press OK to open the action menu. When searching By Title, the results list sorts as you type. When searching By Keyword, the results appear only after you use the left arrow to view the results.

TV Find by Title C L O S E 17 Results 43 LET BACKSPACE 9:05 Scheduled Let It Be Meto Record Free Series Options Let It Ride Lethal Weapon Canceled & Deleted 3. 4. Lethal Weapon 4 Let's Cook By Title Let's Talk Scarlet Letter, The By Keyword K E Y B O A R D ...David Letterman By Category A E I M Q U Y Z 6 B F J N R V Z 3 7 D C H G L K P O Channels T S X W 1 0 5 4 9 8 Ticke ...David Letterman SPACE Figure 10: Searching for shows by title 12 Media Center User Guide © 2006 by Digeo, Inc. All rights reserved.

all DVRs were not created equal Using Moxi Searching by category The search by category method organizes shows scheduled in the next 24 hours into category or genre filters such as movies, drama, comedy, and so on. Some categories include a card, such as more movies that shows additional matches for the next two weeks or so. Shows may appear in more than one genre. Using the Moxi Flip Bar While watching full-screen TV, press any arrow, the OK button, or a enter a channel number and the flip bar displays. The flip bar provides many of the same functions as the Channels card in the Moxi Menu (see figure 12).

2 Remembering your favorite channels The Moxi Menu automatically builds a list of the 15 channels you watch most frequently and stores them in the Favorites category (see figure 11). Favorites are compiled separately for the Moxi Mate and media center. Favorite channels Figure 11: Favorites card 42 3:08 PM T00NP Fosters Home for Imagi...

TV - Y7 4:00 Codename: Kids Next ... 4:30 Zatch Bell 5:00 Pokémon 3:00 - 3:30 PM Figure 12: The flip bar The favorites list builds from channels that appear in the Channels category and excludes any channels blocked by parental controls. · Delete a single channel at a time by selecting the channel, and then choosing remove channel, or by pressing the clear button on the remote. Clear the entire favorites list by selecting the Options card (you might need to scroll down to see it), and then choosing clear all. The flip bar lets you access controls while scaling the video slightly. Information is shown about the current show and upcoming programs. · · · Use the up and down arrows to see what is on other channels.



[You're reading an excerpt. Click here to read official DIGEO MOXI user guide](http://yourpdfguides.com/dref/2846387)

<http://yourpdfguides.com/dref/2846387>

Press the right arrow, and scroll down to see what is on later.

Press OK to open the action menu for the selected show. · © 2006 by Digeo, Inc. All rights reserved. Media Center User Guide 13 Using Moxi Using the player bar The player bar appears whenever you press a playback control button (see figure 13) and provides information about the duration of the program and your current playback state (see figure 14). never less than 30 minutes (10 minutes for HDTV). When you change channels, temporary memory may be cleared. Live program Time the show began Current time or location Stored in temporary memory 1:00 Player control state 1:57 Time the show ends 2:00 Recorded program Figure 13: Playback controls Start of the show Current time or location The player bar shows you the program begin and end time (or the duration of a recorded program), the current time, and the amount of the program stored in temporary memory. The playing state of the program is shown (rewind, fast-forward, pause, slow-motion, play, or recording). The amount stored in memory is shown in blue. To activate slow motion press pause, and then press the fastforward button once.

0:00 0:17 Duration of the show Player control state 2:00 Figure 14: Features of the player bar When you start watching a show, the media center begins storing it in temporary memory. The amount of temporary memory varies, but is If you are watching a live program, you can use the playback controls, such as rewind or replay, on any portion of the show stored in temporary memory. To record it along with the remainder of the show, press rec, and then press OK.

14 Media Center User Guide © 2006 by Digeo, Inc. All rights reserved.

all DVRs were not created equal Using Moxi Recording shows To schedule a recording, highlight it in the Moxi Menu, and then press the rec button (or simply press rec if you are already watching the show). Alternatively, press OK, and then choose one of the following recording options: · · · Record once -- To record only the current episode of the show. Record series -- To record this show every time it airs on the current channel. See all times -- To see other times the show will air in the future. This is helpful if you missed part of a program but want to record the entire program.

You can then schedule a recording from the search results. Understanding the program card icons and colors Program card icons appear in the upper right of a show's card in the Moxi Menu and let you know the status of a recorded show or scheduled recording (see figure 16). The show is scheduled to be recorded. The media center is recording the show right now. The show is recorded and can only be deleted manually. The show is recorded and may be deleted when space is needed for newer shows. Figure 16: Program card icons 2 Once a recording is scheduled, a blue circle icon appears on the program card (see figure 15). To Record Sun, 8/27 Formula One Racing 33 4:30 - 7:00 AM Figure 15: Program card with the scheduled to record icon © 2006 by Digeo, Inc. All rights reserved. Media Center User Guide 15 Using Moxi The background color of a program card indicates whether the show is on now, in the future, recorded, or being recorded (see figure 17).

Recording options To change recording options when the scheduled show is in center focus, press OK, and then choose recording options from the options list. The menu summarizes the current options, which you can then modify (see figure 18). The O.C. 13 1:48 Fishing With Greg... Premiership Soccer Formula One Racing Golf Shows with the brown background and exclamation point or square are recorded. Shows with the recording icon are being recorded now. Shows with a blue background are on now.

Shows with a gray background are future programs. If they are scheduled to be recorded, the open circle icon appears. Grey's Inc. Love, Anatomy 104 Smallville 8/31 8:00 - 9:00 PM Survivor Options for this recording: I Shouldn't Be Alive Start: on time Stop: on time Channels Keep: 2 days Set Relock Timer

Figure 17: Program card background colors and icons indicate status Select an option to change it. Dog Whisperer, Change Time Slot The American Inventor On Demand stop Coming Up reeries record once start 8:40 My name Is Earl watch keep 9:30 The Office 10:00 ER close see all times get series Finding a previously scheduled recording To find a specific show you already scheduled to record, go to the Find & Record category.

You can use one of the search features or open the Scheduled to Record card. A listing of all scheduled recordings in the next two weeks appears. Figure 18: Recording options screen You can change the start, stop, and keep settings or choose to record the series. · · Stop: The default setting is on time. You can choose to stop the recording up to five minutes early or up to 90 minutes late.

Start: The default setting is on time. You can choose to start the recording up to five minutes early or late. 16 Media Center User Guide © 2006 by Digeo, Inc. All rights reserved. all DVRs were not created equal · Keep: The default setting is two days, which means the program is eligible for deletion after two days, but not deleted until space is needed for new recordings. You can choose to keep the program protected until space is needed, up to four days, or until you delete it manually. Close: This closes the menu and saves any changes you made. You can press the left arrow to close and exit most menus. The O.C.

Using Moxi #4 Monster Garage Love, Inc. Series Survivor Options for this series recording: I Shouldn't Be Alive Start: on time Stop: on time Channels Keep: 2 days Episode Limit: 2 Set Relock Timer Accept: first-run only Timeslots: All Select an option to change it. Dog Whisperer, Change Time Slot The American Inventor On Demand 38 Smallville 13 1:45 · 2 start Coming Up reeries record once stop 8:40 My name Is Earl watch keep 9:30 The Office episode limit 10:00 ER close see all times timeslots · Get series or series options This selection opens the series options menu. For more information on controlling series recordings, see Recording series, below. 5. Figure 19: Summary of series recording options Recording series The record series option is available from the action menu anytime you select a series episode in the Moxi Menu. If you select record series, the media center will record the series according to your settings, which are accessible from any episode, or go to the Find & Record category. 1. 2. 3.

4. Open the Series Options card. Scroll to the series you want to update. Press OK. Select recording options from the menu.

The current options for the series are summarized on the left in figure 19. Select an option to change it. · · Stop: The default setting is on time.



[You're reading an excerpt. Click here to read official DIGEO MOXI user guide](http://yourpdfguides.com/dref/2846387)
<http://yourpdfguides.com/dref/2846387>

You can stop the recording up to five minutes early or up to 90 minutes late. Start: The default setting is on time.

You can start the recording up to five minutes early or late. Keep: The default setting is two days, which means the program is eligible for deletion after two days, but it is not deleted until space is needed for new recordings. You can choose to keep the program protected only until space is needed, up to four days, or until you delete it manually. © 2006 by Digeo, Inc. All rights reserved. Media Center User Guide 17 Using Moxi Setting the series priority When you schedule a new series recording, it is automatically added to the bottom of the list of series recordings. The O.C. 23 2:55 · Episode Limit: This sets the maximum number of episodes of the series that the media center will record. If the maximum is reached, new recordings of the series replace the oldest recording of the series.

The default setting is five but this can be changed to any number between one and five. You can also remove the limit by selecting unlimited. Accept: The default setting is accept repeats. If you do not want repeat episodes recorded, choose first-run only. Timeslots: The default setting is all. With some shows, you may want to record repeats but you do not want to record all the repeats. For example, if a show airs several times a day, or if a network runs a marathon, you might only want the shows that air during a specific timeslot. The media center checks to see which timeslots are available and allows you to select a single timeslot or set it to all to record every episode that meets your other criteria. Priority: By default, new series recordings are added to the bottom of the list of series recordings. Series priority only matters when more than two series recordings are scheduled for the same time slot.

See Setting the series priority for more information. #17 Deadliest Catch Love, Inc. Smallville 38 Series Survivor 9 World Rally Championship 10 UEFA Champions League Soccer I Shouldn't Be Alive 11 Rides 12 Channels Inside Grand Prix 13 Victory By Design 14 Bicycle Racing Set Relock Timer 15 Survivorman 16 Dirty Jobs 17 Deadliest Catch Dog Whisperer, Change Time Slot The American Inventor On Demand · · record7series Coming Up record once 6 8:40 My name Is Earl watch 5 9:30 The Office 4 10:00 ER close see all times 3 · Figure 20: Changing the series priority If more than two series recordings are scheduled for the same time on the same day, the media center checks the order in the priority list and only records the two programs with the higher priority. For example, if there are series recordings set for Thursday evening with series priority ranks of 4, 9, and 23, all in the 9:00 PM timeslot, only the series with ranks of 4 and 9 are recorded. 18 Media Center User Guide © 2006 by Digeo, Inc.

All rights reserved. all DVRs were not created equal To change the series priority: 1. Select recording options, and then series options from the action menu of any scheduled or recorded series recording card or go to the Series Options card within the Find & Record category. Choose priority or change priority, depending on the menu. The menu displays a numbered list of stored series.

Select a series if one is not already selected. Use the up or down arrows to place the series (see figure 20 on page 18). close lock item Using Moxi 2. 3. 4. 2 lock topic more info Using SuperTicker™ When activated, SuperTicker displays up-to-date news headlines, weather forecasts, sports scores, and stock market updates. To open or close SuperTicker, press the ticker button near the top of the remote. SuperTicker automatically cycles through all headlines in one topic, and then goes to the next topic. Sports scores are delayed approximately 15 minutes. Stock market index numbers are delayed approximately 20 minutes.

· · Missing boy in Colorado found alive after 4 days Figure 21: Locking a SuperTicker topic When a topic is locked, the arrows at the sides of the screen change to red and SuperTicker only scrolls through that topic. When an item is locked, the left and right arrows turn red along with the up and down arrows and SuperTicker is locked on that item (see figure 22). Missing boy in Colorado found alive after 4 days Limiting headlines to one topic or item 1. 2. 3. Use the arrow keys to scroll to a topic or item. Press OK. Choose lock topic or lock item (see figure 21). Figure 22: Locking a SuperTicker item To toggle between locking and unlocking SuperTicker, press . © 2006 by Digeo, Inc.

All rights reserved. Media Center User Guide 19 Using Moxi Reading the whole story All headlines have a story behind them. To read the story, press info on the remote. Use the next and back buttons to page through the story. NEWS Missing boy in Colorado found alive after 4 days Uploading photos 1.

Attach a memory card reader to a USB port on the media center. The rear ports are USB 2.0 and significantly faster than the front USB ports. Insert the memory card containing the photos into the card reader. In the Photos category, choose load album.

The media center skips any photos larger than 10 MB. 2. 3. CANON CITY, Colo. -- Years from now, 8-year-old Evan Thompson will have quite a story to tell.

On his first camping trip over the weekend, he vanished for four days. Lost, he wandered without food and water. He lock item poked at ant hills, slept beneath trees and hid in lock topic caves while nearly 100 rescuers more info searched for him. close 1 of found alive after 4 days next Missing boy in Colorado2 4. close The media center uses a reserved partition of the hard drive for photos and music so uploading photos does not decrease the amount of TV you can record.

The media center shows you how much of the dedicated space you are using with the Media Storage Capacity graph (see figure 24). a. b. If you have room for the new album, continue to Step 5. Otherwise, choose no, close, and then delete an older album before uploading a new one. Figure 23: Reading a SuperTicker story Using Photos You can load hundreds of digital photos on your media center and then play them back as slideshows on your TV. The media center can also connect to your networked computer running Windows Media Connect and stream photos over your home network. To learn more about connecting to your PC, see Enabling PC Link on page 53. 5. Choose yes, upload to confirm.

The media center creates a new album, labels it with the current date, and copies the photos stored on the memory card. 20 Media Center User Guide © 2006 by Digeo, Inc. All rights reserved. all DVRs were not created equal Using Moxi Would you like to add new photos now? Please connect your memory card reader and insert your memory card. All Channels your new photos will be saved to a new album labeled with today's date.

re record once no, close watch yes, upload close see all times 9/10/06 7/29/06 6/08/06 2 12 Photos To delete or rotate this photo, press OK.



[You're reading an excerpt. Click here to read official DIGEO MOXI user guide](http://yourpdfguides.com/dref/2846387)

<http://yourpdfguides.com/dref/2846387>

Photos 01/01/06 Set Relock Timer Media Storage Capacity 3% 7/20/06 default music Load Album 9/16/05 10/29/05 Figure 24: Uploading photos to the media center Figure 25: Browsing photo albums Viewing photos In the Photos category, scroll to the album you want to play, and then choose an option. Photos are shown at the highest allowed resolution. (See HDTV Setup on page 30 for more information on setting TV resolutions.) Photos are sized to fit the screen without stretching them (the aspect ratio remains correct).

· Play slideshow -- Plays all photos in the selected album. During the slideshow, each photo appears for about seven seconds. You may use the playback controls to manually control the slideshow. The slideshow plays continuously until you press stop. Open album -- Views a single photo within an album. Scroll to the photo, and then press OK. Delete album -- Removes the photo album (there is no undo). · © 2006 by Digeo, Inc. All rights reserved. Media Center User Guide 21 Using Moxi · Slideshow music -- If you have Jukebox, you can select a saved music playlist to accompany the slideshow.

Select slideshow music, and then choose a music playlist. Press fast-forward or rewind to speed up or slow down the slideshow. Press pause to halt the slideshow in the current picture. Press the right arrow, skip, or next to advance to the next photo. Press the left arrow, replay, or back to return to the previous photo. When the flip bar is open, press OK to see editing options for the photo or the album. The info button also opens the editing menu. If you use PC Link, shared media have the link icon in the upper right. To assign your playlist to a photo album, go to the album on your media center. Select slideshow music, then select the playlist you would like to have assigned to it.

While viewing photos in an album or during a slideshow: · · · · Using Media Player Some models of the media center include a DVD player that allows you to watch DVDs or play audio CDs on either the media center or the Moxi Mate, if available. To play a movie: 1. Press the eject button on the media center or, in the Moxi Menu, select the Media Player category, and then choose eject or open tray. Insert the DVD in the tray, and then press the eject button on the media center or, in the Moxi Menu, select the Media Player category, and then choose close tray. The DVD should begin automatically.

If it does not, select the Media Player in the Moxi Menu, press OK, and then select play. 2. 3. Creating a playlist for a photo album with PC Link First you need to create a playlist. On your PC, you can create a playlist using a media player that supports .

m3u (used by various media players) or .wpl (Windows Media Player) playlist file formats. The playlist and its music files must be in folders that are shared through Windows Media Connect to play on your media center. You can also create playlists from music stored locally on your media center by adding the music to a queue and saving that queue as a playlist. Once the DVD is playing, press OK to open the flip bar, and then press OK again to access the DVD controls without interrupting the movie. If the DVD contains rating information, the media center enforces your parental control settings. (To learn more about parental controls, see Parental Controls on page 35.) You can watch the DVD on either the media center or the Moxi Mate, but you cannot watch it simultaneously on both. 22 Media Center User Guide © 2006 by Digeo, Inc. All rights reserved.

all DVRs were not created equal Using Moxi DVD video resolutions Since the native resolution of DVDs is 480i, the media center automatically plays DVDs in either 480p or 480i, depending on your selections in the HDTV Setup category. The media center automatically upconverts to 480p if 480i is not selected in the HDTV Setup category. The DVD player in the media center cannot upconvert to 720p or 1080i or play HD-DVD or Blu-Ray discs. Using Jukebox

Jukebox allows you to play music using your media center, TV, and home theater equipment. If PC Link is enabled (see Enabling PC Link on page 53), you may play music stored on your personal computer. Gnarl Barkley 10:05 2 8 mile David Guetta vs. The Egg Communication Long Gone Before Daylight Cardigans DVD copyrights To protect the copyrights of movie creators, you cannot watch DVDs on a TV connected to the media center with IEEE 1394 or record DVDs to a VCR connected with IEEE 1394. U2 - The Best of 1980 Ciel di Toscana 00:00 10:05 Jukebox/Albums Songs Communication Your're The Storm A Good Horse And You Kissed Me Couldn't Care Less Please Sister Long Gone Before Daylight 61:35 Home MANDY The Essential Bruce Figure 26:

Selecting an album to play in Jukebox The Jukebox category contains a list of your music sorted by album, genre, or artist. To change how the list is displayed: 1. 2.

Select the listing you want from the action menu that appears after choosing Jukebox Options, change view. Press OK. © 2006 by Digeo, Inc. All rights reserved. Media Center User Guide 23 Using Moxi You can also choose to shuffle play all your music, or play it all in order.

(There may be a delay when first playing a large catalog of music via PC Link.) Playing music To play music, scroll to the album, artist, or song, and then press OK. Choose play from the action menu. After a few minutes, a full-screen animated jukebox appears to prevent TV screen burn-in. Loading music If you have a media center with a CD/DVD drive: 1.

2. 3. Press eject on the front panel of the media center or choose eject from the Media Player category. With the label side up, insert the audio CD into the CD/DVD drive. The media center immediately begins playing and importing the audio tracks. Some fairly common albums or new releases may not be recognized and will be shown as "Unknown Album," rather than displaying the album name and track names. This is caused by gaps in thirdparty data. The songs are still imported. Creating a queue 1. 2.

3. 4. Navigate to the album, artist, or song, and then press OK. Choose add to queue from the action menu. Once you add all the songs you want, go to the Queue card, and then press OK. Choose one of the following actions: · · · · Save -- creates a playlist (see Creating a playlist below). Shuffle play -- plays all songs in the queue in random order Close -- exits to the Jukebox category. Clear -- deletes all songs in the queue. Songs shared to the media center via PC Link cannot be added to the queue. The media center uses a partition of the hard drive reserved for photos and music so uploading music does not decrease the amount of TV you can record.

You can change the default behavior when you insert a CD. See CD Options on page 35 for more information. To load music on your computer: 1.



[You're reading an excerpt. Click here to read official DIGEO MOXI user guide](http://yourpdfguides.com/dref/2846387)

<http://yourpdfguides.com/dref/2846387>

2. Load the unencrypted MP3 files on your computer.

Make sure they are stored in a folder shared by Windows Media Connect. Check the Jukebox category in the Moxi Menu for the songs. 24 Media Center User Guide © 2006 by Digeo, Inc. All rights reserved. all DVRs were not created equal Creating a playlist 1.

2. 3. Open the queue card, and then select save. A new action dialog opens and prompts you to enter a name for the playlist. Press the right arrow until save is highlighted, and then press OK. The playlist now appears in the main Jukebox category. Using Moxi Once you have read the message, you can choose to exit the message, mark it as unread, or delete it. Playing Moxi games There are several games available to you in the Games category. Each game includes on-screen playing instructions. The current games include: Slot Machine 2 If you use PC Link, shared songs have the link icon in the upper right when viewed in the Moxi Menu.

Reading service messages Occasionally, your service provider may send service messages directly to your media center. These messages could cover topics such as upcoming software updates, future programming, or anything else related to your use of the media center. When you have a service message, the message light on the front panel of the media center is lit. To read the message: 1. 2. 3. 4. Press the Moxi button to open the Moxi Menu. Scroll to the Service Message category. Use the up or down arrows to select the message, and then press OK to open it.

Use the next and back buttons to page through the message. Solitaire © 2006 by Digeo, Inc. All rights reserved. Media Center User Guide 25 Using Moxi Code Breaker Blockbreaker Mahjong Invasion Wave Bubble Blast Blackjack 26 Media Center User Guide © 2006 by Digeo, Inc. All rights reserved.

all DVRs were not created equal Video Poker Using Moxi 21 Frenzy 2 Bowling Ping Tomato Blast it © 2006 by Digeo, Inc. All rights reserved. Media Center User Guide 27 Using Moxi The next steps To customize Moxi to suit your equipment and configuration, see Changing settings on page 29. See Using and programming the remote on page 41 to learn how to configure the remote for your TV. To set up PC Link, see Enabling PC Link on page 53.

Do you have a specific question? Use the Glossary on page 93 and Index on page 97 to find the answer. 28 Media Center User Guide © 2006 by Digeo, Inc. All rights reserved. 3 Changing settings Channel List.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... Sound Effects

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

. HDTV Setup....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
..... *Widescreen.*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
..... *... Audio Output ..*

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....
.....
..... *... Secondary Audio*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
..... *..... Closed Caption..*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....
..... *Skip settings*

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

... *CD Options*..

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.. *Parental Controls*

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 30 30 30 32 33 34 34 34 35 35 © 2006 by Digeo, Inc. All rights reserved. *Media Center User Guide 29 Changing settings* The Settings category is where you customize the default media center settings to suit your needs.

Settings Sound Effects medium low mute close high Channel List The Channel List card displays all available channels. You can modify the list if there are channels you never watch, or do not want to appear in the main Channels category after you press the Moxi button you can modify the list. To modify the list: 1. 2. 3.

To remove (or restore) a channel, go to the Channel List card in the Settings category, if you are not already there. Scroll up or down to the channel you want to remove or restore. Press OK. *Figure 27: Adjusting the sound effects volume. HDTV Setup* The media center automatically adjusts the video output to match the broadcast format and the selections you make in the HDTV Setup card.

The video resolution options are 480i, 480p, 720p, and 1080i. Always use the best resolution allowed by your TV, the video cable between the media center and TV, and the broadcast. See table 1 to learn which resolutions are supported by which cables. That channel no longer appears in the main Channels category or, if you restored it, appears once again. *Sound Effects* You can adjust the volume for those sounds you hear every time you push OK, pause, or most any other button on the remote. You can choose between three volume levels or mute them entirely. 1. 2. To change the sound effects setting, go to the *Sound Effects* card in the Settings category. Choose the desired output setting, and then choose close.

resolution Table 1: Video connections and supported resolutions Connection DVI-D digital video Component video (YPbPr) S-Video Composite video (V) RF (some models) IEEE 1394 (does not show user interface graphics or DVDs) 480i (SD) 480p X X X X X X X X X X 720p X X 1080i X X If your TV is a standard definition (SD) TV, make sure 480i is the only box checked. All other video resolutions will be output at 480i. You can still watch HD channels and they may look considerably better than their SD counterparts. 3 Setting HDTV video resolution The media center outputs video in its native format or adjusts the video to match your video resolution settings. To get the most out of your HDTV, check the manual that came with it. The manual specifies which video resolutions the TV can display. Some TVs only display one video resolution while others can show many. 1.

Go to the HDTV Setup card in the Settings category. Check a resolution your TV supports. Once the video switches to the new resolution, choose yes.

Continue selecting each video resolution your TV supports. Choose close.

X X 2. 3. 4. 5. For more information on video cables, see table 4 on page 63.

If you select a video resolution in error and the screen goes blank, do not push any buttons, but wait about thirty seconds for video to come back. If it does not, see No video displayed on page 72 to fix it. © 2006 by Digeo, Inc. All rights reserved. Media Center User Guide 31 Changing settings Widescreen The widescreen settings only take effect if the broadcast is presented in 16:9, or widescreen, format. Letter box -- Shrinks a widescreen picture to fill the screen and puts black or gray bars at the top and bottom of the screen. This is the best choice if you have a standard TV. Wide mode -- Horizontally squeezes widescreen video (16:9) to fit a standard TV (4:3). Choose this if you have a TV capable of showing widescreen programs correctly (in the original 16:9 aspect ratio). Figure 30: Wide mode on standard (4:3) and widescreen (16:9) Figure 28: Letter box mode on standard (4:3) and widescreen (16:9) Each setting affects the aspect ratio of the show on your TV differently and could even have a different effect on the commercials airing during a show.

You may have to experiment to find the best setting for your TV and viewing habits. Some TVs have built-in widescreen settings. Check the user guide that came with your TV for more information.



[You're reading an excerpt. Click here to read official DIGEO MOXI user guide](http://yourpdfguides.com/dref/2846387)

<http://yourpdfguides.com/dref/2846387>

Cropped -- Fills the entire screen with the picture by cropping out the left and right edges of the picture. This is an alternative setting for standard TVs. To use Moxi to change the widescreen settings 1. 2. Go to the Widescreen card in the Settings category. Choose the desired output setting, and then choose close.

Figure 29: Cropped mode on standard (4:3) and widescreen (16:9) 32 Media Center User Guide © 2006 by Digeo, Inc.

All rights reserved. all DVRs were not created equal Changing settings Audio Output 10 3:55 Change the audio output type to match your audio connection and equipment (see table 2). Table 2: Audio connections and selections Audio Output If you use a S/PDIF output to a Dolby Digital receiver or amplifier, choose dolby digital (system or game soun effects won't play when tuned to Dolby Digital Channels programming). If you use audio L R outputs (red and white connectors), choose stereo. If you use the RF "To TV" output (coax cable) to your TV, or if you use audio L or 1 of 2 next 3 record series close record once dolby digital watch stereo close mono see all times Audio connection S/PDIF (coaxial or optical) RCA (red and white) RF (some models) Preferred selection Dolby Digital Stereo Mono Set Relock Timer Figure 31: Changing the audio output The media center can output sound in Dolby Digital, stereo, or mono.

1. 2. To change the audio setting, go to the Audio Output card in the Settings category. Choose the desired output setting, and then choose close. System and game sound effects do not play when audio output is set to Dolby Digital.

© 2006 by Digeo, Inc. All rights reserved. Media Center User Guide 33 Changing settings Secondary Audio When you watch a TV that includes a secondary audio program (SAP), usually in a different language, the media center can pass that secondary audio stream to your TV or audio receiver. 1. 2. 3. 4. To enable or disable SAP, go to the SAP card in the Settings category. Choose enable (or disable), and then chose close. Change to the channel carrying the secondary audio stream.

To hear secondary audio on digital channels, open the flip bar, press OK, and then choose language from the action menu. The O.C. 11 1:43 Closed Caption Most viewers use these setting to toggle closed captions on or off. There are additional settings that may be used on digital streams that enable them. Skip settings Pressing the skip button on the remote moves you forward in recorded or stored programs in set increments. Change the increment by adjusting the skip options in the Settings category. The skip option is not available in all markets. Secondary Audio Love, Inc. Smallville Enabling SAP Survivor Secondary Audio will play Programs on analog channels after your I Shouldn't Be Alive next channel change.

If the channel does not carry Secondary Audio Programs you will hear the primary Set Relock Timer audio. Choose one of the following: · Coming Up reeries record once disable 8:40 My name Is Earl watch enable 9:30 The Office 10:00 ER close see all times 30 seconds 3 minutes 5 minutes 15 minutes Settings Skip: 30 seconds 15 minutes close 30 seconds 3 minutes 5 minutes Channels · · · Dog Whisperer, Change Time Slot The American Inventor On Demand Figure 32: Enabling or disabling SAP Figure 33: Skip settings card 34 Media Center User Guide © 2006 by Digeo, Inc. All rights reserved. all DVRs were not created equal Changing settings PC Link Setup PC Link connects your media center to home computers. When connected, shared photos and music stored on the computer are listed in the Photos and Jukebox categories in the Moxi Menu, just like photos and music loaded directly on the media center. See Enabling PC Link on page 53 for more information. Parental Controls The parental control functions provided by the media center are robust.

@@@@@Auto import -- automatically imports a CD to Jukebox when inserted. @@@@2. 3.

4. In the Settings category, scroll to the Parental Controls card. Press OK. @@Choose close. © 2006 by Digeo, Inc. @@@2. 3. 4. 5. 6.

In the Settings category, scroll to the Parental Controls card. Press OK. Choose settings. Scroll left to the Change PIN card, and then press OK. Enter the old PIN. @@@@2. 3. 4. In the Settings category, scroll to the Parental Controls card. Press OK.

Choose settings. Choose either TV Ratings, Movie Ratings or Lock By Channel. Each card contains a list of the rating system or a list of channels. Scroll to the format or channel you want to control. @@@@For example, lock TVPG and TV14 and TVMA are also locked. @@@@2. Press OK on any locked program. @@@@2. 3. 4.

5. @@Choose settings. Scroll left to the Set Relock Timer card, and then press OK. Enter your PIN, if prompted. @@@@Love, Inc. @@@@After the chosen length of time, Parental Controls will re-lock automatically. Dog Whisperer, Change Time Slot The American Inventor On Demand When you unlock a show, you open a temporary viewing window. Parental Controls will relock automatically after this time. Controlling Pay Per View or On Demand purchases To restrict the purchase of Pay Per View or On Demand programs, use the same PIN as with parental controls. See Creating a PIN on page 35 for more information on creating a PIN.

1. 2. 3. 4. @@Choose settings. Scroll to the On Demand / Pay Per View Purchases card, and then press OK. Enter your PIN to require that the PIN be entered whenever a purchase is made. record series Coming Up 4 hours record once 8:40 My 2 hours Earl name Is watch 1 hour 9:30 The Office 10:00 ER close see all times 6 hours Figure 37: Setting the relock timer Once set, the Parental Controls card category displays the relock time (see figure 38). If you forget your PIN If you forget your PIN: 1. Call your cable provider.

After the representative resets the PIN, create a new one right away (see Changing a PIN on page 36). Settings Parental Controls: Temporarily Off Will relock at 8:33 PM Figure 38: Relock time 2. 38 Media Center User Guide © 2006 by Digeo, Inc. All rights reserved. all DVRs were not created equal Changing settings 3 The next steps · · · · To learn how to use the Moxi Menu, see Using Moxi on page 7.

See Using and programming the remote on page 41 to learn how to configure the remote for your TV. To set up PC Link, see Enabling PC Link on page 53. For help, see Troubleshooting on page 71. Do you have a specific question? Use the Glossary on page 93 and Index on page 97 to find the answer. © 2006 by Digeo, Inc.

All rights reserved. Media Center User Guide 39 Changing settings 40 Media Center User Guide © 2006 by Digeo, Inc. All rights reserved. 4 Using and programming the remote Functions of the Moxi remote

.....
.....
.....
.....
.....
.....
.....
.....
.....

Media Center User Guide 41 Using and programming the remote This chapter provides information about remote functions and programming. Functions of the Moxi remote The Moxi remote operates the media center, and--once programmed--will simultaneously control the power, volume, and mute functions of your TV or audio receiver. Your cable operator may supply a different remote. If your remote does not look like the one pictured in figure 39 on page 43, refer to the information provided with that remote for programming instructions.

When replacing batteries, use only high quality, non-corrosive batteries designed for use in electronic equipment. Multi-function buttons Some buttons have different functions depending on what application you are using, whether you are watching live TV, or navigating the Moxi Menu. For example, the ch+ button pages through the channels category in the Moxi Menu but opens the flip bar and switches to the next channel while watching live TV. See figure 39 on page 43 for details on all the buttons and functions. 42 Media Center User Guide © 2006 by Digeo, Inc.

All rights reserved. all DVRs were not created equal Using and programming the remote * locks and unlocks SuperTicker items ticker displays and hides SuperTicker power turns the TV and audio receiver on and off on demand jumps to the On Demand category live TV jumps to full-screen live TV play starts a recorded program, song, or album rew multi-speed rewind for playback (press multiple times to select speed) fwd multi-speed fast forward for playback (press multiple times to select the speed) rec starts a recording stop stops a program, song, or album pause pauses a live or recorded show, song, or album (press pause, then fwd for slow motion) replay jumps back seven seconds, moves the Moxi Menu back one day skip jumps ahead in stored or recorded video, moves the Moxi Menu forward one day info displays additional information about the selected item zoom toggles between an open Moxi Menu and full-screen TV without losing menu position arrow up, down, right use to navigate menus, play games (hold for turbo speed) arrow left exit most menus, navigate menus, play games (hold for turbo speed) OK selects or activates the selected item back jumps back 15 minutes, shows last note page, jumps 30 minutes in the Moxi Menu, or goes to the previous photo next jumps back 15 minutes, shows last note page, jumps 30 minutes in the Moxi Menu, or goes to the next photo MOXI opens and closes the Moxi Menu from most places (two presses might be required) vol adjusts the audio volume on the TV or audio device mute toggles sound on and off jump goes to the last viewed channel ch changes channels or pages through vertical menus (hold for turbo speed) 4 number keys tune directly to channels, enter text in menus, make choices in games 1 press twice to backspace during text entry 0 press twice to add a space during text entry clear deletes all entered text, deletes shows from Recorded TV, and dismisses the Moxi Menu and Flip Bar enter applies numeric or text entries Figure 39: The Moxi remote © 2006 by Digeo, Inc. All rights reserved. Media Center User Guide 43 Using and programming the remote Programming the remote Before you begin, find the codes for your TV from the table starting on page 78. Write it here: _____

_____ Programming with codes Follow these steps to program the remote to control TV power and volume. Some older devices may not be supported. If the device fails to respond to any code, use its original remote to control it. 1. Turn on the TV or audio device you want to control. On the Moxi remote, press and hold the Moxi and OK buttons simultaneously until the LED at the top of the remote blinks twice.

Using the number buttons on the remote, enter one of the codes for the TV. When you enter the correct code, the LED blinks twice. If it blinks once, the code was invalid--try another code. Press the Power button on the remote. If the TV does not respond, repeat steps 2 and 3 using another listed code. Repeat until successful, or use Programming by search on page 45. To program the remote to control TV power plus power and volume for an audio device, turn on the audio device you want to control. Repeat Step 3 using the code for the audio device. Press the Power button on the remote. If you programmed two devices, both turn off.

If the TV or audio device does not respond, repeat steps 2 and 3 using another listed code. Repeat until successful, or use the Programming by Search procedure. _____ If you have an audio receiver, find the codes in the table starting on page 85. Write it here: _____ 2. 3.

4. _____ Use one of the following procedures: · · Programming with codes Programming by search on page 45 -- use this if your brand is not listed or if the given codes do not work. 5. 6. 7.

8. 9. 44 Media Center User Guide © 2006 by Digeo, Inc. All rights reserved. all DVRs were not created equal Using and programming the remote Programming by search If the TV or audio device is not listed, or the codes listed do not work, try programming by search. Programming by search allows the remote to cycle through codes to find one that works with the TV or audio device. Once programmed with two device codes, the remote controls volume and mute for the second device. Follow these steps to program the remote to control audio device power and volume. Some older devices may not be supported. If the device fails to respond to any code, use its original remote to control it.

4. Press the Mute button. · · If this mutes the device, go to step 5. If this does not mute the device, press the up arrow to advance to the next code, and then press Mute again. Repeat until the device responds. 4 5. Press OK to set the current code and finish. 1. 2. 3.

Turn on the TV or audio device you want the remote to control. On the Moxi remote, press and hold the Moxi and OK buttons simultaneously until the LED at the top of the remote blinks twice. Using the number buttons on the remote, press 9 9 1 0 for the TV, or 9 9 1 1 for the audio device. The LED light blinks twice. To reset the remote to the original factory setting, enter code 9 9 9 9, and then press OK.

© 2006 by Digeo, Inc. All rights reserved. Media Center User Guide 45 Using and programming the remote Infrared emitter When a button on the remote is pressed, the infrared signal is sent to an IR receiver. The receiver then transmits the signal to the IR emitter (IR blaster), which sends commands to electronic components. For the IR emitter to send its signals to the media center, it must have a clear view of the infrared receiver on the front panel of the media center.



[You're reading an excerpt. Click here to read official DIGEO MOXI user guide](http://yourpdfguides.com/dref/2846387)

<http://yourpdfguides.com/dref/2846387>