

You can read the recommendations in the user guide, the technical guide or the installation guide for DREAMGEAR ARCADE FIGHTER MICRO. You'll find the answers to all your questions on the DREAMGEAR ARCADE FIGHTER MICRO in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

> User manual DREAMGEAR ARCADE FIGHTER MICRO User guide DREAMGEAR ARCADE FIGHTER MICRO **Operating instructions DREAMGEAR ARCADE FIGHTER MICRO** Instructions for use DREAMGEAR ARCADE FIGHTER MICRO **Instruction manual DREAMGEAR ARCADE FIGHTER MICRO**

FIGHTER MICRO

Package Contents:

- Arcade Fighter Micro
- · User's Guide/Warranty Card
- Registration Card





HOW TO USE:

- 1. Turn on your PS3.
- . Connect the Arcade Fighter Micro to the PS3 through any available USB port. . The power indicator LED will start to flash.
- Press the Menu button to complete the connection. The power indicator LED will remain solid to notify you which controller you are using.

NOTE: Please check your Game User's Manual for button configuration for

TURBO SETTING:

Turbo Setting is available to use on the following buttons: \Box , \times , \triangle , \bigcirc , R1, R2, L1 and L2,

. Half Auto Turbo Mode: Holding down a button will continuously perform the move associated with that button

To set: Press the Turbo Button and one of the above buttons simultaneously. The Turbo LED will light up when pressed

. Auto Turbo Mode: The move associated with that button set with Turbo would perform continuously until canceled manually

To set: Press the Turbo Button and one of the above buttons simultaneously a second time. The Turbo LED will remain lit.

Canceling Turbo Mode: This will cancel and exit Turbo mode.

To set: Press the Turbo Button and one of the above buttons simultane-

TROUBLESHOOTING:

Problem: The Arcade Fighter Arcade Stick is not syncing to my PS3. Solution: Make sure that the PS3 is on. Make sure that the Arcade Fighter Arcade Stick is inserted into the PS3 properly and securely. Make sure the USB plug is free from debris. Make sure that none of the contacts on both the USB plug and USB port are damaged or compromised.

Problem: The buttons are not configured correctly.

Solution: Please check your Game User's Manual for button configuration.
Also, check the Settings or Options in the Game Menu to change button configuration.





FOR TECHNICAL SUPPORT PLEASE CONTACT: 1-877-999-DREAM or support@dreamgear.net



You're reading an excerpt. Click here to read official DREAMGEAR ARCADE FIGHTER MICRO user guide http://yourpdfguides.com/dref/3254200

Manual abstract:

@@NOTE: Please check your Game User's Manual for button configuration for each game. TURBO SETTING: Turbo Setting is available to use on the following buttons: , , , , , R1, R2, L1 and L2. @@The Turbo LED will light up when pressed. @@@@@Make sure that the Arcade Fighter Arcade Stick is inserted into the PS3 properly and securely. Make sure the USB plug is free from debris. @@.



You're reading an excerpt. Click here to read official DREAMGEAR ARCADE FIGHTER MICRO user guide

http://yourpdfguides.com/dref/3254200