



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DREAMGEAR DGPS3-1339. You'll find the answers to all your questions on the DREAMGEAR DGPS3-1339 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual DREAMGEAR DGPS3-1339**  
**User guide DREAMGEAR DGPS3-1339**  
**Operating instructions DREAMGEAR DGPS3-1339**  
**Instructions for use DREAMGEAR DGPS3-1339**  
**Instruction manual DREAMGEAR DGPS3-1339**



#### GETTING STARTED:

1. Remove all contents from the packaging.
2. Plug the included AC Adapter into the back of the Quad Dock.
3. Place up to 4 PS3 Original or DualShock 3 controllers upside down onto any one of the Quad Dock's USB plugs.
4. The LED indicators will indicate the controllers' position on the Quad Dock. The LED will light up **RED** indicating that the charge cycle has begun. When the charge cycle is complete and the rechargeable battery is fully charged, the LED light will turn **BLUE**.
5. To release the controller, simply pull the controller from the Quad Dock.

#### TROUBLESHOOTING:

**Question:** The LED lights are not lighting up.

**Answer:** Make sure that the AC Adapter is plugged in properly and securely into the Quad Dock.

**Question:** My controller is not charging.

**Answer:** Make sure the controller is inserted properly and securely into the Quad Dock. Make sure the Quad Dock is free from debris. Make sure that none of the contacts on both the controller(s) and the Quad Dock are not damaged or compromised.



FOR TECHNICAL SUPPORT  
PLEASE CONTACT: 1-877-999-DREAM  
or support@dreamgear.net



[You're reading an excerpt. Click here to read official DREAMGEAR DGPS3-1339 user guide](http://yourpdfguides.com/dref/3254143)  
<http://yourpdfguides.com/dref/3254143>

**Manual abstract:**

*Remove all contents from the packaging. 2. Plug the included AC Adapter into the back of the Quad Dock. 3. Place up to 4 PS3 Original or DualShock 3 controllers upside down onto any one of the Quad Dock's USB plugs. 4. @@The LED will light up RED indicating that the charge cycle has begun. @@5. @@TROUBLESHOOTING: Question: The LED lights are not lighting up. @@Question: My controller is not charging. @@Make sure the Quad Dock is free from debris. .*



[You're reading an excerpt. Click here to read official DREAMGEAR DGPS3-1339 user guide](#)

<http://yourpdfguides.com/dref/3254143>