



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DREAMGEAR DGPS3-1349. You'll find the answers to all your questions on the DREAMGEAR DGPS3-1349 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DREAMGEAR DGPS3-1349
User guide DREAMGEAR DGPS3-1349
Operating instructions DREAMGEAR DGPS3-1349
Instructions for use DREAMGEAR DGPS3-1349
Instruction manual DREAMGEAR DGPS3-1349



PACKAGE CONTENTS:

- 1. Type R Controller
- 2. Type R Receiver

SET-UP:

- 1. Open the battery compartment located on the bottom side of the Type R controller. Insert 3 "AAA" batteries. Replace battery compartment cover.
- 2. The Type R controller features an ON/OFF switch located on the bottom side of the controller. Switch the controller to ON.
- 3. With your PlayStation 3 game console powered ON, plug the USB Receiver into your PlayStation 3's USB input #1 (or other, if using multiple controllers). The LED will flash slowly. Press the CONNECT button on the receiver, the LED will flash rapidly.
- 4. Press the MENU button on the Type R controller. The four channel indicators (located above the MENU button) will flash rapidly. Press the MENU button again and the channel will automatically be set. The solid LED indicates the chosen channel.
- 5. To connect multiple controllers, connect each controller separately. First connect player 1's controller and then connect the remaining controllers, one by one.
- 6. During gameplay, you can access the PlayStation 3 menu by holding the MENU button for 3 seconds.

Note: If the controller stops functioning properly, replace the batteries

TURBO FUNCTION:

The Type R controller features a TURBO mode. To activate TURBO, press any button and the TURBO button at the same time to set TURBO to that button. To cancel the TURBO function, repeat this step.

NOTE: The Lava Glow controller is NOT compatible with SIXAXIS game play.

FCC NOTE: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try the following by one of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications made on the system not expressly approved by the manufacturer could void the user's authority to operate equipment. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FOR TECHNICAL SUPPORT
PLEASE CONTACT: 1-877-999-DREAM
or e-mail support@dreamgear.net

dreamGEAR
P.O. BOX 478
Torrance, CA 90508
www.dreamgear.net

TrueSense™ Technology Licensed from Immersion Corporation. Protected by one or more of the following patents:

U.S. Patents: 4823634, 4896554, 5184319, 5185561, 5202260, 5258668, 5389665, 5414337, 5493982, 51 5499382, 5480356, 5531000, 5559412, 5574272, 5589854, 5592401, 5623582, 5629594, 5631861, 5676157, 5691898, 5701140, 5721566, 5742424, 5731804, 5733373, 5738811, 5767889, 5769440, 5780108, 5805140, 5821920, 5825308, 5828197, 5831408, 5844392, 5872438, 5880714, 5889670, 5889672, 5907487, 5929607, 5930741, 5929846, 5956484, 5996113, 5999168, 6015473, 6028975, 6030976, 6030967, 6024876, 6028993, 6027922, 6042555, 6046727, 6050718, 6050905, 6057828, 6059506, 6061004, 6067071, 6078308, 6078876, 6427635, 6088017, 6088019, 6100874, 6101530, 6104158, 6104379, 6104802, 6106201, 6110136, 6123337, 6123285, 6128906, 6131097, 6134506, 6147624, 6148280, 6154198, 6154201, 6161126, 6162190, 6162724, 6169540, 6184868, 6191774, 6195592, 6201533, 6211861, 6215470, 6219032, 6219033, 6232891, 6243078, 6244390, 6252579, 6252583, 6256001, 6259382, 6271828, 6271833, 6275213, 61 6274839, 6281631, 6283331, 6288005, 6292170, 5754023, *R63374, 6292174, 6300936, 6300937, 6300938, 6304091, 6310605, 6317116, 6323837, 6342880, 6343349, 6348911, 6353850, 6353427, 6362272, 6366273, 6374265, 6380225, 6396232, 6403322, 6411276, 6413229, 6434833, 6434836, 6439846, 6428490, 6433771, 6437771, 6448977, 6469692, 6470302, 6486872, 6497672, 6563487, 6564168, 6580417, 6636161, 6636197, 6639581, 6654000, 6651483, 6680729, 6683437, 6686901, 6686911, 6693022, 6693026, 6697043, 6697044, 6697048, 6697748, 6697086, 6703550, 6704001, 6704002, 6704683, 6705831, 6707443, 6715045, 6750877, 6762745, 6781569, Europe: 0843658, 0803114, 0807295, 0847485, 0914889, Australia: 646655, 670211, 671705, 734986, 735467, 762226, 770385, Canada: 2271120, 2139336, 2278726, 2122047, 2167304, 2333206, 2210725, 2075178, 2272379, 2261893, 2267349, 2232809, France: 852778 (EP), 609383 (EP), 00101312 (Germany: 29923324, 29922985, 300231643 (EP), 69607189 (EP), 29923023, 20014425, 30021536, 30102767, 30080209, 29923933, 20022244, 9, 201800241, 20080263, 20080275, 20080282, Italy: 1315182, 852770 (EP), 609383 (EP), Japan: 3084433, 3085481, 3067091, 200800696, 2000050158, 300436, Korea: 257172, 258353, 252706, Sweden: 519661, Switzerland: 852770 (EP), 609383 (EP), Taiwan: UM-108174, United Kingdom: 23449730, 23466458, 2347990, 2349731, 2349992, 2349413, 23509988, 23872418, 02830716, 02833316, 609383 (EP), 852770 (EP), 2343499



You're reading an excerpt. [Click here to read official DREAMGEAR DGPS3-1349 user guide](http://yourpdfguides.com/dref/3254163)
<http://yourpdfguides.com/dref/3254163>

Manual abstract:

Type R Controller 2. @@To activate TURBO, press any button and the TURBO button at the same time to set TURBO to that button. To cancel the TURBO function, repeat this step. TouchSense® Technology Licensed from Immersion Corporation. Protected by one or more of the following patents: U.S. Patents:

4823634, 4896554, 5184319, 5185561, 5220260, 5235868, 5389865, 5414337, 5459382, B1 5459382, 5482056, 5513100, 5559412, 5576727, 5589854, 5592401, 5623582, 5629594, 5631861, 5676157, 5691898, 5701140, 5721566, 5724264, 5731804, 5734373, 5739811, 5767839, 5769640, 5790108, 5805140, 5821920, 5825308, 5828197, 5831408, 5844392, 5872438, 5880714, 5889670, 5889672, 5907487, 5929607, 5930741, 5929846, 5956484, 5959613, 5999168, 6015473, 6020875, 6020876, 6020967, 6024576, 6028593, 6037927, 6042555, 6046727, 6050718, 6050962, 6057828, 6059506, 6061004, 6067077, 6078308, 6078876, D427635, 6088017, 6088019, 6100874, 6101530, 6104158, 6104379, 6104382, 6106301, 6110130, 6125337, 6125385, 6128006, 6131097, 6134506, 6147674, 6148280, 6154198, 6154201, 6161126, 6162190, 6166723, 6169540, 6184868, 6191774, 6195592, 6201533, 6211861, 6215470, 6219032, 6219033, 6232891, 6243078, 6246390, 6252579, 6252583, 6256011, 6259382, 6271828, 6271833, 6275213 B1, 6278439, 6281651, 6285351, 6288705, 6292170, 5754023, *RE37374, 6292174, 6300936, 6300937, 6300938, 6304091, 6310605, 6317116, 6323837, 6342880, 6343349, 6348911, 6353850, 6353427, 6366272, 6366273, 6374255, 6380925, 6396232, 6400352, 6411276, 6413229, 6424333, 6424356, 6429846, 6428490, 6433771, 6437771, 6448977, 6469692, 6470302, 6486872, 6497672, 6563487, 6564168, 6580417, 6636161, 6636197, 6639581, 6654000, 6661403, 6680729, 6683437, 6686901, 6686911, 6693622, 6693626, 6697043, 6697044, 6697048, 6697748, 6697086, 6703550, 6704001, 6704002, 6704683, 6705871, 6707443, 6715045, 6750877, 6762745, 6781569 Europe: 0843808, 0803114, 0870296, 0804786, 0974889; Australia: 649655, 670311, 671705, 734986, 735467, 762226, 770385; Canada: 2271129, 2139336, 2278726, 2122047, 2167304, 2233206, 2210725, 2075178, 2272379, 2261893, 2287349, 2223289; France: 852770 (EP), 609363 (EP), 00/01312; Germany: 29923332.4, 29922298.5, P69231634.5 (EP), 69607189 (EP), 29923623.

4, 20014425.1, 20021536.1, 20102767.4, 20080209.7, 29923933, 20022244.

9, 20180024.1, 20080263.1, 20080275.5, 20200955.6; Italy: 1315182, 852770 (EP), 609363 (EP); Japan: 3084433, 3085481, 3069791, 2000-008994, 2000-001158, 3290436; Korea: 257172, 258353, 252706; Sweden: 519661; Switzerland: 852770 (EP), 609363 (EP); Taiwan: UM-108174; United Kingdom: 23449730, 2346455B, 2347990, 2349731, 2346952, 2384613, 2350698B, 2387241B, GB2387218, GB2353116, 609363 (EP), 852770 (EP), 2343499 SET-UP: 1.

@@Insert 3 "AAA" batteries. @@@Switch the controller to ON. 3. @@The LED will flash slowly. Press the CONNECT button on the receiver, the LED will flash rapidly. 4. Press the MENU button on the Type R controller. @@@The solid LED indicates the chosen channel. 5. To connect multiple controllers, connect each controller separately.

First connect player 1's controller and then connect the remaining controllers, one by one. 6. .



[You're reading an excerpt. Click here to read official DREAMGEAR](#)

[DGPS3-1349 user guide](#)

<http://yourpdfguides.com/dref/3254163>